

AP-203H-MNTW Mount Kit

Installation Guide

Package Contents

- AP-203H-MNTW mount plate
- AP-203H-MNTW mount cover
- 6 x #6-32 machine screws
- a security tool
- a short jumper Ethernet cable
- Installation guide (this document)


Introduction

This mount kit can be installed onto the wall, or mounted onto a dual-gang wall-box.

Installing the AP-203H-MNTW Mount Kit to a Wall-box

1. Begin by removing the existing data wall plate (if applicable).

Figure 1 *Removing Wall Plate (Dual-gang Wall-box Shown)*

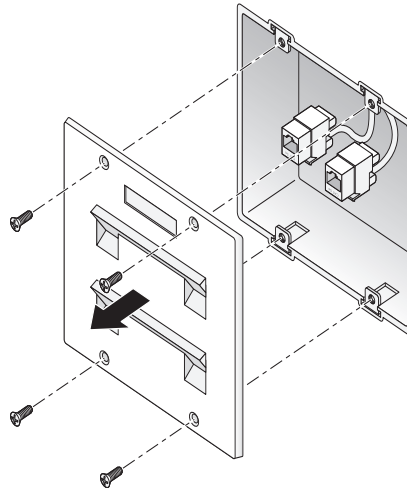


2. Remove any existing RJ45 connectors (typically snap-in) or cut/remove the UTP cable.
3. Use a short Ethernet cable (sold separately) to connect the E0 port to an RJ45 connector, or crimp an RJ45 plug (not supplied) on the cable and insert in the E0 port.
4. Align the four mounting holes of the AP-203H-MNTW mount plate with the holes on the wall-box as shown in [Figure 2](#).
5. Insert the four longer machine screws and tighten them to secure the AP-203H-MNTW mount plate.



The included machine screws may not fit all wall-boxes.




Figure 2 *Securing Mount Plate to Dual-gang Wall-box*

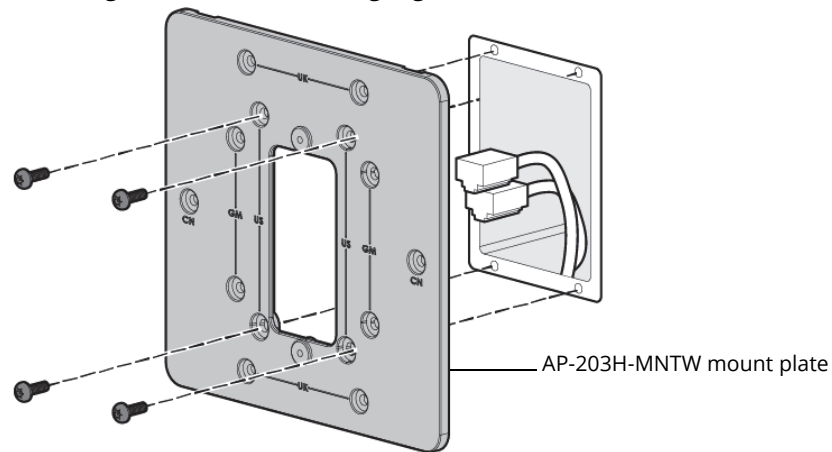


6. Align the AP-203H-MNTW mount cover with the AP-203H-MNTW mount plate. Fit the bottom corners of the cover around the plate, then press the cover onto the plate until all corners are securely clipped into place as shown in [Figure 3](#).

Figure 3 *Securing AP-203H-MNTW Mount Cover onto Mount Plate*

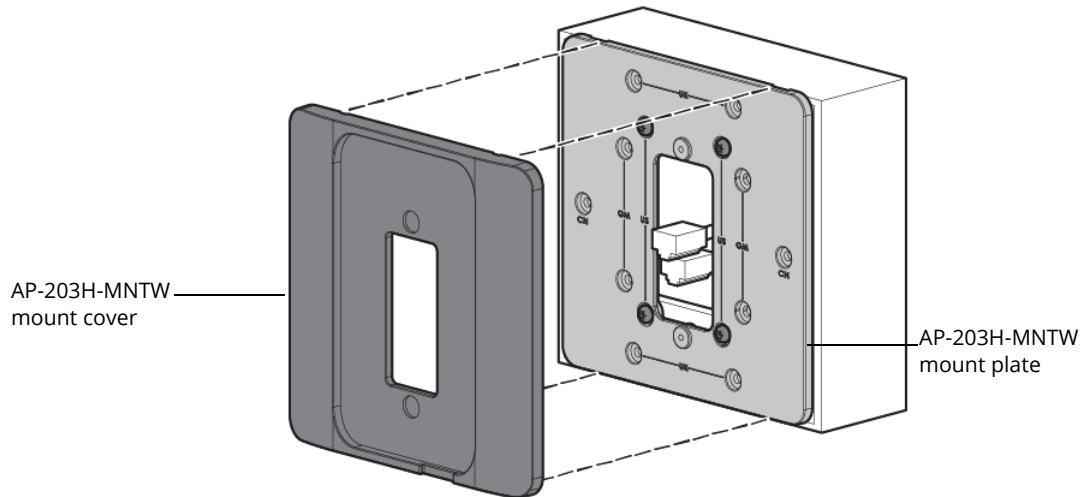

7. Align the two mounting holes of the single-gang mounting bracket (shipped with the AP) with the corresponding mounting holes of the AP-203H-MNTW mount cover as shown in [Figure 4](#)


Figure 4 *Securing the Single-gang Mounting Bracket to AP-203H-MNTW Mount Cover*

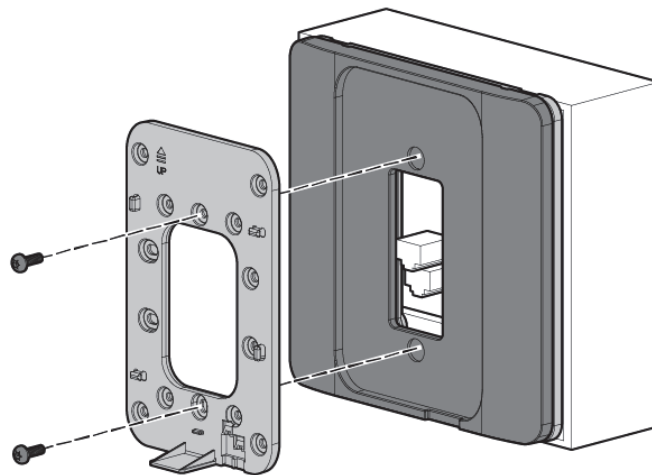

8. Insert the two shorter machine screws and tighten them to secure the single-gang mounting bracket.

9. Connect any required cables to the back of the AP.
10. Align the mounting posts on the back of the AP with the corresponding mounting holes on the single-gang mounting bracket as shown in [Figure 5](#).
11. Push the AP against the holes and downward until the posts engage the slots at the top of the mounting holes.

Figure 5 *Fitting AP to the Single-gang Mounting Bracket*

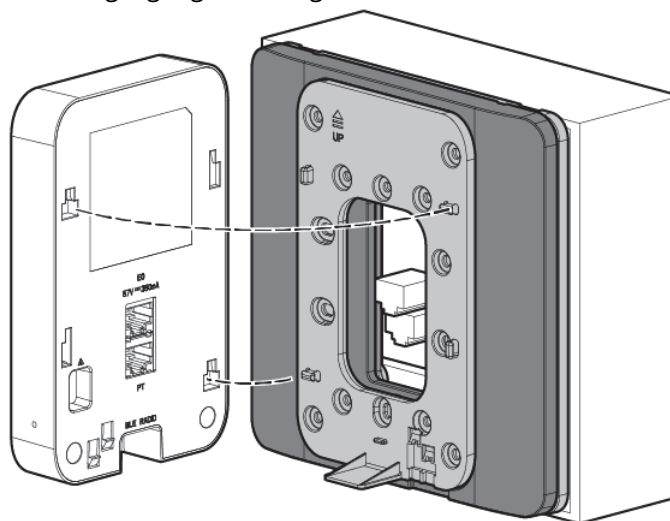

Installing the AP-203H-MNTW Mount Kit to a Wall

1. Put the AP-203H-MNTW mount plate on the installation position against the wall and use it as the template, mark four anchor points on the wall.
2. Once the wall has been marked, remove the AP-203H-MNTW mount plate and use a drill to create four anchor holes on the four markings.
3. Insert the ends of the included jumper Ethernet cable into the E0 and PassThrough (PT) ports on the back of the access point
4. Insert a anchor bolt into each drilled hole. Anchor bolts are not included in the mount kit.
5. Place the AP-203H-MNTW mount plate over the anchor bolts and press the bracket against the wall.
6. Place the washers and nut onto the bolt's threaded end and tighten the nut until the AP-203H-MNTW mount plate is firmly attached to the wall
7. Repeat [step 6-step 11](#) in the previous section [Installing the AP-203H-MNTW Mount Kit to a Wall-box](#).

Removing the AP

1. To remove the AP, begin by inserting the security tool into the hole as shown in [Figure 6](#).
2. Use the security tool to depress the tab on the AP and push the AP up, releasing the AP from the mounting holes on the single-gang mounting bracket.

Figure 6 *Removing AP*

