AOS-CX 10.06 Fundamentals Guide

6300, 6400 Switch Series



Part Number: 5200-7694 Published: November 2020 Edition: 1

© Copyright 2020 Hewlett Packard Enterprise Development LP

Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Acknowledgments

Bluetooth[®] is a trademark owned by its proprietor and used by Hewlett Packard Enterprise under license.

Chapter 1 About this document	
Applicable products	11
Latest version available online	11
Command syntax notation conventions	11
About the examples	12
Identifying switch ports and interfaces	13
Identifying modular switch components	13
Chanter 2 About ACC CV	1.4
Chapter 2 About AUS-CX	
AOS-CX introduction	
AOS-CX system databases.	14
Aruba Network Analytics Engine introduction	15
AOS-CX CLI	15
Aruba CX mobile app	
More information about the Aruba CX mobile app	15
Aruba NetEdit	15
More information about Aruba NetEdit	
Ansible modules	
AOS-CX Web UI	
AOS-CX REST API	16
In-band and out-of-band management	17
SNMP-based management support	17
User accounts	
Chanter 2 Initial configuration	1.0
Chapter 3 Initial configuration	
Initial configuration using ZTP	
Initial configuration using the Aruba CX mobile app	
Troubleshooting Bluetooth connections.	20
Bluetooth connection IP addresses.	
	21

Bluetooth connection IP addresses	
Bluetooth is connected but the switch is not reachable	
Bluetooth is not connected	
Initial configuration using the CLI	
Connecting to the console port	25
Connecting to the management port	
Logging into the switch for the first time	
Setting switch time using the NTP client	
Configuring banners	
Configuring in-band management on a data port	
Using the Web UI	
Configuring the management interface	
Restoring the switch to factory default settings	
Management interface commands	
default-gateway	
ip static	
nameserver	
show interface mgmt	
NTP commands	34
ntp_authentication	34
nep automotoacton	

ntp authentication-key.	35
ntp disable	36
ntp enable.	36
ntp master.	37
ntp server	37
ntp trusted-key	39
ntp vrf.	39
show ntp associations.	. 40
show ntp authentication-keys.	41
show ntp servers	42
show ntp statistics.	42
show ntp status	43
÷	

Chapter 4 Interface configuration	
Configuring a laver 2 interface	
Configuring a layer 3 interface	45
Single source IP address.	
Unsupported transceiver support	46
Interface commands	
allow-unsupported-transceiver	
default interface	
description	
energy-efficient-ethernet	
flow-control.	50
interface	50
interface loopback.	
interface vlan	
ip address.	
ip mtu.	
ip source-interface.	
ipv6 address.	55
ipv6 source-interface.	
13-counters.	
mtu	
routing	
show allow-unsupported-transceiver	
show interface.	
show interface dom	
show interface energy-efficient ethernet	64
show interface transceiver	
show ip interface	
show ip source-interface.	69
show ipv6 interface	70
show ipv6 source-interface	
shutdown	71

Chapter 5 VLANs	
VLAN interfaces	
Access interface	73
Trunk interface	74
Traffic handling summary.	75
Comparing VLAN commands on PVOS, Comware, and AOS-CX	
VLAN numbering	

Configuring VLANs	78
Creating and enabling a VLAN	
Disabling a VLAN	78
Assigning a VLAN to an interface.	78
Assigning a VLAN ID to an access interface	78
Assigning a VLAN ID to a trunk interface	79
Assigning a native VLAN ID to a trunk interface	80
Viewing VLAN configuration information	81
VLAN scenario	82
VLAN commands	85
description	85
name	86
show capacities svi-count	86
show vlan	87
show vlan port	88
show vlan summary	89
show vlan translation	89
shutdown	90
system vlan-client-presence-detect	91
vlan	91
vlan access	92
vlan translate	93
vlan trunk allowed	94
vlan trunk native	95
vlan trunk native tag	96
voice	97

Chapter 6 Configuration and firmware management	. 98
Checkpoints	
Checkpoint types	
Maximum number of checkpoints	
User generated checkpoints.	98
System generated checkpoints.	98
Supported remote file formats	99
Rollback	99
Checkpoint auto mode	99
Testing a switch configuration in checkpoint auto mode	99
Checkpoint commands	100
checkpoint auto	100
checkpoint auto confirm.	101
checkpoint diff	101
checkpoint post-configuration.	103
checkpoint post-configuration timeout	103
checkpoint rename.	104
checkpoint rollback	105
copy checkpoint <i><checkpoint-name> <remote-url></remote-url></checkpoint-name></i>	105
copy checkpoint <i><checkpoint-name></checkpoint-name></i> {running-config startup-	100
config}	106
copy checkpoint <i><checkpoint-name> <storage-url></storage-url></checkpoint-name></i>	107
copy <remote-url> checkpoint <checkpoint-name></checkpoint-name></remote-url>	107
copy <remote-url> {running-config startup-config}</remote-url>	108
copy running-config {startup-config checkpoint <checkpoint-< td=""><td>100</td></checkpoint-<>	100
NAME>}	109
copy {running-config startup-config} <i><remote-url></remote-url></i>	110

copy {running-config startup-config} <storage-url></storage-url>	111
copy startup-config running-config	112
copy <storage-url> running-config</storage-url>	112
erase {checkpoint <checkpoint-name> startup-config all}</checkpoint-name>	114
show checkpoint <checkpoint-name></checkpoint-name>	114
show checkpoint post-configuration.	116
show checkpoint list	116
write memory	117
Boot commands	117
boot fabric-module	117
boot line-module	118
boot management-module	119
boot set-default	121
boot system	121
show boot-history	123
Firmware management commands	125
copy {primary secondary} <remote-url></remote-url>	125
copy {primary secondary} <firmware-filename></firmware-filename>	125
copy primary secondary	126
copy <remote-url></remote-url>	126
copy secondary primary	127
copy <storage-url></storage-url>	128
URL formatting for copy commands	129
TFTP URL	129
SFTP URL	129
USB URL	130

Chapter 7 Dynamic segmentation	
Virtual network based tunneling.	
User-based tunneling	
User-based tunneling commands	
backup-controller ip	
enable.	
ip source-interface.	
papi-security-key.	142
primary-controller ip	143
sac-heartbeat-interval	144
show ip source-interface ubt	144
show capacities ubt	145
show ubt	145
show ubt information	147
show ubt state	148
show ubt statistics	151
show ubt users	155
uac-keepalive-interval	157
und Keeparive interval	159
ubt_cliont_vlon	150
ubt mode wlap-extend	159 150

Chapter 8 SNMP	161
Configuring SNMP	161
SNMP commands.	162
rmon alarm	162

show rmon alarm	163
show snmp agent-port.	165
show snmp community	165
show snmp system.	166
show snmp trap	166
show snmp vrf.	167
show snmpv3 context.	167
show snmpv3 engine-id	168
show snmpv3 security-level.	168
show snmpv3 users	169
snmp-server agent-port	169
snmp-server community	170
snmp-server host	170
snmp-server system-contact.	172
snmp-server system-description.	173
snmp-server system-location.	174
snmp-server vrf	174
snmpv3 context.	175
snmpv3 engine-id.	176
snmpv3 security-level	177
snmpv3 user	178

Chapter 9 Control Plane Policing (CoPP)	180
Configuring CoPP	180
CoPP commands	
Classes of traffic	
apply copp-policy	
class	
clear copp-policy statistics	
copp-policy.	
default-class.	
reset copp-policy.	
show copp-policy.	
show copp-policy factory-default.	
show copp-policy statistics.	

Chapter 10 Aruba Central Integration	
Connecting to Aruba Central.	
Custom CA certificate	
Aruba Central Commands	
aruba-central	
disable.	
enable.	
location-override.	
show aruba-central.	
show running-config current-context.	

Chapter 11 Port filtering commands	197
portfilter.	197
show portfilter	

Chapter 12 DNS	200
DNS client	200
Configuring the DNS client.	
DNS client commands	
ip dns domain-list.	
ip dns domain-name	
ip dns host	
ip dns server address	
show ip dns	

Chapter 13 Device discovery and configuration	207
Device profiles	
Configuring a device profile for LLDP	
Configuring a device profile for CDP.	210
Configuring a device profile for local MAC match.	210
Device profile commands	210
aaa authentication port-access allow-cdp-bpdu	210
aaa authentication port-access allow-lldp-bpdu	212
associate cdp-group	213
associate lldp-group	214
associate mac-group	214
associate role	215
disable	216
enable	216
ignore (for CDP groups).	217
ignore (for LLDP groups).	218
ignore (for MAC groups)	219
mac-group	
match (for CDP groups).	223
match (for LLDP groups).	224
match (for MAC groups)	226
port-access cdp-group	
port-access device-profile	230
port-access device-profile mode block-until-profile-applied	231
port-access lldp-group.	231
show port-access device-profile	232
LLDP	234
LLDP agent	234
LLDP MED support	236
Configuring the LLDP agent	237
LLDP commands.	238
clear lldp neighbors.	238
clear lldp statistics.	238
lldp	238
lldp dot3	239
lldp holdtime.	240
lldp management-ipv4-address	240
lldp management-ipv6-address	241
lldp med	242
lldp med-location.	243
lldp receive	243
lldp reinit	244

lldp) select-tlv	245
lldp	b timer	
lldp	o transmit	
lldp	b txdelay	
show	v lldp configuration	
show	v lldp configuration mgmt	
show	v lldp tlv	
show	v lldp statistics	
show	v lldp statistics mgmt	
show	v lldp neighbor-info	
show	v lldp neighbor-info detail	
show	v lldp neighbor-info mgmt	
show	v lldp local-device	
Cisco Discovery Pr	rotocol (CDP)	
CDP suppor	rt	
CDP comm	ands	
cdp		
clea	ar cdp counters	
clea	ar cdp neighbor-info	
show	v cdp	
show	v cdp neighbor-info	
show	v cdp traffic	

Chapter 14 Zero Touch Provisioning	
ZTP support.	
Setting up ZTP on a trusted network	
ZTP process during switch boot	
ZTP VSF Switchover Support	
ZTP commands	
show ztp information	
ztp force provision	

Chapter 15 Switch system and hardware commands	
bluetooth disable.	
bluetooth enable	
clear events	
clear ip errors	
domain-name	
hostname	
led locator	
module admin-state	
module product-number	
mtrace	
show bluetooth	
show boot-history	
show capacities	
show capacities-status	
show core-dump	
show domain-name	
show environment fan	
show environment led	
show environment power-consumption	
show environment power-supply	

show environment rear-display-module	
show environment temperature	
show events	
show fabric.	301
show hostname	
show images	303
show ip errors	304
show module	305
show running-config	
show running-config current-context.	
show startup-config	
show system.	
show system error-counter-monitor.	314
show system resource-utilization.	
show tech	
show usb	
show usb file-system	
show version	
system resource-utilization poll-interval.	321
top cpu	321
top memory	322
usb	323
usb mount unmount	323

Chapter 16 Support and other resources	
Accessing Aruba Support.	325
Accessing updates.	
Warranty information	
Regulatory information	
Documentation feedback	
Warranty information. Regulatory information Documentation feedback.	

This document describes features of the AOS-CX network operating system. It is intended for administrators responsible for installing, configuring, and managing Aruba switches on a network.

Applicable products

This document applies to the following products:

- Aruba 6300 Switch Series (JL658A, JL659A, JL660A, JL661A, JL662A, JL663A, JL664A, JL665A, JL666A, JL667A, JL668A, JL762A)
- Aruba 6400 Switch Series (JL741A, R0X26A, R0X27A, R0X29A, R0X30A)

Latest version available online

Updates to this document can occur after initial publication. For the latest versions of product documentation, see the links provided in **Support and other resources**.

Command syntax notation conventions

Convention	Usage
example-text	Identifies commands and their options and operands, code examples, filenames, pathnames, and output displayed in a command window. Items that appear like the example text in the previous column are to be entered exactly as shown and are required unless enclosed in brackets ([]).
example-text	In code and screen examples, indicates text entered by a user.
Any of the following:	ldentifies a placeholder—such as a parameter or a variable—that you must substitute with an actual value in a command or in code:
<pre> <example-text> <example-text> </example-text></example-text></pre>	 For output formats where italic text cannot be displayed, variables are enclosed in angle brackets (< >). Substitute the text—including
• example-text	the enclosing angle brackets—with an actual value.
• example-text	• For output formats where italic text can be displayed, variables might or might not be enclosed in angle brackets. Substitute the text including the enclosing angle brackets, if any, with an actual value.
1	Vertical bar. A logical OR that separates multiple items from which you can choose only one.
	Any spaces that are on either side of the vertical bar are included for readability and are not a required part of the command syntax.
-	Table Continued

Chapter 1 About this document

Convention	Usage
{ }	Braces. Indicates that at least one of the enclosed items is required.
[]	Brackets. Indicates that the enclosed item or items are optional.
or	Ellipsis:
	• In code and screen examples, a vertical or horizontal ellipsis indicates an omission of information.
	 In syntax using brackets and braces, an ellipsis indicates items that can be repeated. When an item followed by ellipses is enclosed in brackets, zero or more items can be specified.

About the examples

Examples in this document are representative and might not match your particular switch or environment.

The slot and port numbers in this document are for illustration only and might be unavailable on your switch.

Understanding the CLI prompts

When illustrating the prompts in the command line interface (CLI), this document uses the generic term switch, instead of the host name of the switch. For example:

switch>

The CLI prompt indicates the current command context. For example:

switch>

Indicates the operator command context.

switch#

Indicates the manager command context.

switch(CONTEXT-NAME)#

Indicates the configuration context for a feature. For example:

switch(config-if)#

Identifies the interface context.

Variable information in CLI prompts

In certain configuration contexts, the prompt may include variable information. For example, when in the VLAN configuration context, a VLAN number appears in the prompt:

switch(config-vlan-100)#

When referring to this context, this document uses the syntax:

switch(config-vlan-<VLAN-ID>) #

Where <VLAN-ID> is a variable representing the VLAN number.

Identifying switch ports and interfaces

Physical ports on the switch and their corresponding logical software interfaces are identified using the format:

member/slot/port

On the 6300 Switch Series

- *member*: Member number of the switch in a Virtual Switching Framework (VSF) stack. Range: 1 to 10. The primary switch is always member 1. If the switch is not a member of a VSF stack, then member is 1.
- *slot*: Line module number. Always 1.
- *port*: Physical number of a port on a line module.

For example, the logical interface 1/1/4 in software is associated with physical port 4 in slot 1 on member 1.

On the 6400 Switch Series

- *member*: Always 1. VSF is not supported on this switch.
- *slot*: Specifies physical location of a module in the switch chassis.
 - Management modules are on the front of the switch in slots 1/1 and 1/2.
 - Line modules are on the front of the switch starting in slot 1/3.
- *port*: Physical number of a port on a line module.

For example, the logical interface 1/3/4 in software is associated with physical port 4 in slot 3 on member 1.

Identifying modular switch components

- Power supplies are on the front of the switch behind the bezel above the management modules. Power supplies are labeled in software in the format: *member/power supply*:
 - *member*: 1.
 - *power supply*: 1 to 4.
- Fans are on the rear of the switch and are labeled in software as: *member/tray/fan*:
 - member: 1.
 - *tray*: 1 to 4.
 - *fan*: 1 to 4.
- Fabric modules are not labeled on the switch but are labeled in software in the format: *member/module*:
 - *member*: 1.
 - *member*: 1 or 2.
- The display module on the rear of the switch is not labeled with a member or slot number.

AOS-CX introduction

AOS-CX is a new, modern, fully programmable operating system built using a database-centric design that ensures higher availability and dynamic software process changes for reduced downtime. In addition to robust hardware reliability, the AOS-CX operating system includes additional software elements not available with traditional systems, including:

- Automated visibility to help IT organizations scale: The Aruba Network Analytics Engine allows IT to
 monitor and troubleshoot network, system, application, and security-related issues easily through simple
 scripts. This engine comes with a built-in time series database that enables customers and developers to
 create software modules that allow historical troubleshooting, as well as analysis of historical trends to
 predict and avoid future problems due to scale, security, and performance bottlenecks.
- Programmability simplified: A switch that is running the AOS-CX operating system is fully programmable with a built-in Python interpreter as well as REST-based APIs, allowing easy integration with other devices both on premise and in the cloud. This programmability accelerates IT organization understanding of and response to network issues. The database holds all aspects of the configuration, statistics, and status information in a highly structured and fully defined form.
- Faster resolution with network insights: With legacy switches, IT organizations must troubleshoot problems after the fact, using traditional tools like CLI and SNMP, augmented by separate, expensive monitoring, analytics, and troubleshooting solutions. These capabilities are built in to the AOS-CX operating system and are extensible.
- High availability: For switches that support active and standby management modules, the AOS-CX database can synchronize data between active and standby modules and maintain current configuration and state information during a failover to the standby management module.
- Ease of roll-back to previous configurations: The built-in database acts as a network record, enabling support for multiple configuration checkpoints and the ability to roll back to a previous configuration checkpoint.

AOS-CX system databases

The AOS-CX operating system is a modular, database-centric operating system. Every aspect of the switch configuration and state information is modeled in the AOS-CX switch configuration and state database, including the following:

- Configuration information
- Status of all features
- Statistics

The AOS-CX operating system also includes a time series database, which acts as a built-in network record. The time series database makes the data seamlessly available to Aruba Network Analytics Engine agents that use rules that evaluate network conditions over time. Time-series data about the resources monitored by agents are automatically collected and presented in graphs in the switch Web UI.

Aruba Network Analytics Engine introduction

The Aruba Network Analytics Engine is a first-of-its-kind built-in framework for network assurance and remediation. Combining the full automation and deep visibility capabilities of the AOS-CX operating system, this unique framework enables monitoring, collecting network data, evaluating conditions, and taking corrective actions through simple scripting agents.

This engine is integrated with the AOS-CX system configuration and time series databases, enabling you to examine historical trends and predict future problems due to scale, security, and performance bottlenecks. With that information, you can create software modules that automatically detect such issues and take appropriate actions.

With the faster network insights and automation provided by the Aruba Network Analytics Engine, you can reduce the time spent on manual tasks and address current and future demands driven by Mobility and IoT.

AOS-CX CLI

The AOS-CX CLI is an industry standard text-based command-line interface with hierarchical structure designed to reduce training time and increase productivity in multivendor installations.

The CLI gives you access to the full set of commands for the switch while providing the same password protection that is used in the Web UI. You can use the CLI to configure, manage, and monitor devices running the AOS-CX operating system.

Aruba CX mobile app

The Aruba CX mobile app enables you to use a mobile device to configure or access a supported ArubaOS-CX switch. You can connect to the switch through Bluetooth or Wi-Fi.

You can use this application to do the following:

- Connect to the switch for the first time and configure basic operational settings—all without requiring you to connect a terminal emulator to the console port.
- View and change the configuration of individual switch features or settings.
- Manage the running configuration and startup configuration of the switch, including the following:
 - Transferring files between the switch and your mobile device
 - Sharing configuration files from your mobile device
 - Copying the running configuration to the startup configuration
- Access the switch CLI.

More information about the Aruba CX mobile app

For more information about the Aruba CX mobile app, see:

www.arubanetworks.com/products/networking/switches/cx-mobileapp

Aruba NetEdit

Aruba NetEdit enables the automation of multidevice configuration change workflows without the overhead of programming.

The key capabilities of NetEdit include the following:

- Intelligent configuration with validation for consistency and compliance
- Time savings by simultaneously viewing and editing multiple configurations
- Customized validation tests for corporate compliance and network design
- Automated large-scale configuration deployment without programming
- Ability to track changes to hardware, software, and configurations (whether made through NetEdit or directly on the switch) with automated versioning

More information about Aruba NetEdit

For more information about Aruba NetEdit, search for NetEdit at the following website:

www.hpe.com/support/hpesc

Ansible modules

Ansible is an open-source IT automation platform.

Aruba publishes a set of Ansible configuration management modules designed for switches running AOS-CX software. The modules are available from the following places:

• The arubanetworks.aoscx_role role in the Ansible Galaxy at:

https://galaxy.ansible.com/arubanetworks/aoscx_role

• The aoscx-ansible-role at the following GitHub repository:

https://github.com/aruba/aoscx-ansible-role

AOS-CX Web UI

The Web UI gives you quick and easy visibility into what is happening on your switch, providing faster problem detection, diagnosis, and resolution. The Web UI provides dashboards and views to monitor the status of the switch, including easy to read indicators for: power supply, temperature, fans, CPU use, memory use, log entries, system information, firmware, interfaces, VLANs, and LAGs. In addition, you use the Web UI to access the Network Analytics Engine, run certain diagnostics, and modify some aspects of the switch configuration.

AOS-CX REST API

Switches running the AOS-CX software are fully programmable with a REST (REpresentational State Transfer) API, allowing easy integration with other devices both on premises and in the cloud. This programmability— combined with the Aruba Network Analytics Engine—accelerates network administrator understanding of and response to network issues.

The AOS-CX REST API enables programmatic access to the AOS-CX configuration and state database at the heart of the switch. By using a structured model, changes to the content and formatting of the CLI output do not affect the programs you write. And because the configuration is stored in a structured database instead of a text file, rolling back changes is easier than ever, thus dramatically reducing a risk of downtime and performance issues.

The AOS-CX REST API is a web service that performs operations on switch resources using HTTPS POST, GET, PUT, and DELETE methods.

A switch resource is indicated by its Uniform Resource Identifier (URI). A URI can be made up of several components, including the host name or IP address, port number, the path, and an optional query string. The AOS-CX operating system includes the AOS-CX REST API Reference, which is a web interface based on the Swagger UI. The AOS-CX REST API Reference provides the reference documentation for the REST API, including resources URIs, models, methods, and errors. The AOS-CX REST API Reference shows most of the supported read and write methods for all switch resources.

In-band and out-of-band management

Management communications with a managed switch can be either of the following:

In band

In-band management communications occur through ports on the line modules of the switch, using common communications protocols such as SSH and SNMP.

When you use an in-band management connection, management traffic from that connection uses the same network infrastructure as user data. User data uses the data plane, which is responsible for moving data from source to destination. Management traffic that uses the data plane is more likely to be affected by traffic congestion and other issues affecting the user network.

Out of band

OOBM (out-of-band management) communications occur through a dedicated serial or USB console port or though a dedicated networked management port.

OOBM operates on a management plane that is separate from the data plane used by data traffic on the switch and by in-band management traffic. That separation means that OOBM can continue to function even during periods of traffic congestion, equipment malfunction, or attacks on the network. In addition, it can provide improved switch security: a properly configured switch can limit management access to the management port only, preventing malicious attempts to gain access through the data ports.

Networked OOBM typically occurs on a management network that connects multiple switches. It has the added advantage that it can be done from a central location and does not require an individual physical cable from the management station to the console port of each switch.

SNMP-based management support

The ArubaOS-CX operating system provides SNMP read access to the switch. SNMP support includes support of industry-standard MIB (Management Information Base) plus private extensions, including SNMP events, alarms, history, statistics groups, and a private alarm extension group. SNMP access is disabled by default.

User accounts

To view or change configuration settings on the switch, users must log in with a valid account. Authentication of user accounts can be performed locally on the switch, or by using the services of an external TACACS+ or RADIUS server.

Two types of user accounts are supported:

- Operators: Operators can view configuration settings, but cannot change them. No operator accounts are created by default.
- Administrators: Administrators can view and change configuration settings. A default locally stored administrator account is created with username set to **admin** and no password. You set the administrator account password as part of the initial configuration procedure for the switch.

Perform the initial configuration of a factory default switch using one of the following methods:

- Load a switch configuration using zero-touch provisioning (ZTP). When ZTP is used, the configuration is loaded from a server automatically when the switch booted from the factory default configuration.
- Connect to the switch wirelessly with a mobile device through Bluetooth, and use the Aruba CX Mobile App to deploy an initial configuration from a provided template. The template you choose during the deployment process determines how the management interface is configured. Optionally, as the final deployment step, you can select to import the switch into NetEdit through a WiFI connection to the NetEdit server.

Alternatively, you can use the Aruba CX Mobile App to manually configure switch settings and features for a subset of the features you can configure using the CLI. You can also access the CLI through the mobile application.

- Connect the management port on the switch to your network, and then use SSH client software to reach the switch from a computer connected to the same network. This requires that a DHCP server is installed on the network. Configure switch settings and features by executing CLI commands.
- Connect a computer running terminal emulation software to the console port on the switch. Configure switch settings and features by executing CLI commands.

Initial configuration using ZTP

Zero Touch Provisioning (ZTP) configures a switch automatically from a remote server.

Prerequisites

• The switch must be in the factory default configuration.

Do not change the configuration of the switch from its factory default configuration in any way, including by setting the administrator password.

• Your network administrator or installation site coordinator must provide a Category 6 (Cat6) cable connected to the network that provides access to the servers used for Zero Touch Provisioning (ZTP) operations.

Procedure

1. Connect the network cable to the out-of-band management port on the switch. If your network administrator or installation site coordinator has instructed you to connect network cable to a data port, connect the cable to that data port instead.

See the *Installation Guide* for switch to determine the location of the switch ports.

- 2. If the switch is powered on, power off the switch.
- **3.** Power on the switch. A switch running the factory default configuration attempts the ZTP operation for the first 10 minutes after the switch is powered on. During the ZTP operation, the switch might reboot if a new firmware image is being installed.

Initial configuration using the Aruba CX mobile app

This procedure describes how to use your mobile device to connect to the Bluetooth interface of the switch to connect to the switch for the first time so that you can configure basic operational settings using the Aruba CX mobile app.

Prerequisites

- You have obtained the USB Bluetooth adapter that was shipped with the switch. Information about the make and model of the supported adapter is included in the information about the Aruba CX mobile app in the Apple Store or Google Play.
- The Aruba CX mobile app must be installed on your mobile device.
- Bluetooth must be enabled on your mobile device.
- Your mobile device must be within the communication range of the Bluetooth adapter.
- If you are planning to import the switch into NetEdit, your mobile device must be able to use a Wi-Fi connection—not Bluetooth—to access the NetEdit server.

If your mobile device does not support simultaneous Bluetooth and Wi-Fi connections, you must use the NetEdit interface to import the switch at a later time. You can use the **Devices** tab to display the IP address of the switches you configured using your mobile device.

• The switch must be installed and powered on, with the network operating system boot sequence complete.

For information about installing and powering on the switch, see the *Installation Guide* for the switch.

Because you are using this mobile application to configure the switch through the Bluetooth interface, it is not necessary to connect a console to the switch.

• Bluetooth and USB must be enabled on the switch. On switches shipped from the factory, Bluetooth and USB are enabled by default.

Procedure

1. Install the USB Bluetooth adapter in the USB port of the switch.

For switches that have multiple management modules, you must install the USB Bluetooth adapter in the USB port of the active management module. Typically, the active management module is the module in slot 5. On the 6400, the active management module is typically installed in slot 1. When configuring a stack, a USB Bluetooth adapter must be installed on each 6300 switch in the stack.

Switches shipped from the factory have both USB and Bluetooth enabled by default.

For information about the location of the USB port on the switch, see the *Installation Guide* for the switch.

2. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch model-Serial number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

3. Open the Aruba CX mobile app on your mobile device.



The application attempts to connect to the switch using the switch Bluetooth IP address and the default switch login credentials. The **Home** screen of the application shows the status of the connection to the switch:

- If the login attempt was successful, the Bluetooth icon is displayed and the status message shows the Bluetooth IP address of the switch. In addition, the connection graphic is green. You can continue to the next step.
- If the login attempt was not successful, but a response was received, the Bluetooth icon is displayed, but the status message is: Login Required.

You can continue to the next step. When you tap one of the tiles, you will be prompted for login credentials.

- If the login attempt did not receive a response, the Bluetooth icon is not displayed, and the status message is: No Connection.
- 4. Create the initial switch configuration:
 - You can deploy an initial configuration to the switch. Through this process, you supply the information required by a configuration template that you choose from a list of templates provided by the application. Then you deploy the configuration to the switch and, optionally, import the switch into NetEdit.



CAUTION: When you deploy a switch configuration, it becomes the running configuration, replacing the entire existing configuration of the switch. All changes previously made to the factory default configuration are overwritten.

If you plan to both deploy a switch configuration and customize the configuration of switch features, deploy the initial configuration first.

To deploy an initial switch configuration, tap: **Initial Config** and follow the instructions in the application.

- Alternatively, you can complete the initial configuration of the switch by tapping **Modify Config** and then selecting the features and settings to configure.
- You can also use the Modify Config feature to configure some switch features after the initial configuration is complete. For more information about what you can configure using the Aruba CX mobile app, see the online help for the application.

Troubleshooting Bluetooth connections

Bluetooth connection IP addresses

The Bluetooth connection uses IP addresses in the 192.168.99.0/24 subnet.

Switch

192.168.99.1

Mobile device

192.168.99.10

Bluetooth is connected but the switch is not reachable

Symptom

The mobile device settings indicate that the device is connected to the switch through Bluetooth. However, the mobile application indicates that the switch is not reachable.

Solution 1

Cause

The mobile device is paired with a different nearby switch.

Action

- **1.** Verify the model number and serial number of the switch to which you are attempting to connect.
- **2.** Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch model-Serial number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 2

Cause

The mobile device is connected to a different network—such as through a Wi-Fi connection—that conflicts with the subnet used for the switch Bluetooth connection.

Action

Disconnect the mobile device from the network that is using the conflicting subnet.

For example, use the mobile device settings to turn off or disable Wi-Fi. If you choose to disable Wi-Fi on the mobile device, and you are not able to access cellular service, you will not be able to connect to the NetEdit server to import the switch, but you can still deploy a switch configuration.

Bluetooth is not connected

Symptom

Your mobile device cannot establish a Bluetooth connection to the switch.

Solution 1

Cause

Bluetooth is not enabled on your mobile device.

Action

- Use your mobile device settings application to enable Bluetooth.
- Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 2

Cause

Your mobile device is not within the broadcast range of the Bluetooth adapter.

Action

Move closer to the switch.

Devices can communicate through Bluetooth when they are close, typically within a few feet of each other.

Solution 3

Cause

Your mobile device is not paired with the switch.

Action

Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 4

Cause

Bluetooth is not enabled on the switch.

New switches are shipped from the factory with the USB port and Bluetooth enabled. However, an installed switch might have been configured to disable Bluetooth or disable the USB port, which the USB Bluetooth adapter uses.

Action

- **1.** Use a different CLI connection to enable Bluetooth on the switch.
 - Use the show bluetooth CLI command to show the Bluetooth configuration and the status of the Bluetooth adapter.
 - To enable the USB port, enter the CLI command: usb
 - An inserted USB drive must be mounted each time the switch boots or fails over to a different management module. To mount the drive, enter the CLI command: usb mount
 - To enable Bluetooth, enter the CLI command: bluetooth enable

Solution 5

Cause

Another mobile device has already connected to the switch through Bluetooth. This cause is likely if your device is repeatedly disconnected within 1-2 seconds of establishing a connection.

Action

1. Use a different CLI connection to see if there is another device connected:

Use the show bluetooth CLI command to show the Bluetooth configuration and the status of the Bluetooth adapter.

2. Either disconnect the other device or use that device to communicate with the switch.

A switch can use Bluetooth to connect to one mobile device at a time.

Solution 6

Cause

The switch has been restarted since the mobile device was last paired with the switch, and the device is having difficulty establishing the Bluetooth connection.

Action

- **1.** Use the Bluetooth mobile device settings to forget the switch device.
- **2.** Use your mobile device settings application to disable Bluetooth.
- **3.** Use your mobile device settings application to enable Bluetooth.
- 4. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch_model-Serial_number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 7

Cause

The USB Bluetooth adapter is not installed in the switch.

If the switch has multiple management modules, the USB Bluetooth adapter might be installed in the management module that is not the active management module.

Action

Install the USB Bluetooth adapter in the USB port of the switch.

For switches that have multiple management modules, you must install the USB Bluetooth adapter in the USB port of the active management module. Typically, for new switches, the active management module is the module in slot 5 (Aruba 8400 switches) or slot 1 (Aruba 6400 switches).

For information about the location of the USB port on the switch, see the *Installation Guide* for the switch.

Solution 8

Cause

A problem occurred with the Bluetooth feature on the switch. For example, the software daemon was stopped and then restarted.

Action

1. Use a different connection to the switch CLI to disable and then enable Bluetooth.

switch(config)# bluetooth disable
switch(config)# bluetooth enable

- **2.** Use the Bluetooth mobile device settings to forget the switch device.
- 3. Use your mobile device settings application to disable Bluetooth.
- **4.** Use your mobile device settings application to enable Bluetooth.
- 5. Use the Bluetooth settings on your mobile device to pair and connect the switch to your mobile device.

If you are in range of multiple Bluetooth devices, more than one device is displayed on the list of available devices. Switches running the AOS-CX operating system are displayed in the following format:

Switch model-Serial number

For example: 8325-987654X1234567 or 8320-AB12CDE123

A switch supports one active Bluetooth connection at a time.

On some Android devices, you might need to change the settings of the paired device to specify that it be used for Internet access.

Solution 9

Cause

A switch that is member of a stack (but is not the master switch), has a USB Bluetooth adapter installed, but mobile application has lost contact with that switch.

Action

Remove and then reinstall the USB Bluetooth adapter.

Do not remove the USB Bluetooth adapter from the master switch.

Initial configuration using the CLI

This procedure describes how to connect to the switch for the first time and configure basic operational settings using the CLI. In this procedure, you use a computer to connect to the switch using the either the console port or management port.

Procedure

- 1. Connect to the console port or the management port.
- 2. Log into the switch for the first time.
- 3. <u>Configure switch time using the NTP client</u>.

Connecting to the console port

Prerequisites

- A switch installed as described in its hardware installation guide.
- A computer with terminal emulation software.
- A JL448A Aruba X2 C2 RJ45 to DB9 console cable. (6400 only), or a USB-C cable (6300/6400).

Procedure

- 1. Connect the console port on the switch to the serial port on the computer using a console cable, or connect the USB-C port on the switch to the USB-C port on the computer using a USB-C cable.
- **2.** Start the terminal emulation software on the computer and configure a new session with the following settings:
 - Speed: 115200 bps
 - Data bits: 8
 - Stop bits: 1
 - Parity: None
 - Flow control: None
- **3.** Start the terminal emulation session.
- 4. Press **Enter** once. If the connection is successful, you are prompted to login.

Connecting to the management port

Prerequisites

- Two Ethernet cables
- SSH client software

Procedure

- 1. By default, the management interface is set to automatically obtain an IP address from a DHCP server, and SSH support is enabled. If there is no DHCP server on your network, you must configure a static address on the management interface:
 - a. Connect to the console port.
 - b. Configure the management interface.
- 2. Use an Ethernet cable to connect the management port to your network.
- 3. Use an Ethernet cable to connect your computer to the same network.
- **4.** Start your SSH client software and configure a new session using the address assigned to the management interface. (If the management interface is set to operate as a DHCP client, retrieve the IP address assigned to the management interface from your DHCP server.)
- **5.** Start the session. If the connection is successful, you are prompted to log in.

Logging into the switch for the first time

The first time you log in to the switch you must use the default administrator account. This account has no password, so you will be prompted on login to define one to safeguard the switch.

Procedure

1. When prompted to log in, specify admin. When prompted for the password, press ENTER. (By default, no password is defined.)

For example:

switch login: admin
password:

 Define a password for the admin account. The password can contain up to 32 alphanumeric characters in the range ASCII 32 to 127, which includes special characters such as asterisk (*), ampersand (&), exclamation point (!), dash (-), underscore (_), and question mark (?).

For example:

```
Please configure the 'admin' user account password.
Enter new password: ******
Confirm new password: ******
switch#
```

3. You are placed into the manager command context, which is identified by the prompt: switch#, where switch is the model number of the switch. Enter the command config to change to the global configuration context config.

For example:

Setting switch time using the NTP client

Prerequisites

- The IP address or domain name of an NTP server.
- If the NTP server uses authentication, obtain the password required to communicate with the NTP server.

Procedure

- 1. If the NTP server requires authentication, define the authentication key for the NTP client with the command ntp authentication.
- 2. Configure an NTP server with the command ntp server.
- **3.** By default, NTP traffic is sent on the default VRF. If you want to send NTP traffic on the management VRF, use the command ntp_vrf.
- 4. Review your NTP configuration settings with the commands show ntp servers and show ntp status.
- 5. See the current switch time, date, and time zone with the command show clock.

Example

This example creates the following configuration:

- Defines the authentication key 1 with the password myPassword.
- Defines the NTP server my-ntp.mydomain.com and makes it the preferred server.
- Sets the switch to use the management VRF (mgmt) for all NTP traffic.

```
switch(config)# ntp authentication-key 1 md5 myPassword
switch(config)# ntp server my-ntp.mydomain.com key 10 prefer
switch(config)# ntp vrf mgmt
```

Configuring banners

Procedure

1. Configure the banner that is displayed when a user connects to a management interface. Use the command banner motd. For example:

```
switch(config)# banner motd ^
Enter a new banner. Terminate the banner with the delimiter you have chosen.
>> This is an example of a banner text which a connecting user
>> will see before they are prompted for their password.
>>
>> As you can see it may span multiple lines and the input
>> will be terminated when the delimiter character is
```

```
>> encountered.^
Banner updated successfully!
```

2. Configure the banner that is displayed after a user is authenticated. Use the command banner exec. For example:

```
switch(config)# banner exec &
Enter a new banner. Terminate the banner with the delimiter you have chosen.
>> This is an example of a different banner text. This time
>> the banner entered will be displayed after a user has
>> authenticated.
>>
>> & This text will not be included because it comes after the '&'
Banner updated successfully!
```

Configuring in-band management on a data port

Prerequisites

- · A connection to the CLI via either the console port or the management port
- Ethernet cable

Procedure

- 1. Use an Ethernet cable to connect a data port to your network.
- 2. Configure a layer 3 interface on the data port.
- **3.** Enable SSH support on the interface (on the default VRF) with the command ssh server vrf default. For example:

```
switch# config
switch(config)# ssh server vrf default
```

4. Enable the Web UI on the interface (on the default VRF) with the command https-server vrf default.

```
For example:
```

switch(config) # https-server vrf default

Using the Web UI

The Web UI is disabled by default. Follow these steps to enable it on the management port and log in.

Prerequisites

A connection to the switch CLI.

Procedure

- 1. Log in to the CLI.
- 2. Switch to config context and enable the Web UI on the management port VRF with the command https-server vrf mgmt.

For example:

```
switch# config
switch(config)# https-server vrf mgmt
```

3. Start your web browser and enter the IP address of the management port in the address bar,

```
For example: https://192.168.1.1
```

4. The Web UI starts and you are prompted to log in.

Configuring the management interface

Prerequisites

A connection to the console port.

Procedure

- 1. Switch to the management interface context with the command interface mgmt.
- 2. By default, the management interface on the management port is enabled. If it was disabled, reenable it with the command no shutdown.
- **3.** Use the command ip dhcp to configure the management interface to automatically obtain an address from a DHCP server on the network (factory default setting). Or, assign a static IPv4 or IPv6 address, default gateway, and DNS server with the commands ip static, default-gateway, and nameserver.
- 4. SSH is enabled by default on the management VRF. If disabled, enable SSH with the command ssh server vrf mgmt.

Examples

This example enables the management interface with dynamic addressing using DHCP:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# no shutdown
switch(config-if-mgmt)# ip dhcp
```

This example enables the management interface with static addressing creating the following configuration:

- Sets a static IPv4 address of 198.168.100.10 with a mask of 24 bits.
- Sets the default gateway to **198.168.100.200**.
- Sets the DNS server to **198.168.100.201**.

```
switch(config)# interface mgmt
switch(config-if-mgmt)# no shutdown
switch(config-if-mgmt)# ip static 198.168.100.10/24
switch(config-if-mgmt)# default-gateway 198.168.100.200
switch(config-if-mgmt)# nameserver 198.168.100.201
```

Restoring the switch to factory default settings

Prerequisites

You are connected to the switch through its Console port.

Procedure



NOTE: This procedure erases all user information and configuration settings Consider backing up your running configuration first.

- 1. Optionally, back up the running configuration with either copy running-config <REMOTE-URL> or copy running-config <STORAGE-URL>. The json storage format is required for later configuration restoration.
- 2. Switch to the configuration context with the command config.
- **3.** Erase all user information and configuration, restoring the switch to its factory default state with the command erase all zeroize. Enter Y when prompted to continue. The switch automatically restarts.
- 4. Optionally restore your saved configuration (it must be in json format) with either copy <REMOTE-URL> running-config or copy <STORAGE-URL> running-config followed by copy running-config startup-config.

Example

Backing up the running configuration to a file on a remote server (using TFTP), resetting the switch to its factory default state, and then restoring the saved configuration.

```
switch# copy running-config tftp://192.168.1.10/backup cfg json vrf mgmt
 % Total % Received % Xferd Average Speed Time
                                                  Time Time Current
                            Dload Upload Total Spent
                                                          Left Speed
100 10340 0
               0 100 10340 0 1329k --:--:- --:-- 1329k
100 10340 0
               0 100 10340
                                0 1313k --:-- --:-- 1313k
switch#
switch#
switch# erase all zeroize
This will securely erase all customer data and reset the switch
to factory defaults. This will initiate a reboot and render the
switch unavailable until the zeroization is complete.
This should take several minutes to one hour to complete.
Continue (y/n)? y
The system is going down for zeroization.
[ OK ] Stopped PSPO Module Daemon.
[ OK ] Stopped ArubaOS-CX Switch Daemon for BCM.
. . .
 OK ] Stopped Remount Root and Kernel File Systems.
Γ
  OK ] Reached target Shutdown.
Γ
reboot: Restarting system
Press Esc for boot options
   version: GT.01.03.0006
Build Date: 2018-10-30 14:20:44 PDT
Build ID: ServiceOS:GT 01 02 0005
ServiceOS Information:
                  ServiceOS:GT.01.03.0006:8ee0faaa52da:201810301420
   SHA:
                  ******
. . .
```

################## ########## Boot Profiles: 0. Service OS Console 1. Primary Software Image [XL.10.02.0010] 2. Secondary Software Image [XL.10.02.0010] Select profile (primary): Booting primary software image ... Verifying Image... Image Info: Name: ArubaOS-CX Version: XL.10.02.0010 Build Id: ArubaOS-CX:XL.10.02.0010:feaf5b9b7f09:201901292014 Build Date: 2019-01-29 12:43:50 PST Extracting Image ... Loading Image ... Done. kexec core: Starting new kernel System is initializing fips post check[5473]: FIPS POST: Cryptographic selftest started...SUCCESS [OK] Started Login banner readiness check. . . . 8400X login: admin Password: switch# switch# switch# copy tftp://192.168.1.10/backup cfg running-config json vrf mgmt % Total % Received % Xferd Average Speed Time Time Time Current Left Speed Dload Upload Total Spent 0 --:-- --:-- 2858k 100 10340 100 10340 0 0 2858k 100 10340 100 10340 0 --:--: -- 2804k 0 0 2804k Large configuration changes will take time to process, please be patient. switch# switch# switch# copy running-config startup-config Large configuration changes will take time to process, please be patient. switch#

Management interface commands

default-gateway

Syntax

default-gateway <IP-ADDR>

```
no default-gateway <IP-ADDR>
```

Description

Assigns an IPv4 or IPv6 default gateway to the management interface. An IPv4 default gateway can only be configured if a static IPv4 address was assigned to the management interface. An IPv6 default gateway can only be configured if a static IPv6 address was assigned to the management interface. The default gateway should be on the same network segment.

The no form of this command removes the default gateway from the management interface.

Command context

config-if-mgmt

Parameters

<IP-ADDR>

Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting a default gateway with the IPv4 address of **198.168.5.1**:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# default-gateway 198.168.5.1
```

Setting an IPv6 address of **2001:DB8::1**:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# default-gateway 2001:DB8::1
```

ip static

Syntax

ip static <IP-ADDR>/<MASK>

no ip static <IP-ADDR>/<MASK>

Description

Assigns an IPv4 or IPv6 address to the management interface.

The no form of this command removes the IP address from the management interface and sets the interface to operate as a DHCP client.

Command context

config-if-mgmt

Parameters

<IP-ADDR>

Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

<MASK>

Specifies the number of bits in an IPv4 or IPv6 address mask in CIDR format (x), where x is a decimal number from 0 to 32 for IPv4, and 0 to 128 for IPv6.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting an IPv4 address of 198.51.100.1 with a mask of 24 bits:

switch(config)# interface mgmt
switch(config-if-mgmt)# ip static 198.51.100.1/24

Setting an IPv6 address of **2001**:**DB8**::**1** with a mask of **32** bits:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# ip static 2001:DB8::1/32
```

nameserver

Syntax

nameserver <PRIMARY-IP-ADDR> [<SECONDARY-IP-ADDR>]

no nameserver <PRIMARY-IP-ADDR> [<SECONDARY-IP-ADDR>]

Description

Assigns a primary or secondary IPv4 or IPv6 DNS server to the management interface. IPv4 DNS servers can only be configured if a static IPv4 address was assigned to the management interface. IPv6 DNS servers can only be configured if a static IPv6 address was assigned to the management interface. The default gateway should be on the same network segment.

The no form of this command removes the DNS servers from the management interface.

Command context

config-if-mgmt

Parameters

<PRIMARY-IP-ADDR>

<SECONDARY-IP-ADDR>

Specifies the IP address of the secondary DNS server. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting primary and secondary DNS servers with the IPv4 addresses of 198.168.5.1 and 198.168.5.2:

switch(config)# interface mgmt
switch(config-if-mgmt)# nameserver 198.168.5.1 198.168.5.2

Setting primary and secondary DNS servers with the IPv6 addresses of 2001:DB8::1 and 2001:DB8::2:

```
switch(config)# interface mgmt
switch(config-if-mgmt)# nameserver 2001:DB8::1 2001:DB8::2
```

show interface mgmt

Syntax

```
show interface mgmt [vsx-peer]
```

Description

Shows status and configuration information for the management interface.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

switch# show interface mgmt

```
Address Mode: staticAdmin State: upMac Address: 02:42:ac:11:00:02IPv4 address/subnet-mask: 192.168.1.10/16Default gateway IPv4: 192.168.1.1IPv6 address/prefix: 2001:db8:0:1::129/64IPv6 link local address/prefix:fe80::7272:cfff:fefd:e485/64Default gateway IPv6: 2001:db8:0:1::1Primary Nameserver: 2001::1Secondary Nameserver: 2001::2
```

NTP commands

ntp authentication

Syntax

ntp authentication

no ntp authentication

Description

Enables support for authentication when communicating with an NTP server. The no form of this command disables authentication support.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling authentication support:

switch(config)# ntp authentication

Disabling authentication support:

switch(config)# no ntp authentication

ntp authentication-key

Syntax

ntp authentication-key <KEY-ID> {md5 | sha1} <PASSWORD> [trusted]

```
no ntp authentication-key <KEY-ID>
```

Description

Defines an authentication key that is used to secure the exchange with an NTP time server. This command provides protection against accidentally synchronizing to a time source that is not trusted.

The no form of this command removes an authentication key.

Command context

config

Parameters

authentication-key <KEY-ID>

Specifies an identification number to uniquely identify the key. Range: 1 to 65534.

md5

Specifies md5 encryption to protect the key.

sh1

Specifies sh1 encryption to protect the key

<PASSWORD>

Specifies the md5 or sh1 password associated with the key. Range: 8 to 16 characters.

trusted

Specifies that this is a trusted key. When NTP authentication is enabled, the switch only synchronizes with time servers that transmit packets containing a trusted key.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defining key 10 with the md5 password myPassword as a trusted key:

switch(config) # ntp authentication-key 10 md5 myPassword trusted

Removing key 10:

switch(config)# no ntp authentication-key 10

ntp disable

Syntax

ntp disable

Description

Disables the NTP client on the switch. The NTP client is disabled by default.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Disabling the NTP client.

switch(config) # ntp disable

ntp enable

Syntax

ntp enable

no ntp enable

Description

Enables the NTP client on the switch to automatically adjust the local time and date on the switch. The NTP client is disabled by default.

The no form of this command disables the NTP client.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.
Examples

Enabling the NTP client.

switch(config) # ntp enable

Disabling the NTP client.

switch(config)# no ntp enable

ntp master

Syntax

ntp master vrf <VRF-NAME> {stratum <NUMBER>]

no ntp master vrf <VRF-NAME>

Description

Sets the switch as the master time source for NTP clients on the specified VRF. By default, the switch operates at stratum level 8. The switch cannot function as both NTP master and client on the same VRF.

The no form of this command stops the switch from operating as the master time source on the specified VRF.

Command context

config

Parameters

vrf <VRF-NAME>

Specifies the VRF on which to act as master time source.

stratum <NUMBER>

Specifies the stratum level at which the switch operates. Range: 1 - 15. Default: 8.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the switch to act as master time source on VRF primary-vrf with a stratum level of 9.

switch(config)# ntp master vrf primary-vry statum 9

Stops the switch from acting as master time source on VRF primary-vrf.

switch(config)# no ntp master vrf primary-vry

ntp server

Syntax

ntp server <*IP-ADDR>* [key <*KEY-NUM>*] [minpoll <*MIN-NUM>*] [maxpoll <*MAX-NUM>*][burst | iburst] [prefer] [version <*VER-NUM>*] no ntp server <*IP-ADDR>*

no ntp server <IP-ADDR> [burst] [iburst] [prefer] [key-id <KEY-NUM>]

Description

Defines an NTP server to use for time synchronization, or updates the settings of an existing server with new values. Up to eight servers can be defined.

The no form of this command removes a configured NTP server.

Command context

config

Parameters

server <IP-ADDR>

Specifies the address of an NTP server as a DNS name, an IPv4 address (x.x.x.x), where x is a decimal number from 0 to 255, or an IPv6 address (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

When specifying an IPv4 address, you can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.

When specifying an IPv6 address, you can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.

key <KEY-NUM>

Specifies the key to use when communicating with the server. A trusted key must be defined with the command ntp authentication-key and authentication must be enabled with the command ntp authentication. Range: 1 to 65534.

minpoll <MIN-NUM>

Specifies the minimum polling interval in seconds, as a power of 2. Range: 4 to 17. Default: 6 (64 seconds).

maxpoll <MAX-NUM>

Specifies the maximum polling interval in seconds, as a power of 2. Range: 4 to 17. Default: 10 (1024 seconds).

burst

Send a burst of packets instead of just one when connected to the server. Useful for reducing phase noise when the polling interval is long.

iburst

Send a burst of six packets when not connected to the server. Useful for reducing synchronization time at startup . Range: 1 to 4094.

prefer

Make this the preferred server.

version <VER-NUM>

Specifies the version number to use for all outgoing NTP packets. Range: 3 or 4.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defining the ntp server pool.ntp.org, using iburst, and NTP version 4.

Removing the ntp server pool.ntp.org.

switch(config)# no ntp server pool.ntp.org

Defining the ntp server my-ntp.mydomain.com and makes it the preferred server.

switch(config) # ntp server my-ntp.mydomain.com prefer

ntp trusted-key

Syntax

ntp trusted-key <KEY-ID>

no ntp trusted-key <KEY-ID>

Description

Sets a key as trusted. When NTP authentication is enabled, the switch only synchronizes with time servers that transmit packets containing a trusted key.

The no form of this command removes the trusted designation from a key.

Command context

config

Parameters

<KEY-ID>

Specifies the identification number of the key to set as trusted. Range: 1 to 65534.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defining key 10 as a trusted key.

switch(config)# ntp trusted-key 10

Removing trusted designation from key 10:

switch(config)# no ntp trusted-key 10

ntp vrf

Syntax

ntp vrf <VRF-NAME>

Description

Specifies the VRF on which the NTP client communicates with an NTP server. The switch cannot function as both NTP master and client on the same VRF.

Command context

config

Parameters

<VRF-NAME>

Specifies the name of a VRF.

Authority

Administrators or local user group members with execution rights for this command.

Example

Setting the switch to use the default VRF for NTP client traffic.

```
switch(config)# ntp vrf default
```

Setting the switch to use the default management VRF for NTP client traffic.

switch(config) # ntp vrf mgmt

show ntp associations

Syntax

show ntp associations [vsx-peer]

Description

Shows the status of the connection to each NTP server. The following information is displayed for each server:

- Tally code : The first character is the Tally code:
 - (blank): No state information available (e.g. non-responding server)
 - x : Out of tolerance (discarded by intersection algorithm)
 - . : Discarded by table overflow (not used)
 - -: Out of tolerance (discarded by the cluster algorithm)
 - +: Good and a preferred remote peer or server (included by the combine algorithm)
 - # : Good remote peer or server, but not utilized (ready as a backup source)
 - * : Remote peer or server presently used as a primary reference
 - o : PPS peer (when the prefer peer is valid)
- ID: Server number.
- NAME: NTP server FQDN/IP address (Only the first 24 characters of the name are displayed).
- REMOTE: Remote server IP address.
- REF_ID: Reference ID for the remote server (Can be an IP address).
- ST: (Stratum) Number of hops between the NTP client and the reference clock.
- LAST: Time since the last packet was received in seconds unless another unit is indicated.
- POLL: Interval (in seconds) between NTP poll packets. Maximum (1024) reached as server and client sync.
- REACH: 8-bit octal number that displays status of the last eight NTP messages (377 = all messages received).

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

```
switch# show ntp associations
```

ID	NAME	REMOTE	REF-ID	ST	LAST	POLL	REACH
1	192.0.1.1	192.0.1.1	.INIT.	16	_	64	0
* 2	time.apple.com	17.253.2.253	.GPSs.	2	70	128	377

show ntp authentication-keys

Syntax

show ntp authentication-keys [vsx-peer]

Description

Shows the currently defined authentication keys.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# show ntp authentication-keys
```

Auth	key	Trusted	MD5 password
10		No	*********
20		Yes	* * * * * * * * * *

show ntp servers

Syntax

show ntp servers [vsx-peer]

Description

Shows all configured NTP servers.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

switch# show ntp servers

NTP	SERVER	KEYID	MINPOLL	MAXPOLL	OPTION	VER	
 192. 192.	.0.1.18	-	5	10 10	iburst none	3 4	
 192.	.0.1.20		6	8	burst	3	preier

show ntp statistics

Syntax

show ntp statistics [vsx-peer]

Description

Shows global NTP statistics. The following information is displayed:

- Rx-pkts: Total NTP packets received.
- Current Version Rx-pkts: Number of NTP packets that match the current NTP version.
- Old Version Rx-pkts: Number of NTP packets that match the previous NTP version.
- Error pkts: Packets dropped due to all other error reasons.
- Auth-failed pkts: Packets dropped due to authentication failure.
- Declined pkts: Packets denied access for any reason.
- Restricted pkts: Packets dropped due to NTP access control.

- Rate-limited pkts: Number of packets discarded due to rate limitation.
- KOD pkts: Number of Kiss of Death packets sent.

Command context

config

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

show ntp status

Syntax

show ntp status [vsx-peer]

Description

Shows the status of NTP on the switch.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying the status information when the switch is not synced to an NTP server:

switch# show ntp status
NTP is enabled.
NTP authentication is enabled.
NTP is using the default VRF for NTP server connections.
Wed Nov 23 23:29:10 PDT 2016
NTP uptime: 187 days, 1 hours, 37 minutes, 48 seconds
Not synchronized with an NTP server.

Displaying the status information when the switch is synced to an NTP server:

switch# show ntp status NTP is enabled. NTP authentication is enabled. NTP is using the default VRF for NTP server connections. Wed Nov 23 23:29:10 PDT 2016 NTP uptime: 187 days, 1 hours, 37 minutes, 48 seconds Synchronized to NTP Server 17.253.2.253 at stratum 2. Poll interval = 1024 seconds. Time accuracy is within 0.994 seconds Reference time: Thu Jan 28 2016 0:57:06.647 (UTC)

Configuring a layer 2 interface

Procedure

- 1. Change to the interface configuration context for the interface with the command interface.
- 2. Set the interface MTU (maximum transmission unit) with the command mtu.
- 3. Review interface configuration settings with the command show interface.

Example

On the 6300 switch series:

```
switch(config)# interface 1/1/1
switch(config-if)# mtu 1900
```

On the 6400 switch series:

```
switch(config) # interface 1/3/1
switch(config-if) # mtu 1900
```

Configuring a layer 3 interface

Procedure

- 1. Change to the interface configuration context for the interface with the command interface.
- 2. Enable routing support with the command routing.
- **3.** Assign an IPv4 address with the command ip address, or an IPv6 address with the command ipv6 address.
- 4. If required, enable support for layer 3 counters with the command 13-counters.
- 5. If required, set the IP MTU with the command ip mtu.
- 6. Review interface configuration settings with the command show interface.

Examples

This example creates the following configuration on the 6300 Switch Series:

- Configures interface 1/1/1 as a layer 3 interface.
- Defines an IPv4 address of 10.10.20.209 with a 24-bit mask.

```
switch# config
switch(config)# interface 1/1/1
```

```
switch(config-if)# routing
switch(config-if)# ip address 10.10.20.209/24
```

This example creates the following configuration on the 6400 Switch Series:

- Configures interface 1/3/1 as a layer 3 interface.
- Defines an IPv6 address of 2001:0db8:85a3::8a2e:0370:7334 with a 24-bit mask.
- Enables layer 3 transmit and receive counters.

```
switch# config
switch(config)# interface 1/3/1
switch(config-if)# routing
switch(config-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24
switch(config-if)# 13-counters tx
switch(config-if)# 13-counters rx
```

Single source IP address

Certain IP-based protocols used by the switch (such as RADIUS, sFlow, TACACS, and TFTP), use a client-server model in which the client's source IP address uniquely identifies the client in packets sent to the server. By default, the source IP address is defined as the IP address of the outgoing switch interface on which the client is communicating with the server. Since the switch can have multiple routing interfaces, outgoing packets can potentially be sent on different paths at different times. This can result in different source IP addresses being used for a client, which can create a client identification problem on the server. For example, it can be difficult to interpret system logs and accounting data on the server when the same client is associated with multiple IP addresses.

To resolve this issue, you can use the commands ip source-interface and ipv6 source-interface to define a single source IP address that applies to all supported protocols (RADIUS, sFlow, TACACS, and TFTP), or an individual address for each protocol. This ensures that all traffic sent by a client to a server uses the same IP address.

Unsupported transceiver support

Transceiver products (optical, DAC, AOCs) that are listed as supported by a switch model are detailed in the *Transceiver Guide*. Transceiver products that are not listed, are considered unsupported; this would include transceivers that are:

- Non-Aruba branded products
- HPE branded products that were designed for non-ArubaOS-CX switch models (e.g. Comware)
- HPE branded products designated for use in HPE Compute Servers or Storage
- Transceivers originally designated for use in Aruba WLAN controllers or former Mobility Access Switch (MAS) products
- End-of-life Aruba Transceivers

The unsupported transceiver mode (UT-mode) is designed to allow the possible use of these unsupported products. Not all unsupported products can be recognized and enabled; they may be unable to be identified (do not follow the proper MSA standards for identification). These unsupported transceiver products are enabled only on a best-effort basis and there are no guarantees implied for their continued operation.

The feature is disabled by default. A periodic system log will be generated by default at an interval of 24 hours listing the ports on which unsupported transceivers are present. The log interval is configurable and can be disabled by setting the log-interval to none.

Interface commands

allow-unsupported-transceiver

Syntax

```
allow-unsupported-transceiver [confirm | log-interval {none | <INTERVAL>}]
```

no allow-unsupported-transceiver

Description

Allows unsupported transceivers to be enabled or establish connections. Only 1G and 10G transceivers are enabled by this command and unsupported transceivers of other speeds will remain disabled.

The no form of this command disallows using unsupported transceivers. This is the default.

Command context

config

Parameters

confirm

Specifies that unsupported transceiver warnings are to be automatically confirmed.

log-interval none

Disables unsupported transceiver logging.

log-interval <INTERVAL>

Sets the unsupported transceiver logging interval in minutes. Default: 1440 minutes. Range: 1440 to 10080 minutes.

Authority

Administrators or local user group members with execution rights for this command.

Usage

When none of the parameters are specified it will display a warning message to accept the warranty terms. With confirm option the warning message is displayed but the user is not prompted to (y/n) answering. Warranty terms must be agreed to as part of enablement and the support is on best effort basis.

Examples

Allowing unsupported transceivers with follow-up confirmation:

```
switch(config)# allow-unsupported-transceiver
Warning: The use of unsupported transceivers, DACs, and AOCs is at your
own risk and may void support and warranty. Please see HPE Warranty terms
and conditions.
```

Do you agree and do you want to continue (y/n)? **y**

Allowing unsupported transceivers with confirmation in command syntax:

switch(config)# allow-unsupported-transceiver confirm
Warning: The use of unsupported transceivers, DACs, and AOCs is at your
own risk and may void support and warranty. Please see HPE Warranty terms
and conditions.

Configuring unsupported transceiver logging with an interval of every 48 hours:

switch(config)# allow-unsupported-transceiver log-interval 2880

Disabling unsupported transceiver logging:

switch(config)# allow-unsupported-transceiver log-interval none

Disallowing unsupported transceivers with follow-up confirmation:

switch(config)# no allow-unsupported-transceiver Warning: Unsupported transceivers, DACs, and AOCs will be disabled, which could impact network connectivity. Use 'show allow-unsupported-transceiver' to identify unsupported transceivers, DACs, and AOCs.

Continue (y/n)? **y**

Disallowing unsupported transceivers with confirmation in command syntax:

```
switch(config)# no allow-unsupported-transceiver confirm
Warning: Unsupported transceivers, DACs, and AOCs will be disabled,
which could impact network connectivity. Use 'show allow unsupported-transceiver'
to identify unsupported transceivers, DACs, and AOCs.
```

switch(config)#

default interface

Syntax

default interface <INTERFACE-ID>

Description

Sets an interface (or a range of interfaces) to factory default values.

Command context

config

Parameters

<INTERFACE-ID>

Specifies the ID of a single interface or range of interfaces. Format: member/slot/port or

member/slot/port-member/slot/port to specify a range.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs. Resetting an interface: switch(config) # default default interface 1/1/1

Resetting an range of interfaces:

switch(config)# default default interface 1/1/1-1/1/10

description

Syntax

description <DESCRIPTION>

no description

Description

Associates descriptive information with an interface to help administrators and operators identify the purpose or role of an interface.

The no form of this command removes a description from an interface.

Command context

config-if

Parameters
 <

Specify a description for the interface. Range: 1 to 64 ASCII characters (including space, excluding question mark).

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the description for an interface to **DataLink 01**:

switch(config-if)# description DataLink 01

Removing the description for an interface.

switch(config-if) # no description

energy-efficient-ethernet

Syntax

energy-efficient-ethernet

Description

Enables auto-negotiation of Energy-Efficient Ethernet (EEE) on an interface. EEE Negotiation is established only on auto-link negotiation with supported link partners.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring an interface:

switch(config)# interface 1/1/1
switch(config-if)# energy-efficient-ethernet

Disabling Energy Efficient Ethernet on an interface:

switch(config)# interface 1/1/1
switch(config-if)# no energy-efficient-ethernet

flow-control

Syntax

flow-control rxtx

[no] flow-control rxtx

Description

Enables negotiation of IEEE 802.3x link-level flow control on the current interface. The switch advertises linklevel flow-control support to the link partner. The final configuration is determined based on the capabilities of both partners.

The no form disables flow control support on the current interface.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Parameters

rxtx

Enables the ability to respect and generate IEEE 802.3x link-level pause frames on the current interface.

Examples

Enable support for rxtx flow control:

```
switch(config)# interface 1/1/1
switch(config-if)# flow-control rxtx
```

Disable support for rxtx flow control:

```
switch(config) # interface 1/1/1
switch(config-if) # no flow-control rxtx
```

interface

Syntax

interface <PORT-NUM>

Description

Switches to the config-if context for a physical port. This is where you define the configuration settings for the logical interface associated with the physical port.

Command context

config

Parameters

<PORT-NUM>

Specifies a physical port number. Format: member/slot/port.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Configuring an interface:

```
switch(config)# interface 1/1/1
switch(config-if)#
```

interface loopback

Syntax

```
interface loopback <ID>
```

```
no interface loopback <ID>
```

Description

Creates a loopback interface and changes to the <code>config-loopback-if</code> context. Loopback interfaces are layer 3.

The no form of this command deletes a loopback interface.

Command context

config

Parameters

<INSTANCE>

Specifies the loopback interface ID. Range: 1 to 256

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# config
switch(config)# interface loopback 1
switch(config-loopback-if)#
```

interface vlan

Syntax

interface vlan <VLAN-ID>

no interface vlan <VLAN-ID>

Description

Creates an interface VLAN also know as an SVI (switched virtual interface) and changes to the config-ifvlan context. The specified VLAN must already be defined on the switch.

The no form of this command deletes an interface VLAN.

Command context

config

Parameters

<VLAN-ID>

Specifies the loopback interface ID. Range: 2 to 4094

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# config
switch(config)# vlan 10
switch(config-vlan-10)# exit
switch(config)# interface vlan 10
switch(config-if-vlan)#
```

ip address

Syntax

ip address <IPV4-ADDR>/<MASK> [secondary]

no ip address <IPV4-ADDR>/<MASK> [secondary]

Description

Sets an IPv4 address for the current layer 3 interface.

The no form of this command removes the IPv4 address from the interface.

Command context

```
config-if
config-loopback-if
config-if-vlan
```

Parameters

<IPV4-ADDR>

Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.

<MASK>

Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.

secondary

Specifies a secondary IP address.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Creating a layer 3 interface setting its IP address to 192.168.100.1 with a mask of 24 bits.

```
switch(config)# interface 1/1/1
switch(config-if)# routing
switch(config-if)# ip address 192.168.100.1/24
```

Assigning the IP address **192.168.20.1** with a mask of **24** bits to loopback interface **1**:

```
switch(config)# interface loopback 1
switch(config-loopback-if)# routing
switch(config-loopback-if)# ip address 192.168.20.1/24
```

Assigning the IP address **192.168.199.1** with a mask of **24** bits to interface VLAN **10**:

```
switch(config)# interface vlan 10
switch(config-loopback-if)# ip address 192.168.199.1/24
```

Removing the IP address 192.168.199.1 with a mask of 24 bits from interface VLAN 10:

```
switch(config)# interface vlan 10
switch(config-loopback-if)# no ip address 192.168.199.1/24
```

ip mtu

Syntax

```
ip mtu <VALUE>
```

ip no mtu

Description

Sets the IP MTU (maximum transmission unit) for an interface. This defines the largest IP packet that can be sent or received by the interface.

The no form of this command sets the IP MTU to the default value 1500.

Command context

config-if

Parameters

<VALUE>

Specifies the IP MTU in bytes. Range: 68 to 9198. Default: 1500.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the IP MTU to 576 bytes:

switch(config-if)# ip mtu 576

Setting the IP MTU to the default value:

switch(config-if)# no ip mtu

ip source-interface

Syntax

```
ip source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-
relay | simplivity | dns | all} {interface <IFNAME> | <IPV4-ADDR>} [vrf <VRF-NAME>]
```

```
no ip source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt |
dhcp-relay | simplivity | dns | all} [interface <IFNAME> | <IPV4-ADDR>] [vrf <VRF-
NAME>]
```

Description

Sets a single source IP address for a feature on the switch. This ensures that all traffic sent the feature has the same source IP address regardless of how it egresses the switch. You can define a single global address that applies to all supported features, or an individual address for each feature.

This command provides two ways to set the source IP addresses: either by specifying a static IP address, or by using the address assigned to a switch interface. If you define both options, then the static IP address takes precedence.

The no form of this command deletes the single source IP address for all supported services, or a specific service.

Command contexts

config

Parameters

sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-relay | simplivity | dns
| all

Sets a single source IP address for a specific service. The all option sets a global address that applies to all protocols that do not have an address set. For DHCP relay, the address is used as both the source IP and GIADDR.

interface <IFNAME>

Specifies the name of the interface from which the specified service obtains its source IP address. The interface must have a valid IP address assigned to it. If the interface has both a primary and secondary IP address, the primary IP address is used.

<IPV4-ADDR>

Specifies the source IP address to use for the specified service. The IP address must be defined on the switch, and it must exist on the specified VRF (which is the default VRF, if the vrf option is not used). Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

vrf <VRF-NAME>

Specifies the name of a VRF.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the IPv4 address 10.10.10.5 as the global single source address:

```
switch# config
switch(config)# ip source-interface all 10.10.10.5
```

Setting the secondary IPv4 address 10.10.10.5 on interface 1/1/1 as the global single source address. (On the 6400 Switch Series, interface identification differs.)

```
switch# config
switch(config)# interface 1/1/1
switch(config-if)# routing
switch(config-if)# ip address 10.10.10.1/24
switch(config-if)# ip address 10.10.10.5/24 secondary
switch(config)# exit
switch(config)# ip source-interface all 10.10.10.5
```

Clearing the global single source IP address 10.10.10.5:

switch(config) # no ip source-interface all 10.10.10.5

ipv6 address

Syntax

```
ipv6 address <IPV6-ADDR>/<MASK>{eui64 | [tag <ID>]}
```

no ipv6 address <IPV6-ADDR>/<MASK>

Description

Sets an IPv6 address on the interface.

The no form of this command removes the IPv6 address on the interface.



NOTE: This command automatically creates an IPv6 link-local address on the interface. However, it does not add the ipv6 address link-local command to the running configuration. If you remove the IPv6 address, the link-local address is also removed. To maintain the link-local address, you must manually execute the ipv6 address link-local command.

Command context

config-if

Parameters

<IPV6-ADDR>

Specifies the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F. You can use two colons (::) to represent consecutive zeros (but only once), remove leading zeros, and collapse a hextet of four zeros to a single 0. For example, this address 2222:0000:3333:0000:0000:4444:0055 becomes 2222:0:3333::4444:55.

<MASK>

Specifies the number of bits in the address mask in CIDR format (x), where x is a decimal number from 0 to 128.

eui64

Configure the IPv6 address in the EUI-64 bit format.

tag <ID>

Configure route tag for connected routes. Range: 0 to 4294967295. Default: 0.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the IPv6 address 2001:0db8:85a3::8a2e:0370:7334 with a mask of 24 bits:

switch(config-if)# ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24

Removing the IP address 2001:0db8:85a3::8a2e:0370:7334 with mask of 24 bits:

switch(config-if)# no ipv6 address 2001:0db8:85a3::8a2e:0370:7334/24

ipv6 source-interface

Syntax

ipv6 source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-relay | simplivity | dns | all} {interface <IFNAME> | <IPV6-ADDR>} [vrf <VRF-NAME>]

```
no ipv6 source-interface {sflow | tftp | radius | tacacs | ntp | syslog | ubt |
dhcp-relay | simplivity | dns | all} [interface <IFNAME> | <IPV6-ADDR>] [vrf <VRF-
NAME>]
```

Description

Sets a single source IP address for a feature on the switch. This ensures that all traffic sent the feature has the same source IP address regardless of how it egresses the switch. You can define a single global address that applies to all supported features, or an individual address for each feature.

This command provides two ways to set the source IP addresses: either by specifying a static IP address, or by using the address assigned to a switch interface. If you define both options, then the static IP address takes precedence.

The no form of this command deletes the single source IP address for all supported protocols, or a specific protocol.

Command context

config

Parameters

sflow | tftp | radius | tacacs | ntp | syslog | ubt | dhcp-relay | simplivity | dns
| all

Sets a single source IP address for a specific protocol. The all option sets a global address that applies to all protocols that do not have an address set.

interface <IFNAME>

Specifies the name of the interface from which the specified protocol obtains its source IP address.

<IPV6-ADDR>

Specifies the source IP address to use for the specified protocol. The IP address must be defined on the switch, and it must exist on the specified VRF (which is the default VRF, if the vrf option is not used). Specify the IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

vrf <VRF-NAME>

Specifies the name of the VRF from which the specified protocol sets its source IP address.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring the IPv6 address 2001:DB8::1 as the global single source address:

```
switch# config
switch(config)# ip source-interface all 2001:DB8::1/32
```

Configuring the IPv6 address 2001:DB8::1 on VRF sflow-vrf on interface 1/1/2 as the single source address for sFlow:

```
switch(config)# vrf sflow-vrf
switch(config-vrf)# exit
switch(config)# interface 1/1/2
switch(config-if)# no shutdown
switch(config-if)# vrf attach sflow-vrf
switch(config-if)# ipv6 address 2001:DB8::1/32
switch(config-if)# exit
switch(config)# ip source-interface sflow interface 1/1/2 vrf sflow-vrf
```

Stop the source IP address from using the IP address on interface 1/1/1 on VRF one.

switch(config) # no ip source-interface all interface 1/1/1 vrf one

Clear the source IP address 2001:DB8::1.

switch(config)# no ip source-interface all 2001:DB8::1

13-counters

Syntax

13-counters [rx | tx]
no 13-counters [rx | tx]

Description

Enables counters on a layer 3 interface. By default, all interfaces are layer 3. To change a layer 2 interface to layer 3, use the routing command.

The no form of this command, with no specification, disables both transmit and receive counters on a layer 3 interface. To disable transmit (tx) or receive (rx) counters only, specify the counter type you want to disable.

Command context

config-if

Parameters

rx

Specifies receive counters.

tx

Specifies transmit counters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling layer 3 transmit counters.

On the 6300 Switch Series:

```
switch(config)# interface 1/1/1
switch(config-if)# routing
switch(config-if)# 13-counters
```

On the 6400 Switch Series:

```
switch(config)# interface 1/3/1
switch(config-if)# routing
switch(config-if)# 13-counters
```

mtu

Syntax

mtu <VALUE>

no mtu

Description

Sets the MTU (maximum transmission unit) for an interface. This defines the maximum size of a layer 2 (Ethernet) frame. Frames larger than the MTU (1500 bytes by default) are dropped and cause an ICMP fragmentation-needed message to be sent back to the originator.

To support jumbo frames (frames larger than 1522 bytes), increase the MTU as required by your network. A frame size of up to 9198 bytes is supported.

The largest possible layer 1 frame will be 18 bytes larger than the MTU value to allow for link layer headers and trailers.

The no form of this command sets the MTU to the default value 1500.

Command context

config-if

Parameters

<VALUE>

Specifies the MTU in bytes. Range: 46 to 9198. Default: 1500.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Setting the MTU on interface 1/1/1 to 1000 bytes:

Setting the MTU on interface 1/1/1 to the default value:

routing

Syntax

routing

no routing

Description

Enables routing support on an interface, creating a L3 (layer 3) interface on which the switch can route IPv4/ IPv6 traffic to other devices.

By default, routing is disabled on all interfaces.

The no form of this command disables routing support on an interface, creating a L2 (layer 2) interface.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling routing support on an interface:

switch(config-if) # routing

Disabling routing support on an interface:

switch(config-if) # no routing

show allow-unsupported-transceiver

Syntax

show allow-unsupported-transceiver

Description

Displays configuration and status of unsupported transceivers.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing unallowed unsupported transceivers:

switch(config) # show allow-unsupported-transceiver

Allow unsupported transceivers : no Logging interval : 1440 minutes

Port	Туре	Status
1/1/31 1/1/32 1/1/2	SFP-SX SFP-1G-BXD SFP28DAC3	unsupported unsupported unsupported

Showing allowed unsupported transceivers:

switch# show allow-unsupported-transceiver

Allow unsupported transceivers : yes Logging interval : 1440 minutes

PortTypeStatus1/1/31SFP-SXunsupported-allowed1/1/32SFP-1G-BXDunsupported-allowed1/1/2SFP28DAC3unsupported

show interface

Syntax

```
show interface [<IFNNAME>|<IFRANGE>] [brief | physical | extended [non-zero]]
show interface [lag | loopback | tunnel | vlan ] [<ID>] [brief | physical]
show interface [lag | loopback | tunnel | vlan ] [<ID>] [extended | non-zero]
```

Description

Displays active configurations and operational status information for interfaces.

Command context

config

Parameters

<IFNAME>

Specifies a interface name.

<IFRANGE>

Specifies the port identifier range.

brief

Displays brief info in tabular format.

physical

Display the physical connection info in tabular format.

extended

Displays additional statistics.

non-zero

Displays only non zero statistics.

LAG

Displays LAG interface information.

LOOPBACK

Displays loopback interface information.

TUNNEL

Displays tunnel interface information.

VLAN

Displays VLAN interface information.

<LAG-ID>

Specifies the LAG number. Range: 1-256

<LOOPBACK-ID>

Specifies the LOOPBACK number. Range: 0-255

<TUNNEL-ID>

Specifies the tunnel ID. Range: 1-255

<VLAN-ID>

Specifies the VLAN ID. Range: 1-4094

VXLAN

Displays the VXLAN interface information.

<VXLAN-ID>

Specifies the VXLAN interface identifier. Default: 1

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

The following example shows when the interface is configured as a route-only port:

```
switch# show interface 1/1/1
Interface 1/1/1 is up
Admin state is up
Link state: up for 2 days (since Sun Jun 21 05:30:22 UTC 2020)
Link transitions: 1
 Description: Backup data center link
 Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
 MTU 1500
 Type 1GbT
Full-duplex
 qos trust none
Speed 1000 Mb/s
 Auto-negotiation is on
 Flow-control: off
 Error-control: off
Energy-Efficient Ethernet is enabled
MDI mode: MDIX
    L3 Counters: Rx Enabled, Tx Enabled
Rate collection interval: 300 seconds
                               Tx
                     Rx
 Rates
                                                     Total
 _____

        Mbits/sec
        0.00
        0.00

        Kbits/sec
        0.00
        0.00

        Unicast
        0.00
        0.00

        Multicast
        0.00
        0.00

        Broadcast
        0.00
        0.00

        Utilization%
        0.00
        0.00

                                          0.00
                                                     0.00
                                                     0.00
                                                     0.00
                                                     0.00
 Statistics
                     Rx
                                     Τx
                                                   Total
 _____
               0
0
0
0
                             0
0
0
 Packets
 Unicast
                                                     0
                                                      0
                                     0
 Multicast
                                                      0
 Broadcast
                                     0
                                                      0
                      0
                                     0
                                                      0
Bytes
                      0
 Jumbos
                                     0
                                                      0
                      0
                                     0
                                                      0
 Dropped
Filtered
                      0
                                     0
                                                      0
Pause Frames
                   0
0
0
                                     0
                                                      0
                              0
0
n/a
0
n/a
n/a
L3 Packets
                                                      0
                                                      0
L3 Bytes
                      0
                                                      0
Errors
 CRC/FCS
                      0
                                                      0
 Collision n/a
Runts 0
                                                      0
                                                      0
 Giants 0
                                                       0
```

When the interface is currently linked at a downshifted speed:

```
switch(config-if) # show interface 1/1/1
```

```
Interface 1/1/1 is up
. . .
Auto-negotiation is on with downshift active
```

When the interface is currently linked with energy-efficient-ethernet negotiated:

Interface 1/1/1 is up
...
Energy-Efficient Ethernet is enabled

show interface dom

Syntax

show interface [<INTERFACE-ID>] dom [detail] [vsx-peer]

Description

Shows diagnostics information and alarm/warning flags for the optical transceivers (SFP, SFP+, QSFP+). This information is known as DOM (Digital Optical Monitoring). DOM information also consists of vendor determined thresholds which trigger high/low alarms and warning flags.

Command context

Manager (#)

Parameters

<INTERFACE-ID>

Specifies an interface. Format: member/slot/port.

detail

Show detailed information.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

On the 6400 Switch Series, interface identification differs.

switch# show interface dom

Port	Туре	Channel	Temperature (Celsius)	Voltage (Volts)	Tx Bias (mA)	Rx Power (mW/dBm)	Tx Power (mW/dBm)
1/1/1 1/1/2 1/1/3 1/1/4	SFP+SR SFP+SR SFP+DA3 QSFP+SR4	1 2 3 4	47.65 n/a 42.10 44.46 44.46 44.46 44.46	3.31 n/a 3.24 3.30 3.30 3.30 3.30 3.30	8.40 n/a 6.12 6.04 6.51 6.19	0.08, -10.96 n/a n/a 0.08, -10.96 0.08, -10.96 0.08, -10.96 0.08, -10.96	0.63, -2.49 n/a n/a 0.63, -1.95 0.63, -2.00 0.60, -2.16 0.63, -1.94

show interface energy-efficient ethernet

Syntax

show interface [<IFNAME>|<IFRANGE>] energy-efficient-ethernet

Description

Displays Energy-Efficient Ethernet information for the interface.

Command context

config

Parameters

<IFNAME>

Specifies the name of an interface on the switch. Use the format member/slot/port (for example, 1/1/1).

<IFRANGE>

Specifies the port identifier range of an interface on the switch. Use the format member/slot/port (for example, 1/1/1).

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

The following example shows when the interfaces are Energy-Efficient Ethernet capable:

Port	Enabled	Negotiated	Speed (MB/s)	TX Wake Time(us)	RX Wake Time (us)
1/1/1 1/1/2 1/1/3 1/1/4 1/1/5	no yes yes no yes	no yes yes no no	 100 1000 1000	 36 17 	 36 17

switch# show interface energy-efficient-ethernet

The following example shows when the interface is not Energy-Efficient Ethernet capable :

switch# show interface 1/1/1 energy-efficient-ethernet
Port 1/1/1 does not support Energy-Efficient-Ethernet

show interface transceiver

Syntax

show interface [<INTERFACE-ID>] transceiver [detail | threshold-violations] [vsx-peer]

Description

Displays information about transceivers present in the switch. The information shown varies for different transceiver types and manufacturers. Only basic information is shown for unsupported HPE and third-party transceivers installed in the switch and they are also identified with an asterisk in the output.

Command context

Manager (#)

Parameters

<INTERFACE-ID>

Specifies the name or range of an interface on the switch. Use the format member/slot/port (for example, 1/3/1).

detail

Show detailed information for the interfaces.

threshold-violations

Show threshold violations for transceivers.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

On the 6400 Switch Series, interface identification differs.

Showing summary transceiver information with identification of unsupported transceivers:

```
switch(config)# show interface transceiver
```

Port	Туре	Product Number	Serial Number	Part Number
1/1/1	SFP+SR	J9150A	MYxxxxxxx	1990-3657
1/1/2	SFP+ER*			
1/2/1	QSFP+SR4	JH233A	MYxxxxxxx	2005-1234
1/2/2	QSFP+ER4*			
1/3/1	SFP28DAC3	844477-B21	MYxxxxxxx	77fc-7ce7

* unsupported transceiver

Showing detailed transceiver information:

```
switch(config)# show interface transceiver detail
Transceiver in 1/1/1
Interface Name : 1/1/1
Type : SFP+SR
Connector Type : LC
Wavelength : 850nm
Transfer Distance : Om (SMF), 30m (OM1), 80m (OM2), 300m (OM3)
Diagnostic Support : DOM
Product Number : J9150A
Serial Number : MYxxxxxx
Part Number : 1990-3657
Status
Temperature : 47.65C
Voltage : 3.31V
```

```
Tx Bias : 8.40mA
  Rx Power : 0.08mW, -10.96dBm
Tx Power : 0.56mW, -2.49dBm
  Recent Alarms :
   Rx power low alarm
    Rx power low warning
  Recent Errors :
    Rx loss of signal
Transceiver in 1/1/2
  Interface Name : 1/1/2
   Type
                        : unknown
  Connector Type
Wavelength
                        : ??
                        : ??
  Transfer Distance : ??
  Diagnostic Support : ??
   Product Number : ??
Serial Number : ??
   Serial Number : ??
Transceiver in 1/2/1
  Interface Name : 1/2/1
Type : OSFP+
  Connector Type : MPO
Wavelength : 850pm
   Wavelength : 850nm
Transfer Distance : 0m (SMF), 0m (OM1), 0m (OM2), 100m (OM3)
   Diagnostic Support : DOM
   Product Number : JH233A
Serial Number : MYxxxxxx
Part Number : 2005-1234
Status
   Temperature : 44.46C
   Voltage : 3.30V
  _____
  Tx Bias Rx Power Tx Power
Channel# (mA) (mW/dBm) (mW/dBm)
  -----
            6.120.00, -inf0.63, -1.956.040.00, -inf0.63, -2.006.510.00, -inf0.60, -2.166.190.00, -inf0.63, -1.94
  1
  2
  3
  4
  Recent Alarms :
    Channel 1 :
       Rx power low alarm
       Rx power low warning
    Channel 2 :
       Rx power low alarm
       Rx power low warning
    Channel 3 :
       Rx power low alarm
       Rx power low warning
    Channel 4 :
       Rx power low alarm
       Rx power low warning
  Recent Errors :
    Channel 1 :
       Rx Loss of Signal
  Channel 2 :
```

```
Rx Loss of Signal
     Channel 3 :
        Rx Loss of Signal
     Channel 4 :
        Rx Loss of Signal
Transceiver in 1/2/2
   Interface Name : 1/2/2
   Туре
                            : unknown
   Connector Type : ??
Wavelength : ??
   Transfer Distance : ??
   Diagnostic Support : ??
   Product Number : ??
Serial Number : ??
Part Number : ??
Transceiver in 1/3/1
   Interface Name : 1/3/1
   Type : SFP28DAC3
Connector Type : Copper Pigtail
Transfer Distance : 0.00km (SMF), 0m (OM1), 0m (OM2), 0m (OM3)
   Diagnostic Support : None
   Product Number : 844477-B21
Serial Number : MYxxxxxx
Part Number : 77fc-7ce7
```

Showing detailed transceiver information with identification of unsupported transceivers:

```
switch# show interface transceiver detail
Transceiver in 1/1/2
Interface Name : 1/1/2
Type : SFP+ER (unsupported)
Connector Type : LC
Wavelength : 3590nm
Transfer Distance : 80m (SMF), 0m (OM1), 0m (OM2), 0m (OM3)
Diagnostic Support : DOM
Vendor Name : INNOLIGHT
Vendor Part Number : TR-PX15Z-NHP
Vendor Part Revision: 1A
Vendor Serial number: MYxxxxxx
Status
Temperature : 28.88C
Voltage : 3.30V
Tx Bias : 65.53mA
Rx Power : 0.00mW, -inf
Tx Power : 1.47mW, 1.67dBm
Recent Alarms:
Rx Power low warning
Recent Errors:
Rx loss of signal
```

Showing transceiver threshold-violations:

```
switch(config)# show interface transceiver threshold-violations
Port Type Channel Type(s) of Recent
Threshold Violation(s)
1/1/1 SFP+SR Tx bias high warning
```

1/1/2	SFP+ER*		50.52 mA > 40.00 mA ??
1/2/1	QSFP+SR4	1	Tx power low alarm
		2	-17.00 dBm < -0.50 dBm Tx bias low warning 3.12 mA < 4.00 mA
1/2/2 1/3/1	QSFP+ER4* SFP28DAC3		?? n/a

* unsupported transceiver

show ip interface

Syntax

show ip interface <INTERFACE-ID> [vsx-peer]

Description

Shows status and configuration information for an IPv4 interface.

Command context

Manager (#)

Parameters

<INTERFACE-ID>

Specifies the name of an interface. Format: member/slot/port.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

On the 6400 Switch Series, interface identification differs.

```
switch# show ip interface 1/1/1
Interface 1/1/1 is up
Admin state is up
Hardware: Ethernet, MAC Address: 70:72:cf:fd:e7:b4
IPv4 address 192.168.1.1/24
MTU 1500
RX
0 packets, 0 bytes
TX
0 packets, 0 bytes
```

show ip source-interface

Syntax

```
show ip source-interface {sflow | tftp | radius | tacacs | all}
    [vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows single source IP address configuration settings.

Command context

Manager (#)

Parameters

sflow | tftp | radius | tacacs | all

Shows single source IP address configuration settings for a specific protocol. The all option shows the global setting that applies to all protocols that do not have an address set.

vrf <VRF-NAME>

Specifies the name of a VRF.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing single source IP address configuration settings for sFlow:

```
switch# show ip source-interface sflow
```

```
Source-interface Configuration Information

Protocol Source Interface

sflow 10.10.10.1
```

Showing single source IP address configuration settings for all protocols:

switch# show ip source-interface all

Source-interface Configuration Information Protocol Source Interface all 1/1/1

show ipv6 interface

Syntax

show ipv6 interface <INTERFACE-ID> [vsx-peer]

Description

Shows status and configuration information for an IPv6 interface.

Command context

Manager (#)

Parameters

<INTERFACE-ID>

Specifies an interface ID. Format: member/slot/port.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

On the 6400 Switch Series, interface identification differs.

```
switch# show ipv6 interface 1/1/1
```

```
Interface 1/1/1 is up
Admin state is up
 IPv6 address:
    2001:0db8:85a3:0000:0000:8a2e:0370:7334/24 [VALID]
IPv6 link-local address: fe80::1e98:ecff:fee3:e800/64 (default)[VALID]
 IPv6 virtual address configured: none
 IPv6 multicast routing: disable
IPv6 Forwarding feature: enabled
 IPv6 multicast groups locally joined:
   ff02::ff70:7334 ff02::ffe3:e800 ff02::1 ff02::1:ff00:0
   ff02::2
 IPv6 multicast (S,G) entries joined: none
 IPv6 MTU: 1524 (using link MTU)
 IPv6 unicast reverse path forwarding: none
 IPv6 load sharing: none
 RX
          0 packets, 0 bytes
 ТΧ
          0 packets, 0 bytes
```

show ipv6 source-interface

Syntax

```
show ipv6 source-interface {sflow | tftp | radius | tacacs | all}
    [vrf <VRF-NAME>] [vsx-peer]
```

Description

Shows single source IP address configuration settings.

Command context

Manager (#)

Parameters

```
sflow | tftp | radius | tacacs | all
```

Shows single source IP address configuration settings for a specific protocol. The all option shows the global setting that applies to all protocols that do not have an address set.

vrf <VRF-NAME>

Specifies the name of a VRF.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing single source IP address configuration settings for sFlow:

```
switch# show ipv6 source-interface sflow
```

Source-interface Configuration Information Protocol Source Interface sflow 2001:DB8::1

Showing single source IP address configuration settings for all protocols:

switch# show ipv6 source-interface all

```
Source-interface Configuration Information

Protocol Source Interface

all 1/1/1
```

shutdown

Syntax

shutdown

no shutdown

Description

Disables an interface. Interfaces are disabled by default when created.

The no form of this command enables an interface.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

Disabling an interface:

switch(config-if) # shutdown

Enabling an interface:

switch(config-if) # no shutdown
VLANs are primarily used to provide network segmentation at layer 2. VLANs enable the grouping of users by logical function instead of physical location. They make managing bandwidth usage within networks possible by:

- Allowing grouping of high-bandwidth users on low-traffic segments
- Organizing users from different LAN segments according to their need for common resources and individual protocols
- Improving traffic control at the edge of networks by separating traffic of different protocol types.
- Enhancing network security by creating subnets to control in-band access to specific network resources

VLANs are generally assigned on an organizational basis rather than on a physical basis. For example, a network administrator could assign all workstations and servers used by a particular workgroup to the same VLAN, regardless of their physical locations.

Hosts in the same VLAN can directly communicate with one another. A router or a Layer 3 switch is required for hosts in different VLANs to communicate with one another.

VLANs help reduce bandwidth waste, improve LAN security, and enable network administrators to address issues such as scalability and network management.

VLAN interfaces

Access interface

An access interface carries traffic for a single VLAN ID. Access interfaces are generally used to connect end devices that do not support VLANs to the network. The devices connected to an access interface are not aware of the VLAN. Access interface can carry traffic on only one VLAN, either tagged or untagged.

Example

On the 6400 Switch Series, interface identification differs.

This example shows ingress and egress traffic behavior for an access interface.



- An ingress tagged frame with VLAN ID of 100 arrives on interface 1/2/32. The switch accepts this frame and sends it to its target address on interface 1/1/32, where it egresses untagged.
- An ingress untagged frame arrives on interface 1/2/32. The switch accepts this frame and sends it to its target address on interface 1/1/32, where it egresses untagged.
- An ingress tagged frame with VLAN ID of 50 arrives on interface 1/2/32. The switch drops this frame as VLAN ID 50 is not configured on the interface.

Trunk interface

A trunk interface can carry traffic for one or more VLAN IDs. In most cases, a trunk interface is used to transport data to other switches or routers.

A trunk interface has two important settings:

- Native VLAN: This is the VLAN to which incoming untagged traffic is assigned. Only one VLAN can be assigned as the native VLAN. By default, VLAN 1 is assigned as the native VLAN for all trunk interfaces.
- Allowed VLANs: This is the list of VLANs that can be transported by the trunk. If the native VLAN is not included in the allowed list, all untagged frames that ingress on the trunk interface are dropped.

Example 1: Native untagged VLAN

On the 6400 Switch Series, interface identification differs.

This example shows ingress and egress traffic behavior when a trunk interface has a native untagged VLAN.



- An ingress tagged frame with VLAN ID of 25 arrives on interface 1/1/1. The switch accepts this frame and sends it to its target address on interface 1/1/2, where it egresses with a VLAN ID of 25 untagged since port 1/1/2 is configured with a native VLAN ID of 25.
- An ingress untagged frame arrives on interface 1/1/1. The switch accepts this frame and sends it to its target address on interface 1/1/2, where it egresses with a VLAN ID of 25 untagged since port 1/1/2 is configured with a native VLAN ID of 25.
- An ingress tagged frame with VLAN ID of 4 arrives on interface 1/1/1. The switch accepts this frame and sends it to its target address on interface 1/1/2, where it egresses with a VLAN ID of 4 tagged since port 1/1/2 is configured to allow traffic with a VLAN ID of 4.
- An ingress tagged frame with VLAN ID of 50 arrives on interface 1/1/1. The switch drops this frame as VLAN ID 50 is not in the allowed list for interface 1/1/1.

Example 2: Native tagged VLAN

On the 6400 Switch Series, interface identification differs.

This example shows ingress and egress traffic behavior when a trunk interface has a native tagged VLAN.



- An ingress tagged frame with VLAN ID of 6 arrives on interface 1/1/13. The switch accepts this frame and sends it to its target address on interface 1/1/21, where it egresses with a VLAN ID of 6 tagged since port 1/1/2 is configured with a native VLAN ID of 6.
- An ingress untagged frame arrives on interface 1/1/13. The switch drops this frame since the interface is configured as native tagged (all untagged frames a dropped in such a configuration).
- An ingress tagged frame with VLAN ID of 17 arrives on interface 1/1/13. The switch accepts this frame and sends it to its target address on interface 1/1/21, where it egresses with a VLAN ID of 17 tagged since port 1/1/2 is configured to allow traffic with a VLAN ID of 17.
- An ingress tagged frame with VLAN ID of 50 arrives on interface 1/1/13. The switch drops this frame as VLAN ID 50 is not in the allowed list for interface 1/1/13.

Traffic handling summary

VLAN configuration	Ingress traffic	Egress traffic
Access interface with:	1. Untagged	1. Untagged on VLAN X
VLAN ID = X	2. Tagged with VLAN ID = X	2. Untagged on VLAN X
	3. Tagged with any other VLAN ID	3. Dropped
 Trunk interface with: Untagged Native VLAN ID = X Allowed VLAN IDs = X, Y, Z 	 Untagged Tagged with VLAN ID = X Tagged with VLAN ID = Y Tagged with VLAN ID = Z Tagged with any other VLAN ID 	 Untagged on VLAN X Untagged on VLAN X Tagged on VLAN Y Tagged on VLAN Z Dropped

Table Continued

VLAN configuration	Ingress traffic	Egress traffic
Trunk interface with:	1. Untagged	1. Untagged on VLAN X
Untagged Native VLAN ID = X	2. Tagged with VLAN ID = X	2. Untagged on VLAN X
Allowed VLAN IDs = ALL	3. Tagged with a VLAN ID defined	3. Tagged on the matching VLAN
	on the switch	4. Dropped
	 Tagged with a VLAN ID not defined on the switch 	
Trunk interface with:	1. Untagged	1. Dropped
• Tagged Native VLAN ID = X	2. Tagged with VLAN ID = X	2. Tagged on VLAN X
• Allowed VLAN IDs = X, Y, Z	3. Tagged with VLAN ID = Y	3. Tagged on VLAN Y
	4. Tagged with VLAN ID = Z	4. Tagged on VLAN Z
	5. Tagged with any other VLAN ID	5. Dropped
Trunk interface with:	1. Untagged	1. Dropped
• Tagged Native VLAN ID = X	2. Tagged with VLAN ID = X	2. Tagged on VLAN X
Allowed VLAN IDs = ALL	3. Tagged with a VLAN ID defined	3. Tagged on the matching VLAN
	on the switch	4. Dropped
	 Tagged with a VLAN ID not defined on the switch 	
Trunk interface with:	1. Untagged	1. Dropped
Untagged Native VLAN ID = A	2. Tagged with VLAN ID = X	2. Tagged on VLAN X
Allowed VLAN IDs = X, Y, Z	3. Tagged with VLAN ID = Y	3. Tagged on VLAN Y
	4. Tagged with VLAN ID = Z	4. Tagged on VLAN Z
	5. Tagged with any other VLAN ID	5. Dropped

Comparing VLAN commands on PVOS, Comware, and AOS-CX

The following examples compare the commands needed to implement typical VLAN configurations on different HPE products.

On the 6400 Switch Series, interface identification differs.

AOS-CX	PVOS	Comware	
<pre>interface 1/1/1 vlan trunk native 1 vlan trunk allowed 10,30,50 A native VLAN must be defined on the switch. By default, this is VLAN 1. Since only VLANs 10, 30, and 50 are allowed on the trunk, all untagged traffic is dropped.</pre>	interface Al tagged vlan 10,30,50 no untagged vlan 1	<pre>Interface G1/0/1 port link type trunk port trunk permit vlan 10,30,50 port trunk pvid vlan 1 PVID 1 is the default setting.</pre>	
		_	
AOS-CX interface 1/1/1 vlan trunk native 10 tag vlan trunk allowed 10,30,50	PVOS Not directly supported in PVOS. Scenario 1 is a workaround if there is no need to support untagged	Comware Not directly supported in Comware. A possible workaround is: interface g1/0/1	

Same untag

trunk allowed 10,30,50 e as scenario 1, but allows gged traffic on VLAN 10 as well.	need to support untagged traffic.	<pre>interface g1/0/1 port link-mode bridge port link-type hybrid port hybrid protocol-vlan vlan 10</pre>
		port hybrid vlan 10 tagged port hybrid vlan 30 tagged port hybrid vlan 50 tagged

AOS-CX	PVOS	Comware
<pre>interface 1/1/1 vlan trunk native 5 vlan trunk allowed 5, 10, 30, 50 VLAN 5 must be allowed on the trunk so that untagged traffic is not dropped.</pre>	interface A1 untagged vlan 5 no tagged vlan 10,30,50	<pre>interface G1/0/1 Port link-mode bridge port link-type trunk port trunk pvid vlan 5 port trunk permit vlan 5,10,30,50 link-mode is only needed on later Comware 7 devices. 5930 is port link- mode route by default. 5900 is bridge by default.</pre>

ArubaOS-CX	PVOS	Comware
interface 1/1/1 vlan access 5	interface Al untagged vlan 5	interface G1/0/0 port link-mode bridge port access vlan 5

VLAN numbering

VLANs are numbered in the range 1 to 4094.

By default, VLAN 1 (the default VLAN) is associated with all interfaces on the switch. VLAN 1 cannot be removed from the switch.

Configuring VLANs

Creating and enabling a VLAN

Procedure

- 1. Switch to the configuration context with the command config.
- 2. Create a new VLAN with the command vlan.

Example

This example creates **VLAN 10**. The VLAN is enabled by default.

```
switch# config
switch(config)# vlan 10
switch(config-vlan-10)#
```

Disabling a VLAN

Procedure

- 1. Switch to configuration context with the command config.
- 2. Switch to configuration context for the VLAN you want to disable with the command vlan.
- 3. Disable the VLAN with the command shutdown.

Example

This example disables **VLAN** 10.

```
switch(config)# config
switch(config)# vlan 10
switch(config-vlan-10)# shutdown
```

Assigning a VLAN to an interface

To use a VLAN, it must be assigned to an interface on the switch. VLANs can only be assigned to non-routed (layer 2) interfaces. All interfaces are routed (layer 3) by default when created. Use the no routing command to disable routing on an interface.

Assigning a VLAN ID to an access interface

Prerequisites

At least one defined VLAN.

Procedure

- 1. Switch to configuration context with the command config.
- 2. Switch to the interface that you want to define as an access interface with the command interface.
- 3. Configure the access interface and assign a VLAN ID with the command vlan access.

Examples

On the 6400 Switch Series, interface identification differs.

This example configures interface 1/1/2 as an access interface with VLAN ID set to 20.

```
switch# config
switch(config)# vlan 20
switch(config-vlan-20)# exit
switch(config)# interface 1/1/2
switch(config-if)# vlan access 20
```

This example configures LAG 1 as an access interface with VLAN ID set to 30.

```
switch# config
switch(config)# vlan 30
switch(config-vlan-30)# exit
switch(config)# interface lag 1
switch(config-lag-if)# no shutdown
switch(config-lag-if)# vlan access 30
```

Assigning a VLAN ID to a trunk interface

Prerequisites

At least one defined VLAN.

Procedure

- 1. Switch to configuration context with the command config.
- 2. Switch to the interface that you want to define as a trunk interface with the command interface.
- 3. Configure the trunk interface and assign a VLAN ID with the command vlan trunk allowed.

Examples

On the 6400 Switch Series, interface identification differs.

This example configures interface 1/1/2 as a trunk interface allowing traffic with VLAN ID set to 20.

```
switch# config
switch(config)# vlan 20
switch(config-vlan-20)# exit
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed 20
```

This example configures interface 1/1/2 as a trunk interface allowing traffic with VLAN IDs 2, 3, and 4.

```
switch# config
switch(config)# vlan 2,3,4
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed 2,3,4
```

This example configures interface 1/1/2 as a trunk interface allowing traffic with VLAN IDs 2 to 8.

```
switch# config
switch(config)# vlan 2-8
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed 2-8
```

This example configures interface 1/1/2 as a trunk interface allowing traffic with VLAN IDs 2 to 8 and 10.

```
switch# config
switch(config)# vlan 2-8,10
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed 2-8,10
```

This example configures interface **1/1/2** as a trunk interface allowing traffic on all configured VLAN IDs (20-100).

```
switch# config
switch(config)# vlan 20-100
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed all
```

Assigning a native VLAN ID to a trunk interface

Prerequisites

At least one defined VLAN.

Procedure

- 1. Switch to configuration context with the command config.
- **2.** Switch to the trunk interface to which you want to assign the native VLAN ID with the command interface.
- **3.** Assign the native VLAN ID with the command vlan trunk native. If tagging is required, use the command vlan trunk native tag.
- 4. Allow traffic tagged with the native VLAN ID to be transported by the trunk using the command vlan trunk allowed.

Example

On the 6400 Switch Series, interface identification differs.

This example assigns native VLAN ID **20** to trunk interface **1/1/2**.

```
switch# config
switch(config)# vlan 20
switch(config-vlan-20)# exit
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk native 20
```

This example assigns native VLAN ID **40** to trunk interface **1/1/5**, enables tagging, and allows traffic with VLAN ID 40 to be transported by the trunk.

```
switch# config
switch(config)# vlan 40
switch(config-vlan-40)# exit
switch(config)# interface 1/1/5
```

Viewing VLAN configuration information

Prerequisites

At least one defined VLAN.

Procedure

- 1. View a summary of VLAN configuration information with the command show vlan summary.
- 2. View VLAN configuration settings with the command show vlan.
- 3. View VLANs configured for a specific layer 2 interface with the command show vlan port.
- 4. View the commands used to configure VLAN settings with the command show running-config interface.

Example

On the 6400 Switch Series, interface identification differs.

This example displays a summary of all VLANs.

switch# show vlan summary

```
Number of existing VLANs: 11
Number of static VLANs: 11
Number of dynamic VLANs: 0
```

This example displays configuration information for all defined VLANs.

```
switch# show vlan
                                              _____
                                       Type Interfaces
VLAN Name
                Status Reason
_____
                  _____
1 DEFAULT_VLAN_1 up ok
2 UserVLAN1 up ok
3 UserVLAN2 up ok
                                               static 1/1/3-1/1/4
static 1/1/1,1/1/3,1/1/5
static 1/1/2-1/1/3,1/1/5-1/1/6
                      up ok
up ok
up ok
up ok
up ok
up ok
  UserVLAN2
3
5 UserVLAN3
10 TestNetwork
11 VLAN11
                                               static 1/1/3
                                              static 1/1/3,1/1/5
11
     VLAN11
                                               static 1/1/3
                                              static 1/1/3,1/1/6,lag1-lag2
static 1/1/3,1/1/6
static 1/1/3,1/1/6
12
     VLAN12
                               ok
13
     VLAN13
                        up
14
     VLAN14
                               ok
                       up
20 ManagementVLAN down admin_down static 1/1/3,1/1/10
```

This example displays configuration information for **VLAN 2**.

switc	h# show vlan 2				
VLAN	Name	Status	Reason	Туре	Interfaces
2	UserVLAN1	up	ok	static	1/1/1,1/1/3,1/1/5

This example displays the VLANs configured on interface 1/1/3.

```
switch# show vlan port 1/1/3
```

```
-----
```

VLAN	Name	Mode
1	DEFAULT_VLAN_1	native-untagged
2	UserVLAN1	trunk
3	UserVLAN2	trunk
5	UserVLAN3	trunk
10	TestNetwork	trunk
11	VLAN11	trunk
12	VLAN12	trunk
13	VLAN13	trunk
14	VLAN14	trunk
20	ManagementVLAN	trunk

This example displays VLAN configuration commands for interface 1/1/16.

```
switch# show running-config interface 1/1/16
interface 1/1/16
no routing
vlan trunk native 108
vlan trunk allowed all
exit
```

VLAN scenario

This scenario shows how to assign VLAN IDs to access and trunk interfaces for the following deployment:



On the 6400 Switch Series, interface identification differs.

In this scenario, VLANs are used to isolate the traffic from different devices.

- VLAN 25 carries tagged and untagged traffic from computers connected to switch B.
- VLAN 4 carries tagged traffic from computers connected to switch B.

- VLAN 6 carries tagged and untagged traffic from computers connected to switch C.
- VLAN 17 carries tagged traffic from computers connected to switch C.
- VLAN 100 carries untagged traffic from the server.

Procedure

- 1. Execute the following commands on switch A and B.
 - a. Create VLANs 4 and 25.

```
switch# config
switch(config)# vlan 4,25
```

b. Define LAG **1** and assign the VLANs to it.

```
switch(config)# interface lag 1
switch(config-lag-if)# no shutdown
switch(config-lag-if)# vlan trunk native 25
switch(config-lag-if)# vlan trunk allowed 4,25
```

c. Add ports 1/1/1 and 1/2/1 to LAG 1.

```
switch(config-lag-if)# interface 1/1/1
switch(config-if)# no shutdown
switch(config-if)# lag 1
switch(config-if)# interface 1/2/1
switch(config-if)# no shutdown
switch(config-if)# lag 1
```

- 2. Execute the following commands on switch A and C.
 - a. Create VLANs 6 and 17.

```
switch# config
switch(config)# vlan 6,17
```

b. Define LAG 3 and assign the VLANs to it.

```
switch(config)# interface lag 3
switch(config-lag-if)# no shutdown
switch(config-lag-if)# vlan trunk native 6 tag
switch(config-lag-if)# vlan trunk allowed 6,17
```

c. Add ports **1/1/13** and **1/2/13** to LAG 3.

```
switch(config-lag-if)# interface 1/1/13
switch(config-if)# no shutdown
switch(config-if)# lag 3
switch(config-if)# interface 1/2/13
switch(config-if)# no shutdown
switch(config-if)# no routing
switch(config-if)# lag 3
```

- **3.** Execute the following commands on switch A to configure the connection to the server.
 - a. Configure interface 1/2/13 as an access interface with VLAN ID set to 100.

```
switch# config
switch (config)# vlan 100
switch (config-vlan-100)# interface 1/2/32
switch (config-if)# no shutdown
switch (config-if)# vlan access 100
switch (config-if)# exit
```

4. Verify VLAN configuration by running the command show vlan. For example:

switch# show vlan

VLAN	Name	Status	Reason	Туре	Interfaces
1 4 6 17 25 100	DEFAULT_VLAN_1 VLAN4 VLAN6 VLAN17 VLAN25 VLAN100	down up up up up up	no_member_port ok ok ok ok ok ok	default static static static static static static	lag1 lag3 lag3 lag1 1/2/32

5. Verify that the connection to the DHCP server is sending/receiving data with the command show interface. Check that the **Rx** and **Tx** fields are incrementing. For example:

```
switch# show interface 1/2/32
Interface 1/2/32 is up
Admin state is up
Description:
Hardware: Ethernet, MAC Address: 70:72:cf:3a:8a:0b
MTU 1500
Type SFP+LR
qos trust none
 Speed 10000 Mb/s
Auto-Negotiation is off
 Input flow-control is off, output flow-control is off
VLAN Mode: access
Access VLAN: 100
 Rx
                               1280 bytes
0 dropped
           20 input packets
           0 input error
           0 CRC/FCS
 Τx
           9 output packets
                                        1054 bytes
            0 input error
                                         0 dropped
            0 collision
```

6. Verify LAG interface configuration with the command show interface. Check the fields admin state, MAC address, Aggregated-interfaces, VLAN Mode, Native VLAN, Allowed VLAN, Rx count, and Tx count. For example:

```
switch# show interface lag1
Aggregate-name lag1
Description :
Admin state : up
MAC Address : 94:f1:28:21:63:00
Aggregated-interfaces : 1/1/1 1/2/1
Aggregation-key : 1
Speed 1000 Mb/s
L3 Counters: Rx Disabled, Tx Disabled
qos trust none
VLAN Mode: native-untagged
Native VLAN: 25
Allowed VLAN List: 4,25
```

Rx 10 input packets 1280 bytes 0 input error 0 dropped 0 CRC/FCS Тх 8 output packets 980 bytes 0 input error 0 dropped 0 collision switch# show interface lag3 Aggregate-name lag3 Description : Admin state : up : 94:f1:28:21:63:00 Aggregated-interfaces : 1/1/13 1/2/13 Aggregation-key : 3 Speed 1000 Mb/s L3 Counters: Rx Disabled, Tx Disabled qos trust none VLAN Mode: native-tagged Native VLAN: 6 Allowed VLAN List: 6,17 Rx 19 input packets 1280 bytes 0 input error 0 dropped 0 CRC/FCS Τx 15 output packets 1000 bytes 0 input error 0 dropped

- 0 Collision
- 7. Verify the physical interfaces (1/1/1, 1/2/1, 1/1/13, 1/2/13) with the command show interface. Check that the **Rx** and **Tx** fields are incrementing. For example:

```
switch# show interface 1/1/1
Interface 1/1/1 is up
Admin state is up
 Description:
Hardware: Ethernet, MAC Address: 94:f1:28:21:73:ff
MTU 1500
Type SFP+LR
 qos trust none
 Speed 1000 Mb/s
 Auto-Negotiation is off
 Input flow-control is off, output flow-control is off
 Rx
            6 input packets
                                         620 bytes
            0 input error
                                         0 dropped
            0 CRC/FCS
 Τx
            4 output packets
                                         422 bytes
            0 input error
                                         0 dropped
0
     collision
```

VLAN commands

description

Syntax

description <DESCRIPTION>

Description

Specifies a descriptive for a VLAN.

Command context

config-vlan-<VLAN-ID>

Parameters

<DESCRIPTION>

Specifies a description for the VLAN.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Assigning a description to VLAN 20:

```
switch(config)# vlan 20
switch(config-vlan-20)# description primary
```

name

Syntax

name <VLAN-NAME>

Description

Associates a name with a VLAN.

Command context

```
config-vlan-<VLAN-ID>
```

Parameters

<VLAN-NAME>

Specifies a name for a VLAN. Length: 1 to 32 alphanumeric characters, including underscore (_) and hyphen (-).

Authority

Administrators or local user group members with execution rights for this command.

Examples

Assigning the name **backup** to VLAN 20:

```
switch(config)# vlan 20
switch(config-vlan-20)# name backup
```

show capacities svi-count

Syntax

```
show capacities svi-count
```

Description

Shows the maximum number of SVIs supported by the switch.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing switch SVI capacity:

show vlan

Syntax

```
show vlan [<VLAN-ID>] [vsx-peer]
```

Description

Displays configuration information for all VLANs or a specific VLAN.

Command context

Manager (#)

Parameters

<VLAN-ID>

Specifies a VLAN ID.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

On the 6400 Switch Series, interface identification differs.

Displaying configuration information for VLAN 2:

switc	h# show vlan 2				
VLAN	Name	Status	Reason	Туре	Interfaces
2	UserVLAN1	up	ok	static	1/1/1,1/1/3,1/1/5

Displaying configuration information for all defined VLANs:

switch# show vlan

VLAN	Name	Status	Reason	Туре	Interfaces
1 2 3 5 10 11 12 13 14 20	DEFAULT_VLAN_1 UserVLAN1 UserVLAN2 UserVLAN3 TestNetwork VLAN11 VLAN12 VLAN13 VLAN14 ManagementVLAN	up up up up up up up up up down	ok ok ok ok ok ok ok ok ok ok admin_down	static static static static static static static static static static static	1/1/3-1/1/4 1/1/1,1/1/3,1/1/5 1/1/2-1/1/3,1/1/5-1/1/6 1/1/3 1/1/3,1/1/5 1/1/3 1/1/3,1/1/6,lag1-lag2 1/1/3,1/1/6 1/1/3,1/1/6 1/1/3,1/1/10

show vlan port

Syntax

show vlan port <INTERFACE-ID> [vsx-peer]

Description

Displays the VLANs configured for a specific layer 2 interface.

Command context

Manager (#)

Parameters

<INTERFACE-ID>

Specifies an interface ID. Format: member/slot/port.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

On the 6400 Switch Series, interface identification differs.

Displaying the VLANs configured on interface 1/1/3:

switch# show vlan port 1/1/3 _____ VLAN Name Mode _____ 1 default vlan 1 native-untagged 2 UserVLAN1 trunk 3 trunk UserVLAN2 5 UserVLAN3 trunk 10 TestNetwork trunk 11 VLAN11 trunk 12 VLAN12 trunk 13 VLAN13 trunk

trunk trunk

show vlan summary

Syntax

show vlan summary [vsx-peer]

Description

Displays a summary of the VLAN configuration on the switch.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying a summary of the VLAN configuration on the switch:

```
switch# show vlan summary
Number of existing VLANs: 11
Number of static VLANs: 11
Number of dynamic VLANs: 0
```

show vlan translation

Syntax

show vlan translation [interface <INTERFACE-NAME>] [vsx-peer]

Description

Shows a summary of all VLAN translations rules defined on the switch, or the rules defined for a specific interface.

Command context

Manager (#)

Parameters

interface <INTERFACE-NAME>

Specifies the name of a layer 2 interface. Format: member/slot/port.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

On the 6400 Switch Series, interface identification differs.

Displaying a summary of all VLAN translations rules defined on the switch:

switch#	show	vlan	translation
---------	------	------	-------------

Interface	VLAN-1	VLAN-2
1/1/5 1/1/5 1/1/5 1/1/6	10 30 50 100	20 40 100 200

Total number of translation rules : 4

Displaying a summary of all VLAN translations rules defined on interface 1/1/5:

switch# show vlan translation interface 1/1/5

Interface	VLAN-1	VLAN-2	
1/1/5 1/1/5	10 30	20 40	
1/1/5	50	100	

shutdown

Syntax

shutdown

no shutdown

Description

Disables a VLAN. (By default, a VLAN is automatically enabled when it is created with the vlan command.) The no form of this command enables a VLAN.

Command context

config-vlan-<VLAN-ID>

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling VLAN 20:

switch(config)# vlan 20
switch(config-vlan-20)# no shutdown

Disabling VLAN 20:

switch(config) # vlan 20
switch(config-vlan-20) # shutdown

system vlan-client-presence-detect

Supported on the 6300 and 6400 Switch Series only.

Syntax

system vlan-client-presence-detect

no system vlan-client-presence-detect

Description

Enables VNI mapped VLANs when detecting the presence of a client. When enabled, VNI mapped VLANs are *up* only if there are authenticated clients on the VLAN, or if the VLAN has statically configured ports and those ports are *up*. When not enabled, VNI mapped VLANs are always *up*.

The no form of this command disables detection of clients on VNI mapped VLANs.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling detection of clients:

switch(config)# system vlan-client-presence-detect

Disabling detection of clients:

switch(config) # no system vlan-client-presence-detect

vlan

Syntax

vlan <VLAN-LIST>

no vlan *<VLAN-LIST>*

Description

Creates a VLAN and changes to the config-vlan-id context for the VLAN. By default, the VLAN is enabled. To disable a VLAN, use the no shutdown command.

If the specified VLAN exists, this command changes to the config-vlan-id context for the VLAN. If a range of VLANs is specified, the context does not change.

The no form of this command removes a VLAN. VLAN 1 is the default VLAN and cannot be deleted.

Command context

config

Parameters

<VLAN-LIST>

Specifies a single ID, or a series of IDs separated by commas (2, 3, 4), dashes (2-4), or both (2-4,6). Range: 1 to 4094.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating VLAN 20:

switch(config)# vlan 20
switch(config-vlan-20)#

Removing VLAN 20:

switch(config) # no vlan 20

Creating VLANs 2 to 8 and 10:

switch(config) # vlan 2-8,10

Removing VLANs 2 to 8 and 10:

switch(config)# no vlan 2-8,10

vlan access

Syntax

vlan access <VLAN-ID>

no vlan access [<VLAN-ID>]

Description

Creates an access interface and assigns an VLAN ID to it. Only one VLAN ID can be assigned to each access interface.

VLANs can only be assigned to a non-routed (layer 2) interface or LAG interface. By default, all interfaces are routed (layer 3) when created. Use the no routing command to disable routing on an interface and change the interface to a layer 2 interface.

The no form of this command removes an access VLAN from the interface in the current context and sets it to the default VLAN ID of 1.

Command context

config-if

Parameters

<VLAN-ID>

Specifies a single ID, or a series of IDs separated by commas (2, 3, 4), dashes (2-4), or both (2-4,6). Range: 1 to 4094.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs. Configuring interface **1/1/2** as an access interface with VLAN ID set to **20**:

switch(config) # interface 1/1/2

switch(config-if) # vlan access 20

Removing VLAN ID 20 from interface 1/1/2:

switch(config)# interface 1/1/2
switch(config-if)# no vlan access 20

or:

switch(config)# interface 1/1/2
switch(config-if)# no vlan access

vlan translate

Syntax

vlan translate <VLAN-1> <VLAN-2>

no vlan translate <VLAN-1> <VLAN-2>

Description

Defines a bidirectional VLAN translation rule that maps an external VLAN ID to an internal VLAN ID on a LAG or layer 2 interface. Applies to both incoming and outgoing traffic.

The no form of this command removes an existing VLAN translation rule on the current interface.



NOTE: VLAN translation and MVRP cannot be enabled on the same interface.

Command context

```
config-if
config-lag-if
```

```
Parameters </Parameters </Param
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

Translates external VLAN 200 to internal VLAN 20 on interface 1/1/2.

```
switch# config
switch(config)# vlan 20
switch(config-vlan-20)# exit
switch(config)# interface 1/1/2
switch(config-if)# no routing
switch(config-if)# vlan trunk allowed 20
switch(config-if)# vlan translate 200 20
```

Translates external VLANs 100 and 300 to internal VLANs 10 and 20 on interface 1/1/2.

```
switch# config
switch(config)# vlan 10,30
switch(config-vlan-20)# exit
switch(config)# interface 1/1/2
switch(config-if)# no routing
switch(config-if)# vlan trunk allowed 10,30
switch(config-if)# vlan translate 100 10
switch(config-if)# vlan translate 300 30
```

vlan trunk allowed

Syntax

vlan trunk allowed [<VLAN-LIST> | all]

```
no vlan trunk allowed [<VLAN-LIST>]
```

Description

Assigns a VLAN ID to an trunk interface. Multiple VLAN IDs can be assigned to a trunk interface. These VLAN IDs define which VLAN traffic is allowed across the trunk interface.

VLANs can be assigned only to a non-routed (layer 2) interface or LAG interface. By default, all interfaces are routed (layer 3) when created. Use the no routing command to disable routing on an interface.

The no form of this command removes one or more VLAN IDs from a trunk interface. When the last VLAN is removed from a trunk interface, the interface continues to operate in trunk mode, and will trunk all the VLANs currently defined on the switch, and any new VLANs defined in the future. To disable the trunk interface, use the command <u>shutdown</u>.

Command context

config-if

Parameters

<VLAN-LIST>

Specifies a single ID, or a series of IDs separated by commas (2, 3, 4), dashes (2-4), or both (2-4,6). Range: 1 to 4094.

all

Configures the trunk interface to allow all the VLANs currently configured on the switch and any new VLANs that are configured in the future.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Assigning VLANs 2, 3, and 4 to trunk interface 1/1/2:

switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed 2,3,4

Assigning VLAN IDs 2 to 8 to trunk interface 1/1/2:

```
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed 2-8
```

Assigning VLAN IDs 2 to 8 and 10 to trunk interface 1/1/2:

```
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk allowed 2-8,10
```

Removing VLAN IDs 2, 3, and 4 from trunk interface 1/1/2:

```
switch(config)# interface 1/1/2
switch(config-if)# no vlan trunk allowed 2,3,4
```

Removing all VLANs assigned to trunk interface 1/1/2:

```
switch(config)# interface 1/1/2
switch(config-if)# no vlan trunk allowed
```

vlan trunk native

Syntax

vlan trunk native <VLAN-ID>

no vlan trunk native [<VLAN-ID>]

Description

Assigns a native VLAN ID to a trunk interface. By default, VLAN ID 1 is assigned as the native VLAN ID for all trunk interfaces. VLANs can only be assigned to a non-routed (layer 2) interface or LAG interface. Only one VLAN ID can be assigned as the native VLAN.



NOTE: When a native VLAN is defined, the switch automatically executes the vlan trunk allowed all command to ensure that the default VLAN is allowed on the trunk. To only allow specific VLANs on the trunk, issue the vlan trunk allowed command specifying only specific VLANs.

The no form of this command removes a native VLAN from a trunk interface and assigns VLAN ID 1 as its native VLAN.

Command context

config-if

Parameters

<VLAN-ID>

Specifies a VLAN ID. Range: 1 to 4094.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Assigning native VLAN ID 20 to trunk interface 1/1/2:

```
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk native 20
```

Removing native VLAN **20** from trunk interface **1/1/2** and returning to the default VLAN 1 as the native VLAN.

```
switch(config)# interface 1/1/2
switch(config-if)# no vlan trunk native 20
```

or:

```
switch(config)# interface 1/1/2
switch(config-if)# no vlan trunk native
```

Assigning native VLAN ID **20** to trunk interface **1/1/2** and then removing it from the list of allowed VLANs. (Only allow VLAN 10 on the trunk.)

```
switch(config)# interface 1/1/2
switch(config-if)# vlan trunk native 20
switch(config-if)# vlan trunk allowed 10
```

vlan trunk native tag

Syntax

vlan trunk native <VLAN-ID> tag

no vlan trunk native <VLAN-ID> tag

Description

Enables tagging on a native VLAN. Only incoming packets that are tagged with the matching VLAN ID are accepted. Incoming packets that are untagged are dropped except for BPDUs. Egress packets are tagged.

The no form of this command removes tagging on a native VLAN.

Command context

config-if

Parameters

<VLAN-ID>

Specifies the number of a VLAN. Range: 1 to 4094.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs. Enabling tagging on native VLAN 20 on trunk interface 1/1/2: switch(config)# interface 1/1/2
switch(config-if)# vlan trunk native 20
switch(config-if)# vlan trunk native 20 tag

Removing tagging on native VLAN 20 assigned to trunk interface 1/1/2:

```
switch(config)# interface 1/1/2
switch(config-if)# no vlan trunk native 20 tag
```

Enabling tagging on native VLAN 20 assigned to LAG trunk interface 2:

```
switch(config)# interface lag 2
switch(config-lag-if)# vlan trunk native 20
switch(config-lag-if)# vlan trunk native 20 tag
```

voice

Syntax

voice

no voice

Description

Configures a VLAN as a voice VLAN.

The no form of this command removes voice configuration from a VLAN.

Command context

config-vlan-<VLAN-ID>

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring VLAN 10 as a voice VLAN:

switch(config)# vlan 10
switch(config-vlan-10)# voice

Removing voice from VLAN 10:

```
switch(config-vlan-10)# no voice
```

Checkpoints

A checkpoint is a snapshot of the running configuration of a switch and its relevant metadata during the time of creation. Checkpoints can be used to apply the switch configuration stored within a checkpoint whenever needed, such as to revert to a previous, clean configuration. Checkpoints can be applied to other switches of the same platform. A switch is able to store multiple checkpoints.

Checkpoint types

The switch supports two types of checkpoints:

- **System generated checkpoints**: The switch automatically generates a system checkpoint whenever a configuration change occurs.
- **User generated checkpoints**: The administrator can manually generate a checkpoint whenever required.

Maximum number of checkpoints

- Maximum checkpoints: 64 (including the startup configuration)
- Maximum user checkpoints: 32
- Maximum system checkpoints: 32

User generated checkpoints

User checkpoints can be created at any time, as long as one configuration difference exists since the last checkpoint was created. Checkpoints can be applied to either the running or startup configurations on the switch.

All user generated checkpoints include a time stamp to identify when a checkpoint was created.

A maximum of 32 user generated checkpoints can be created.

System generated checkpoints

System generated checkpoints are automatically created by default. Whenever a configuration change occurs, the switch starts a timeout counter (300 seconds by default). For each additional configuration change, the timeout counter is restarted. If the timeout expires with no additional configuration changes being made, the switch generates a new checkpoint.

System generated checkpoints are named with the prefix CPC followed by a time stamp in the format <YYYYMMDDHHMMSS>. For example: CPC20170630073127.

System checkpoints can be applied using the checkpoint rollback feature or copy command.

A maximum of 32 system checkpoints can be created. Beyond this limit, the newest system checkpoint replaces the oldest system checkpoint.

Supported remote file formats

You can restore a switch configuration by copying a switch configuration stored on a USB drive or a remote network device through SFTP/TFTP. The remote file formats that the switch supports depends on where you plan to restore the checkpoint.

Restoring a checkpoint to a	File type supported
Running configuration	• CLI
	• JSON
	• Checkpoint
Startup configuration	JSONCheckpoint
Specified checkpoint	Specified checkpoint

Rollback

The term rollback is used to refer to when a switch configuration is reverted to a pre-existing checkpoint.

For example, the following command applies the configuration from checkpoint ckpt1. All previous configurations are lost after the execution of this command: checkpoint rollback ckpt1

You can also specify the rollback of the running configuration or of the startup configuration with a specified checkpoint, as shown with the following command: copy checkpoint <checkpoint-name> {running-config | startup-config}

Checkpoint auto mode

Checkpoint auto mode configures the switch with failover support, causing it to automatically revert to a previous configuration if it becomes inoperable or inaccessible due to configuration changes that are being made.

After entering checkpoint auto mode, you have a set amount of time to add, remove, or modify the existing switch configuration. To save your changes, you must execute the checkpoint auto confirm command before the auto mode timer expires. If you do not execute the checkpoint auto confirm command within the specified time, all configuration changes you made are discarded and the running configuration reverts to the state it was before entering checkpoint auto mode.

Testing a switch configuration in checkpoint auto mode

Process overview:

Procedure

- 1. Enable the checkpoint auto mode.
- 2. To save the configuration, enter the <u>checkpoint auto confirm</u> command before the specified time set in step 1.

Checkpoint commands

checkpoint auto

Syntax

checkpoint auto <TIME-LAPSE-INTERVAL>

Description

Starts auto checkpoint mode. In auto checkpoint mode, the switch temporarily saves the runtime configuration as a checkpoint only for the specified time lapse interval. Configuration changes must be saved before the interval expires, otherwise the runtime configuration is restored from the temporary checkpoint.

Command context

Manager (#)

Parameters

<TIME-LAPSE-INTERVAL>

Specifies the time lapse interval in minutes. Range: 1 to 60.

Authority

Administrators or local user group members with execution rights for this command.

Usage

To save the runtime checkpoint permanently, run the checkpoint auto confirm command during the time lapse interval. The filename for the saved checkpoint is named AUTO<YYYYMDDHHMMSS>. If the checkpoint auto confirm command is not entered during the specified time lapse interval, the previous runtime configuration is restored.

Examples

Confirming the auto checkpoint:

```
switch# checkpoint auto 20
Auto checkpoint mode expires in 20 minute(s)
switch# WARNING Please "checkpoint auto confirm" within 2 minutes
switch# checkpoint auto confirm
checkpoint AUT020170801011154 created
```

In this example, the runtime checkpoint was saved because the checkpoint auto confirm command was entered within the value set by the time-lapse-interval parameter, which was 20 minutes.

Not confirming the auto checkpoint:

```
switch# checkpoint auto 20
Auto checkpoint mode expires in 20 minute(s)
switch# WARNING Please "checkpoint auto confirm" within 2 minutes
WARNING: Restoring configuration. Do NOT add any new configuration.
Restoration successful
```

In this example, the runtime checkpoint was reverted because the checkpoint auto confirm command was not entered within the value set by the time-lapse-interval parameter, which was 20 minutes.

checkpoint auto confirm

Syntax

checkpoint auto confirm

Description

Signals to the switch to save the running configuration used during the auto checkpoint mode. This command also ends the auto checkpoint mode.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Usage

To save the runtime checkpoint permanently, run the checkpoint auto confirm command during the time lapse value set by the checkpoint auto <TIME-LAPSE-INTERVAL> command. The generated checkpoint name will be in the format AUTO<YYYYMMDDHHMMSS>. If the checkpoint auto confirm command is not entered during the specified time lapse interval, the previous runtime configuration is restored.

Examples

Confirming the auto checkpoint:

switch# checkpoint auto confirm

checkpoint diff

Syntax

Description

Shows the difference in configuration between two configurations. Compare checkpoints, the running configuration, or the startup configuration.

Command context

Manager (#)

Parameters

{<CHECKPOINT-NAME1> | running-config | startup-config}

Selects either a checkpoint, the running configuration, or the startup configuration as the baseline.

{<CHECKPOINT-NAME2> | running-config | startup-config}

Selects either a checkpoint, the running configuration, or the startup configuration to compare.

Authority

Administrators or local user group members with execution rights for this command.

Usability

The output of the checkpoint diff command has several symbols:

- The plus sign (+) at the beginning of a line indicates that the line exists in the comparison but not in the baseline.
- The minus sign (-) at the beginning of a line indicates that the line exists in the baseline but not in the comparison.

Examples

In the following example, the configurations of checkpoints cpl and cp2 are displayed before the checkpoint diff command, so that you can see the context of the checkpoint diff command.

```
switch# show checkpoint cp1
Checkpoint configuration:
T.
!Version ArubaOS-CX XL.10.00.0002
!Schema version 0.1.8
module 1/1 product-number j1363a
1
1
1
1
!
T.
T.
vlan 1,200
interface 1/1/1
   no shutdown
   ip address 1.0.0.1/24
interface 1/1/2
   no shutdown
    ip address 2.0.0.1/24
switch# show checkpoint cp2
Checkpoint configuration:
!Version ArubaOS-CX XL.10.00.0002
!Schema version 0.1.8
module 1/1 product-number j1363a
I.
T.
1
1
L
vlan 1,200,300
interface 1/1/1
   no shutdown
   ip address 1.0.0.1/24
interface 1/1/2
   no shutdown
    ip address 2.0.0.1/24
switch# checkpoint diff cp1 cp2
--- /tmp/chkpt11501550258421
+++ /tmp/chkpt21501550258421
                                  2017-08-01 01:17:38.420514016 +0000
                                  2017-08-01 01:17:38.420514016 +0000
00 -9,7 +9,7 00
```

!

! -vlan 1,200 +vlan 1,200,300 interface 1/1/1 no shutdown ip address 1.0.0.1/24

checkpoint post-configuration

Syntax

checkpoint post-configuration

no checkpoint post-configuration

Description

Enables creation of system generated checkpoints when configuration changes occur. This feature is enabled by default.

The no form of this command disables system generated checkpoints.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Usage

System generated checkpoints are automatically created by default. Whenever a configuration change occurs, the switch starts a timeout counter (300 seconds by default). For each additional configuration change, the timeout counter is restarted. If the timeout expires with no additional configuration changes being made, the switch generates a new checkpoint.

System generated checkpoints are named with the prefix CPC followed by a time stamp in the format <YYYYMMDDHHMMSS>. For example: CPC20170630073127.

System checkpoints can be applied using the checkpoint rollback feature or copy command.

A maximum of 32 system checkpoints can be created. Beyond this limit, the newest system checkpoint replaces the oldest system checkpoint.

Examples

Enabling system checkpoints:

switch(config)# checkpoint post-configuration

Disabling system checkpoints:

switch(config) # no checkpoint post-configuration

checkpoint post-configuration timeout

Syntax

checkpoint post-configuration timeout <TIMEOUT>

no checkpoint post-configuration timeout <TIMEOUT>

Description

Sets the timeout for the creation of system checkpoints. The timeout specifies the amount of time since the latest configuration for the switch to create a system checkpoint.

The no form of this command resets the timeout to 300 seconds, regardless of the value of the *<TIMEOUT>* parameter.

Command context

Manager (#)

Parameters

timeout <TIMEOUT>

Specifies the timeout in seconds. Range: 5 to 600. Default: 300.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the timeout for system checkpoints to 60 seconds:

switch(config) # checkpoint post-configuration timeout 60

Resetting the timeout for system checkpoints to 300 seconds:

switch(config) # no checkpoint post-configuration timeout 1

checkpoint rename

Syntax

checkpoint rename <OLD-CHECKPOINT-NAME> <NEW-CHECKPOINT-NAME>

Description

Renames an existing checkpoint.

Command context

Manager (#)

Parameters

<OLD-CHECKPOINT-NAME>

Specifies the name of an existing checkpoint to be renamed.

<NEW-CHECKPOINT-NAME>

Specifies the new name for the checkpoint. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-).



NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Renaming checkpoint **ckpt1** to **cfg001**:

switch# checkpoint rename ckpt1 cfg001

checkpoint rollback

Syntax

checkpoint rollback {<CHECKPOINT-NAME> | startup-config}

Description

Applies the configuration from a pre-existing checkpoint or the startup configuration to the running configuration.

Command context

Manager (#)

Parameters

<CHECKPOINT-NAME>

Specifies a checkpoint name.

startup-config

Specifies the startup configuration.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Applying a checkpoint named ckpt1 to the running configuration:

```
switch# checkpoint rollback ckpt1
Success
```

Applying a startup checkpoint to the running configuration:

switch# checkpoint rollback startup-config
Success

copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL>

Syntax

copy checkpoint <CHECKPOINT-NAME> <REMOTE-URL> [vrf <VRF-NAME>]

Description

Copies a checkpoint configuration to a remote location as a file. The configuration is exported in checkpoint format, which includes switch configuration and relevant metadata.

Command context

Manager (#)

Parameters

<CHECKPOINT-NAME>

Specifies the name of a checkpoint.

<REMOTE-URL>

```
Specifies the remote destination and filename using the syntax: {tftp | sftp}://<IP-
ADDRESS>[:<PORT-NUMBER>] [;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>
```

vrf <VRF-NAME>

Specifies a VRF name.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Copying checkpoint configuration to remote file through TFTP:

Copying checkpoint configuration to remote file through SFTP:

```
switch# copy checkpoint ckpt1 sftp://root@192.168.1.10/ckptmeta vrf default
The authenticity of host '192.168.1.10 (192.168.1.10)' can't be established.
ECDSA key fingerprint is SHA256:FtOm6Uxuxumil7VCwLnhz92H9LkjY+eURbdddOETy50.
Are you sure you want to continue connecting (yes/no)? yes
root@192.168.1.10's password:
sftp> put /tmp/ckptmeta ckptmeta
Uploading /tmp/ckptmeta to /root/ckptmeta
Warning: Permanently added '192.168.1.10' (ECDSA) to the list of known hosts.
Connected to 192.168.1.10.
Success
```

copy checkpoint <CHECKPOINT-NAME> {running-config | startup-config}

Syntax

copy checkpoint <CHECKPOINT-NAME> {running-config | startup-config}

Description

Copies an existing checkpoint configuration to the running configuration or to the startup configuration.

Command context

Manager (#)

Parameters

<CHECKPOINT-NAME>

Specifies the name of an existing checkpoint.

{running-config | startup-config}

Selects whether the running configuration or the startup configuration receives the copied checkpoint configuration. If the startup configuration is already present, the command overwrites the startup configuration.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Copying **ckpt1** checkpoint to the running configuration:

switch# copy checkpoint ckpt1 running-config
Success

Copying **ckpt1** checkpoint to the startup configuration:

switch# copy checkpoint ckpt1 startup-config
Success

copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>

Syntax

copy checkpoint <CHECKPOINT-NAME> <STORAGE-URL>

Description

Copies an existing checkpoint configuration to a USB drive. The file format is defined when the checkpoint was created.

Command context

Manager (#)

Parameters

<CHECKPOINT-NAME>

Specifies the name of the checkpoint to copy. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-).

<STORAGE-URL>>

Specifies the name of the target file on the USB drive using the following syntax: usb:/<FILE>

The USB drive must be formatted with the FAT file system.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Copying the test checkpoint to the testCheck file on the USB drive:

switch# copy checkpoint test usb:/testCheck
Success

copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME>

Syntax

```
copy <REMOTE-URL> checkpoint <CHECKPOINT-NAME> [vrf <VRF-NAME>]
```

Description

Copies a remote configuration file to a checkpoint. The remote configuration file must be in checkpoint format.

Command context

Manager (#)

Parameters

<REMOTE-URL>

Specifies a remote file using the following syntax: {tftp | sftp}://<IP-ADDRESS>[:<PORT-NUMBER>] [;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>>

<CHECKPOINT-NAME>

Specifies the name of the target checkpoint. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-). Required.



NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

vrf <VRF-NAME>

Specifies a VRF name. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Copying a checkpoint format file to checkpoint **ckpt5** on the default VRF:

copy <REMOTE-URL> {running-config | startup-config}

Syntax

copy <REMOTE-URL> {running-config | startup-config } [vrf <VRF-NAME>]

Description

Copies a remote file containing a switch configuration to the running configuration or to the startup configuration.

Command context

Manager (#)

Parameters

<REMOTE-URL>

```
Specifies a remote file with the following syntax: {tftp | sftp}://<IP-ADDRESS>[:<PORT-
NUMBER>] [;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>
```
{running-config | startup-config}

Selects whether the running configuration or the startup configuration receives the copied checkpoint configuration. If the startup configuration is already present, the command overwrites the startup configuration.

vrf <VRF-NAME>

Specifies the name of a VRF. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Usage

The switch copies only certain file types. The format of the file is automatically detected from contents of the file. The startup-config option only supports the JSON file format and checkpoints, but the running-config option supports the JSON and CLI file formats and checkpoints.

When a file of the CLI format is copied, it overwrites the running configuration. The CLI command does not clear the running configuration before applying the CLI commands. All of the CLI commands in the file are applied line-by-line. If a particular CLI command fails, the switch logs the failure and it continues to the next line in the CLI configuration. The event log (show events -d hpe-config) provides information as to which command failed.

Examples

Copying a JSON format file to the running configuration:

Copying a CLI format file to the running configuration with an error in the file:

Copying a CLI format file to the startup configuration:

Copying an unsupported file format to the startup configuration:

copy running-config { startup-config | checkpoint <CHECKPOINT-NAME>}

Syntax

copy running-config {startup-config | checkpoint <CHECKPOINT-NAME>}

Description

Copies the running configuration to the startup configuration or to a new checkpoint. If the startup configuration is already present, the command overwrites the existing startup configuration.

Command context

Manager (#)

Parameters

startup-config

Specifies that the startup configuration receives a copy of the running configuration.

checkpoint <CHECKPOINT-NAME>

Specifies the name of a new checkpoint to receive a copy of the running configuration. The checkpoint name can be alphanumeric. It can also contain underscores (_) and dashes (-).



NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Copying the running configuration to the startup configuration:

```
switch# copy running-config startup-config
Success
```

Copying the running configuration to a new checkpoint named **ckpt1**:

```
switch# copy running-config checkpoint ckpt1
Success
```

copy {running-config | startup-config} <REMOTE-URL>

Syntax

```
copy {running-config | startup-config} <REMOTE-URL> {cli | json} [vrf <VRF-NAME>]
```

Description

Copies the running configuration or the startup configuration to a remote file in either CLI or JSON format.

Command context

Manager (#)

Parameters

{running-config | startup-config}

Selects whether the running configuration or the startup configuration is copied to a remote file.

<REMOTE-URL>

```
Specifies the remote file using the syntax: {tftp | sftp}://<IP-ADDRESS>[:<PORT-NUMBER>]
[;blocksize=<BLOCKSIZE-VALUE>]/<FILE-NAME>
```

{cli | json}

Selects the remote file format: P: CLI or JSON.

vrf <VRF-NAME>

Specifies the name of a VRF. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Copying a running configuration to a remote file in CLI format:

Copying a running configuration to a remote file in JSON format:

Copying a startup configuration to a remote file in CLI format:

```
switch# copy startup-config sftp://root@192.168.1.10/startcli cli
root@192.168.1.10's password:
sftp> put /tmp/startcli startcli
Uploading /tmp/startcli to /root/startcli
Connected to 192.168.1.10.
Success
```

Copying a startup configuration to a remote file in JSON format:

```
switch# copy startup-config sftp://root@192.168.1.10/startjson json
root@192.168.1.10's password:
sftp> put /tmp/startjson startjson
Uploading /tmp/startjson to /root/startjson
Connected to 192.168.1.10.
Success
```

copy {running-config | startup-config} <STORAGE-URL>

Syntax

copy {running-config | startup-config} <STORAGE-URL> {cli | json}

Description

Copies the running configuration or a startup configuration to a USB drive.

Command context

Manager (#)

Parameters

```
{running-config | startup-config}
```

Selects the running configuration or the startup configuration to be copied to the switch USB drive.

<STORAGE-URL>

Specifies a remote file with the following syntax: usb:/<file>

{cli | json}

Selects the format of the remote file: CLI or JSON.

Authority

Administrators or local user group members with execution rights for this command.

Usage

The switch supports JSON and CLI file formats when copying the running or starting configuration to the USB drive. The USB drive must be formatted with the FAT file system.

The USB drive must be enabled and mounted with the following commands:

```
switch(config)# usb
switch(config)# end
switch# usb mount
```

Examples

Copying a running configuration to a file named runCLI on the USB drive:

```
switch# copy running-config usb:/runCLI cli
Success
```

Copying a startup configuration to a file named startCLI on the USB drive:

```
switch# copy startup-config usb:/startCLI cli
Success
```

copy startup-config running-config

Syntax

```
copy startup-config running-config
```

Description

Copies the startup configuration to the running configuration.

Command context

```
Manager (#)
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

switch# copy startup-config running-config
Success

copy <STORAGE-URL> running-config

Syntax

copy <STORAGE-URL> {running-config | startup-config | checkpoint <CHECKPOINT-NAME>}

Description

This command copies a specified configuration from the USB drive to the running configuration, to a startup configuration, or to a checkpoint.

Command context

Manager (#)

Parameters

<STORAGE-URL>

Specifies the name of a configuration file on the USB drive with the syntax: usb:/<FILE>

running-config

Specifies that the configuration file is copied to the running configuration. The file must be in CLI, JSON, or checkpoint format or the copy will fail. the copy will not work.

startup-config

Specifies that the configuration file is copied to the startup configuration. The switch stores this configuration between reboots. The startup configuration is used as the operating configuration following a reboot of the switch. The file must be in JSON or checkpoint format or the copy will fail.

checkpoint <CHECKPOINT-NAME>

Specifies the name of a new checkpoint file to receive a copy of the configuration. The configuration file on the USB drive must be in checkpoint format.



NOTE: Do not start the checkpoint name with CPC because it is used for system-generated checkpoints.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command requires that the USB drive is formatted with the FAT file system and that the file be in the appropriate format as follows:

- running-config: This option requires the file on the USB drive be in CLI, JSON, or checkpoint format.
- startup-config: This option requires the file on the USB drive be in JSON or checkpoint format.
- checkpoint <checkpoint-name>: This option requires the file on the USB drive be in checkpoint format.

Examples

Copying the file **runCli** from the USB drive to the running configuration:

```
switch# copy usb:/runCli running-config
Configuration may take several minutes to complete according to configuration
file size
--0%----10%----20%----30%----40%----50%----60%----70%----80%----90%----100%--
Success
```

Copying the file **startUp** from the USB drive to the startup configuration:

```
switch# copy usb:/startUp startup-config
Success
```

Copying the file **testCheck** from the USB drive to the **abc** checkpoint:

switch# copy usb:/testCheck checkpoint abc
Success

erase {checkpoint <CHECKPOINT-NAME> | startup-config | all}

Syntax

erase {checkpoint <CHECKPOINT-NAME> | startup-config | all}

Description

Deletes an existing checkpoint, startup configuration, or all checkpoints.

Command context

Manager (#)

Parameters

checkpoint <CHECKPOINT-NAME>

Specifies the name of a checkpoint.

startup-config

Specifies the startup configuration.

all

Specifies all checkpoints.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Erasing checkpoint ckpt1:

switch# erase checkpoint ckpt1

Erasing the startup configuration:

switch# erase startup-config

Erasing all checkpoints:

switch# erase checkpoint all

show checkpoint <CHECKPOINT-NAME>

Syntax

show checkpoint <CHECKPOINT-NAME> [json]

Description

Shows the configuration of a checkpoint.

Command context

Manager (#)

Parameters

checkpoint <CHECKPOINT-NAME>

Specifies the name of a checkpoint.

[json]

Specifies that the output is displayed in JSON format.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the configuration of the ckpt1 checkpoint in non-JSON format:

```
switch# show checkpoint ckpt1
!Description: 'switch'
!Version OpenSwitch 0.3.0-rc0 (Build: xxxxxxxxx)
!Schema version 0.1.8
hostname leaf07
logrotate period hourly
timezone set utc
ntp server 11.1.1.35
logging 11.0.1.11
!
!
!
!
vlan 1
   no shutdown
interface 30
   no shutdown
   ip address 12.20.27.2/30
interface 31
   no shutdown
   ip address 12.20.37.2/30
interface 32
   no shutdown
   ip address 12.20.47.2/30
```

Showing the configuration of the ckpt1 checkpoint in JSON format:

```
switch# show checkpoint ckpt1 json
Checkpoint configuration:
{
    "AAA_Server_Group": {
        "local": {
            "group_name": "local"
        },
        "none": {
            "group_name": "none"
        }
    },
...
...
...
```

show checkpoint post-configuration

Syntax

```
show checkpoint post-configuration
```

Description

Shows the configuration settings for creating system checkpoints.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# show checkpoint post-configuration
```

Checkpoint Post-Configuration feature

Status : enabled Timeout (sec) : 300

show checkpoint list

Syntax

show checkpoint list {all | <START-DATE> <END-DATE>}

Description

Shows a list of saved checkpoints.

Command context

Manager (#)

Parameters

all

Shows a detailed list of all saved checkpoints.

<START-DATE>

Specifies the starting date for the range of saved checkpoints to show. Format: YYYY-MM-DD.

<END-DATE>

Specifies the ending date for the range of saved checkpoints to show. Format: YYYY-MM-DD.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the list of saved checkpoints:

switch# show checkpoint list
ckpt1
ckpt2
ckpt3
startup-config
AUT020170308214100

Showing a detailed list of all saved system and user checkpoints:

switch# show checkpoint list all

NAME	TYPE	WRITER	DATE (UTC)	HARDWARE	IMAGE VERSION
CPC20171017195548	checkpoint	System	2020-10-17T19:55:48Z	00000	xx.10.0x.xxxX-1-g7691be0
ckpt23	checkpoint	User	2020-10-17T20:09:00Z	00000	xx.10.0x.xxxX-1-g7691be0
ckpt24	checkpoint	User	2020-10-17T20:09:09Z	00000	xx.10.0x.xxxX-1-g7691be0
ckpt30	checkpoint	User	2020-10-17T20:10:36Z	00000	xx.10.0x.xxxX-1-g7691be0
startup-config-backup	checkpoint	System	2020-10-17T20:17:56Z	00000	xx.10.0x.xxxX-1-g7691be0
CPC20171017201712	checkpoint	System	2020-10-17T20:19:12Z	00000	xx.10.0x.xxxAZ-10-g4c6b4446bd6
ckpt31	checkpoint	User	2020-10-17T20:19:24Z	00000	xx.10.0x.xxxAZ-10-g4c6b4446bd6
startup-config	startup	User	2020-10-17T20:47:11Z	00000	xx.10.0x.xxxAZ-10-g4c6b4446bd6
ckpt32	checkpoint	User	2020-10-17T20:50:24Z	00000	xx.10.0x.xxxAZ-10-g4c6b4446bd6
CPC20171017205110	checkpoint	System	2020-10-17T20:51:10Z	00000	xx.10.0x.xxxAZ-10-g4c6b4446bd6

Showing a detailed list of saved checkpoints for a specific date range:

switch#	show checkp	oint lis	t date 2020-	-03-08 202	20-03-12			
NAME	TYPE	WRITER	DATE		HARDWARE	IMAGE	VERSION	1
ckpt2	checkpoint	User	2020-03-08	18:10:01	1	0.0.0		1
ckpt3	checkpoint	User	2020-03-09	23:11:02	1	0.0.0		
ckpt4	checkpoint	User	2020-03-11	00:00:03	1	0.0.0		1

write memory

Syntax

write memory

Description

Saves the running configuration to the startup configuration. It is an alias of the command copy runningconfig startup-config. If the startup configuration is already present, this command overwrites the startup configuration.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# write memory
Success
```

Boot commands

boot fabric-module

Syntax

boot fabric-module <SLOT-ID>

Description

Reboots the specified fabric module.

Command context

Manager (#)

Parameters

<SLOT-ID>

Specifies the member and slot of the module in the format member/slot. For example, to specify the module in member 1 slot 3, enter 1/3.

Authority

Administrators or local user group members with execution rights for this command.

Usage

The boot fabric-module command reboots the specified fabric module. Traffic performance is affected while the module is down.

If the specified module is the only fabric module in an up state, rebooting that module stops traffic switching between line modules and the line modules power down. The line modules power up when one fabric module returns to an up state.

This command is valid for fabric modules only.

Examples

Rebooting the fabric module in slot 1/3 when auto-confirm is not enabled:

```
switch# boot fabric-module 1/3
```

```
This command will reboot the specified fabric module. Traffic performance may be affected while the module is down. Rebooting the last fabric module will stop traffic switching between line modules. Do you want to continue (y/n)? {f y}
```

switch#

Rebooting the fabric module in slot 1/1 when auto-confirm is enabled:

```
switch# boot fabric-module 1/3
This command will reboot the specified fabric module. Traffic performance may
be affected while the module is down. Rebooting the last fabric module will
stop traffic switching between line modules.
Do you want to continue (y/n) y (auto-confirm)
```

switch#

boot line-module

Syntax

boot line-module <SLOT-ID>

Description

Reboots the specified line module.

Command context

Manager (#)

Parameters

<SLOT-ID>

Specifies the member and slot of the module in the format member/slot. For example, to specify the module in member 1 slot 3, enter 1/3.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command is supported on switches that have multiple line modules.

Reboots the specified line module. Any traffic for the switch passing through the affected module (SSH, TELNET, and SNMP) is interrupted. It can take up to 2 minutes to reboot the module. During that time, you can monitor progress by viewing the event log.

This command is valid for line modules only.

Examples

Reloading the module in slot 1/1:

```
switch# boot line-module 1/1
```

```
This command will reboot the specified line module and interfaces on this module will not send or receive packets while the module is down. Any traffic passing through the line module will be interrupted. Management sessions connected through the line module will be affected. It might take up to 2 minutes to complete rebooting the module. During that time, you can monitor progress by viewing the event log. Do you want to continue (y/n)? Y switch#
```

boot management-module

Syntax

boot management-module {active | standby | <SLOT-ID>}

Description

Reboots the specified management module. Choose the management module to reboot by role (active or standby) or by slot number.

Command context

Manager (#)

Parameters

active

Selects the active management module.

standby

Selects the standby management module.

<SLOT-ID>

Specifies the member and slot of the management module in the format member/slot. For example, to specify the module in member 1 slot 5, enter 1/5.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command is supported on switches that have multiple management modules.

This command reboots a single management module in a chassis. Choose the management module to reboot by role (active or standby) or by slot number.

You can use the show images command to show information about the primary and secondary system images.

If you reboot the active management module and the standby management module is available, the active management module reboots and the standby management module becomes the active management module.

If you reboot the active management module and the standby management module is not available, you are warned, you are prompted to save the configuration, and you are prompted to confirm the operation.

If you reboot the standby management module, the standby management module reboots and remains the standby management module.

If you attempt to reboot a management module that is not available, the boot command is aborted.

Saving the configuration is not required. However, if you attempt to save the configuration and there is an error during the save operation, the boot command is aborted.



NOTE: Hewlett Packard Enterprise recommends that you use the boot management-module command instead of pressing the module reset button to reboot a management module because if you are rebooting the only available management module, the boot management-module command enables you to save the configuration, cancel the reboot, or both.

Examples

Rebooting the active management module when the standby management module is available:

switch# boot management-module active
The management-module in slot 1/5 is going down for reboot now.

Rebooting the active management module when the standby management module is not available:

```
switch# boot management-module 1/5
The management module in slot 1/5 is currently active and no
standby management module was found.
This will reboot the entire switch.
Do you want to save the current configuration (y/n)? n
This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? y
The system is going down for reboot.
```

boot set-default

Syntax

```
boot set-default {primary | secondary}
```

Description

Sets the default operating system image to use when the system is booted.

Command context

Manager (#)

Parameters

primary

Selects the primary network operating system image.

secondary

Selects the secondary network operating system image.

Authority

Administrators or local user group members with execution rights for this command.

Example

Selecting the primary image as the default boot image:

```
switch# boot set-default primary
Default boot image set to primary.
```

boot system

Syntax

boot system [primary | secondary | serviceos]

Description

Reboots all modules on the switch. By default, the configured default operating system image is used. Optional parameters enable you to specify which system image to use for the reboot operation and for future reboot operations.

Command context

Manager (#)

Parameters

primary

Selects the primary operating system image for this reboot and sets the configured default operating system image to primary for future reboots.

secondary

Selects the secondary operating system image for this reboot and sets the configured default operating system image to secondary for future reboots.

serviceos

Selects the service operating system for this reboot. Does not change the configured default operating system image. The service operating system acts as a standalone bootloader and recovery OS for switches running the ArubaOS-CX operating system and is used in rare cases when troubleshooting a switch.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command reboots the entire system. If you do not select one of the optional parameters, the system reboots from the configured default boot image.

You can use the show images command to show information about the primary and secondary system images.

Choosing one of the optional parameters affects the setting for the default boot image:

• If you select the primary or secondary optional parameter, that image becomes the configured default boot image for future system reboots. The command fails if the switch is not able to set the operating system image to the image you selected.

You can use the **boot** set-default command to change the configured default operating system image.

 If you select serviceos as the optional parameter, the configured default boot image remains the same, and the system reboots all management modules with the service operating system.

If the configuration of the switch has changed since the last reboot, when you execute the boot system command you are prompted to save the configuration and you are prompted to confirm the reboot operation.

Saving the configuration is not required. However, if you attempt to save the configuration and there is an error during the save operation, the boot system command is aborted.

Examples

Rebooting the system from the configured default operating system image:

```
switch# boot system
Do you want to save the current configuration (y/n)? y
The running configuration was saved to the startup configuration.
This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? y
The system is going down for reboot.
```

Rebooting the system from the secondary operating system image, setting the secondary operating system image as the configured default boot image:

```
switch# boot system secondary
Default boot image set to secondary.
Do you want to save the current configuration (y/n)? n
This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? y
The system is going down for reboot.
```

Canceling a system reboot:

switch# boot system

Do you want to save the current configuration (y/n)? ${f n}$

This will reboot the entire switch and render it unavailable until the process is complete. Continue (y/n)? **n** Reboot aborted. switch#

show boot-history

Syntax

show boot-history [all]

Description

Shows boot information. When no parameters are specified, shows the most recent information about the boot operation, and the three previous boot operations for the active management module. When the all parameter is specified, shows the boot information for the active management module and all available line modules. To view boot-history on the standby, the command must be sent on the standby console.

Command context

Manager (#)

Parameters

all

Shows boot information for the active management module and all available line modules.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command displays the boot-index, boot-ID, and up time in seconds for the current boot. If there is a previous boot, it displays boot-index, boot-ID, reboot time (based on the time zone configured in the system) and reboot reasons. Previous boot information is displayed in reverse chronological order.

Index

The position of the boot in the history file. Range: 0 to3.

Boot ID

A unique ID for the boot . A system-generated 128-bit string.

Current Boot, up for <SECONDS> seconds

For the current boot, the show boot-history command shows the number of seconds the module has been running on the current software.

Timestamp boot reason

For previous boot operations, the show boot-history command shows the time at which the operation occurred and the reason for the boot. The reason for the boot is one of the following values:

<DAEMON-NAME> crash

The daemon identified by <DAEMON-NAME> caused the module to boot.

Kernel crash

The operating system software associated with the module caused the module to boot.

Reboot requested through database

The reboot occurred because of a request made through the CLI or other API.

Uncontrolled reboot

The reason for the reboot is not known.

Examples

Showing the boot history of the active management module:

```
switch# show boot-history
Management module
_____
Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs
Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database
Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database
Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
switch#
```

Showing the boot history of the active management module and all line modules:

```
switch# show boot-history all
Management module
_____
Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs
Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database
Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database
Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
Line module 1/1
_____
Index : 3
```

10 Aug 17 12:45:46 : dune_agent crashed ...

Firmware management commands

copy {primary | secondary} <REMOTE-URL>

Syntax

copy {primary | secondary} <REMOTE-URL> [vrf <VRF-NAME>]

Description

Uploads a firmware image to a TFTP or SFTP server.

Command context

Manager (#)

Parameters

```
{primary | secondary}
```

Selects the primary or secondary image profile to upload. Required

<REMOTE-URL>

Specifies the URL to receive the uploaded firmware using SFTP or TFTP. For information on how to format the remote URL, see **URL formatting for copy commands**.

vrf <VRF-NAME>

Specifies a VRF name. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

TFTP upload:

SFTP upload:

```
switch# copy primary sftp://swuser@192.0.2.0/00_10_00_0002.swi
swuser@192.0.2.0's password:
Connected to 192.0.2.0.
sftp> put primary.swi XL_10_00_0002.swi
Uploading primary.swi to /users/swuser/00_10_00_0002.swi
primary.swi 100% 179MB 35.8MB/s 00:05
```

copy {primary | secondary} <FIRMWARE-FILENAME>

Syntax

copy {primary | secondary} <FIRMWARE-FILENAME>

Description

Copies a firmware image to USB storage.

Command context

Manager (#)

Parameters

{primary | secondary}

Selects the primary or secondary image from which to copy the firmware. Required

<FIRMWARE-FILENAME>

Specifies the name of the firmware file to create on the USB storage device. Prefix the filename with usb:/.For example:usb:/firmware_v1.2.3.swi

For information on how to format the path to a firmware file on a USB drive, see USB URL.

Authority

Administrators or local user group members with execution rights for this command.

Examples

switch# copy primary usb:/11.10.00.0002.swi

copy primary secondary

Syntax

copy primary secondary

Description

Copies the firmware image from the primary to the secondary location.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# copy primary secondary
The secondary image will be deleted.
```

```
Continue (y/n)? y
Verifying and writing system firmware...
```

copy <REMOTE-URL>

Syntax

copy <REMOTE-URL> {primary | secondary} [vrf <VRF-NAME>]

Description

Downloads and installs a firmware image from a TFTP or SFTP server.

Command context

Manager (#)

Parameters

<REMOTE-URL>

Specifies the URL from which to download the firmware using SFTP or TFTP. For information on how to format the remote URL, see **URL formatting for copy commands**.

{primary | secondary}

Selects the primary or secondary image profile for receiving the downloaded firmware. Required.

vrf <VRF-NAME>

Specifies the name of a VRF. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

TFTP download:

```
switch# copy tftp://192.10.12.0/ss.10.00.0002.swi primary
The primary image will be deleted.
```

SFTP download:

```
switch# copy sftp://swuser@192.10.12.0/ss.10.00.0002.swi primary
The primary image will be deleted.
```

```
Continue (y/n)? y
The authenticity of host '192.10.12.0 (192.10.12.0)' can't be established.
ECDSA key fingerprint is SHA256:L64khLwlyLgXlARKRMiwcAAK8oRaQ8C0oWP+PkGBXHY.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.10.12.0' (ECDSA) to the list of known hosts.
swuser@192.10.12.0's password:
Connected to 192.10.12.0.
Fetching /users/swuser/ss.10.00.0002.swi to ss.10.00.0002.swi.dnld
/users/swuser/ss.10.00.0002.swi 100% 179MB 25.6MB/s 00:07
Verifying and writing system firmware...
```

copy secondary primary

Syntax

```
copy secondary primary
```

Description

Copies the firmware image from the secondary to the primary location.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Examples

switch# copy secondary primary The primary image will be deleted. Continue (y/n)? y Verifying and writing system firmware... switch# copy sftp://stor@192.22.1.0/im-switch.swi primary vrf mgmt The primary image will be deleted. Continue (y/n)? y The authenticity of host '192.22.1.0 (192.22.1.0)' can't be established. ECDSA key fingerprint is SHA256:MyI1xbdKnehYut0NLfL69qDpNzCmZqBVvBaRR46m7o8. Are you sure you want to continue connecting (yes/no)? yes Warning: Permanently added '192.22.1.0' (ECDSA) to the list of known hosts. stor@192.22.1.0's password: Connected to 192.22.1.0. sftp> get c8d5b9f-topflite.swi c8d5b9f-topflite.swi.dnld Fetching /home/dr/im-switch.swi to c8d5b9f-topflite.swi.dnld /home/dr/im-switch.swi 100% 226MB 56.6MB/s 00:04

Verifying and writing system firmware...

copy <STORAGE-URL>

Syntax

copy <STORAGE-URL> {primary | secondary}

Description

Copies, verifies, and installs a firmware image from a USB storage device connected to the active management module.

Command context

Manager (#)

Parameters

<STORAGE-URL>

Specifies the name of the firmware file to copy from the USB storage device. Required. Prefix the filename with usb:/. For example, usb:/firmware_v1.2.3.swi For information on how to format the path to a firmware file on a USB drive, see **USB URL**.

{primary | secondary}

Selects the primary or secondary image profile for receiving the copied firmware.

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch# copy usb:/11.10.00.0002.swi primary
The primary image will be deleted.
```

Continue (y/n)? **y**

Verifying and writing system firmware...

URL formatting for copy commands

TFTP URL

Syntax

tftp://<IP-ADDR>[:<PORT-NUM>][;blocksize=<Value>]/<FILENAME>

Examples

To specify a URL with:

- an IPv4 address: tftp://1.1.1.1/a.txt
- an IPv6 address: tftp://[2000::2]/a.txt
- a hostname: tftp://hpe.com/a.txt

To specify TFTP with:

- the port number of the server in the URL: tftp://1.1.1.1:12/a.txt
- the blocksize in the URL: tftp://1.1.1.1; blocksize=1462/a.txt
 The valid blocksize range is 8 to 65464.
- the port number of the server and blocksize in the URL: tftp://1.1.1.1:12;blocksize=1462/a.txt

To specify a file in a directory of URL: tftp://1.1.1.1/dir/a.txt

SFTP URL

Syntax

sftp://<USERNAME>@<IP-ADDR>[:<PORT-NUM>]/<FILENAME>

Examples

To specify:

- A URL with an IPv4 address: sftp://user@1.1.1.1/a.txt
- A URL with an IPv6 address: sftp://user@[2000::2]/a.txt
- A URL with a hostname: sftp://user@hpe.com/a.txt
- SFTP port number of a server in the URL: sftp://user@1.1.1.1:12/a.txt
- A file in a directory of URL: sftp://user@1.1.1.1/dir/a.txt
- To specify a file with absolute path in the URL: sftp://user@1.1.1.1//home/user/a.txt

USB URL

Syntax

usb:/<FILENAME>

Examples

To specify a file:

- In a USB storage device: usb:/a.txt
- In a directory of a USB storage device: usb:/dir/a.txt

Dynamic Segmentation (DS) is an enterprise network solution that combines Aruba OS-CX security and networking features to dynamically place clients into network segments based on client credentials. The client network segments are dynamically carved out of the enterprise networks when on-boarding secure clients. Two options are available:

- User Based Tunnels (UBT).
- Virtual Network Based Tunnels (VNBT). Also called switch-to-switch dynamic segmentation.

In both solutions, once authenticated (using MAC-Auth or 802.1X) an enterprise client is bound to a network role and a VLAN is associated with the role. User traffic is then placed on the VLAN (know as the role VLAN) corresponding to the role to which the user belongs. Role association is defined using the individual client authentication mode or using device-profile based authentication.

The administrator must pre-configure all potential role VLANs and VRFs in all access switches (and additional configuration such as IGMP snooping on VLAN, PIM RP, etc.). The switch ensures that the role VLANs and VRFs are instantiated only upon client on-boarding on the target VLAN (using the command system vlan-client-presence-detect). This ensures that unnecessary broadcast domain creations and route learning do not occur.

Virtual network based tunneling

Segment definition

Each segment has its own policies. For example, if a group of clients belong to an *admin* segment, then this segment can have better QoS and security privileges as compared to the segments assigned to guest clients.

Inter-segment traffic is prohibited between two segments based on policy.

A segment does not map to a network construct such as a VLAN or a VRF. Multiple segments can co-exist within a VLAN or a segment can span multiple VLANs and VRFs. However, the switch must realize segmentation using network constructs such as VLANs, VRFs ACLs, etc.

Example

This example illustrates a simple deployment using two VLANs and VRFs.



Overlay Client VLAN	L2 VLAN	Subnet
10	100	1.1.1.0/24
20	200	2.2.2.0/24

Overlay Client VRF	L3 VNI	Overlay SVIs on VRF	Overlay ROPs on VRF
A	10000	• VLAN interface of 10, 20 on access	ROP interfaces to the north of Core.
		 VLAN interface to the north of Core (if any needed). 	

Configuration on switches	A1	A2	Core
• L2 VNI 100.	Y	Y	N
Anycast Gateway for 1.1.1.0/24.			
VLAN interface for 10.			
• L2 VNI 200.	Y	Y	Ν
Anycast Gateway for 2.2.2.0/24.			
• VLAN interface for 20.			
			Table Continued

Configuration on switches	A1	A2	Core
• VRF A.	Y	Y	Y
• L3 VRF for A.			
RD, RTs for VRF A. (Can be derived from L3 VNI too.)	Y	Y	Y

The two VRFs are configured on the core switch, and the two VLANs and VRFs are configured on the two access switches as required. The two VLANs and the VRF are part of the *running config* on both access switches.

Initially, the status of the two VLANs on the access switches is *down*. This means that:

- EVPN routes RT-3 (IMET) route, and RT-5 and RT-2 with respect to the VLAN interfaces are not announced by the switches.
- No VXLAN tunnels are established between any pairs of switches.



When Host H1 connects to A1, the host is authenticated with CPPM and the client is mapped to Role-1 on VLAN 10. This results in the following:

- The VLAN state changes to *up* in show commands on A1.
- The L2 and L3 forwarding constructs for the local MAC of H1 are programmed onto VLAN 10 inside A1.
- The IMET route for L2VNI is advertised by A1.
 - This route is not used by the core as it does not have footprint of VLAN 10 on it.
 - This route is not used by A2 either this is because it does not have a local VLAN 10 on "up" state as yet.
- RT-5 prefix route (if enabled) is advertised by A1.
 - Upon receiving the route, the core programs the prefix route (1.1.1.0/24). This also results in VxLAN tunnel programming on the core towards A1.
 - A2 still does not use this route, because the VRF is not instantiated on A2 yet.
- The RT-4 and the RT-2 routes are advertised by A1.
 - Upon receiving the route, the core programs the route host route (1.1.1.1/32) with BH as A1. But the existing tunnel towards A1 is reused.
 - A2 still does not use this route.
- The BUM domain for VLAN 10 on A1 is still the local host H1. This is because VLAN 10 is not instantiated on any other switch as yet.
- Any prefix routes from the core is programmed by A1 and it also programs a VxLAN tunnel towards the core.



When Host H2 connects to A2, the host is authenticated with CPPM and the client is mapped to say Role-1 and the role's VLAN is VLAN 10. This results in the following:

- The VLAN state is changes to "up" in the show commands.
- The L2 and L3 forwarding constructs for the local MAC of H2 is programmed into VLAN 10 inside A2.
- The IMET route for L2VNI is advertised by A2.
 - This route is not used by the core again as it does not have footprint of VLAN 10 on it.
 - This route is used by A1. It creates a VXLAN tunnel towards A2 and adds it to the BUM domain for VLAN 10.
- RT-5 prefix route (if enabled) is advertised by A2.
 - Upon receiving the route, the core programs the prefix route (1.1.1.0/24). In the absence of ECMP, the existing route in the core is overwritten. This also results in VxLAN tunnel programming on the core towards A2.
 - A1 still does not use this route, this is because the local connected route for 1.1.1.0/24 has higher priority.
- The RT-4 and the RT-2 routes are advertised by A2.

- Upon receiving the route, the core programs the route host route (1.1.1.2/32). The existing tunnel is reused.
- A1 programs the 1.1.1.2/32 route into its FIB with NH as VTEP towards A2.
- Any prefix routes from the core are programmed by A2 and it also programs a VxLAN tunnel towards the core
- Thus a full mesh of VxLAN tunnels is created.



If host H3 connects to A2 and it is on boarded on VLAN 20. This results in the following:

- The VLAN state of VLAN 20 changes to "up" in the show commands
- The L2 and L3 forwarding constructs for the local MAC of H3 is programmed into VLAN 20 inside A2.
- The IMET route for L2VNI is advertised by A2
 - This route is not used by the core again as it does not have footprint of VLAN 20 on it.
 - This route is not used by A1 either for the same reason.
- RT-5 prefix route (if enabled) is advertised by A2

- Upon receiving the route, the core programs the prefix route (2.2.2.0/24). The core reuses the existing tunnel.
- A1 also programs the prefix route with NH as A2.
- The RT-4 and the RT-2 routes with respect to H3 are advertised by A2.
 - A1 programs its FIB for host route 2.2.2.2/24 with NH as A2. But it reuses the existing tunnel.
 - Same behavior on the core.

Additional notes

- Reference counts maintained in the access switches ensure that existing tunnels are reused as and when new clients come up.
- The clients leaving the VLAN (disconnect/Auth time out etc.) can lead to the reversal of the procedure described above i.e. deletion of local programming, withdrawal of routes, VLAN status change, etc. The reversal is initiated based on reference count.
- Dynamic VLAN instantiation does not mandate VNI association for VLANs. Even local VLANs with secure clients (if any) are also dynamically instantiated.

User-based tunneling

User-based tunneling uses GRE to tunnel ingress traffic on a switch interface to a mobility controller for further processing. User-based tunneling enables a mobility controller to provide a centralized security policy, using per-user authentication and access control to ensure consistent access and permissions.

Applications of user-based tunneling include:

- Traffic segmentation: Enables splitting of traffic based on user credentials, rather than the physical port to which a user is connected. For example, guests on a corporate network can be assigned to a specific VLAN with access and firewall policies defined to protect the network. Traffic from computers/laptops can be tunneled, while allowing VoIP traffic to move freely through the wired network.
- Authentication of PoE devices: Many devices that require power over Ethernet (PoE) and network access, such as security cameras, payment card readers, and medical devices, do not have built-in security software. As a result, these devices can pose a risk to networks. User-based tunneling can authenticate these devices and tunnel their traffic to a mobility controller, harnessing the firewall and policy capabilities to secure the network.

At the most basic level User-Based Tunneling has two components:

- **User-Roles** refers to the ability to assign roles, on the fly, to a wired device/user, based on such things as the access method of a client. When leveraging ClearPass, additional context can be added, such as time-of-day and type-of-machine. As a result, IT staff no longer must pre-configure an access-port to VLAN and uplinks.
- **Tunneling** is the ability to tunnel traffic back to an Aruba Mobility Controller (previously known as tunneled-node).

User-based tunneling supports two types of controller deployments:

- Standalone Controller Support
- Clustered Controller Support



Components of user-based tunneling

Clients and devices

Traditionally, ports were labeled with a color and a color was assigned to a specific device. With colorless ports, all ports on an access switch are set to authenticate with both 802.1X and MAC Authentication. When a device connects to the network it is authenticated using either MAC Authentication or 802.1X and triggers an enforcement policy from ClearPass, which contains an enforcement profile with a user role configuration.

Access switches

Access switches authenticate users connected to the switch. Once a device or user is authenticated, a role is applied to the device or user. A role is a set of attributes and policies that is applied to the device or user. This user role can exist locally on an access switch or on ClearPass as part of an enforcement profile.

Mobility controller cluster

The Aruba Mobility Controller has many built-in security and application capabilities tailored specifically to wireless traffic. However, this can be extended as well to wired traffic. This is the main reason to tunnel traffic from an Aruba access switch to a controller, so the wired, tunneled traffic can take advantage of the controller's firewall capabilities and client applications.

Aruba ClearPass Policy Manager

ClearPass assigns enforcement policies and profiles containing user role information based on profiled devices or authenticated user information.

How it works

When first configuring the switch, the *tunneling profile* must be configured first. This is done using the command ubt zone. Within this context, the primary controller IP address can be configured, which should be the physical IP of one of the cluster members. Once the controller information is known on the switch and the UBT service is enabled, the switch then performs a handshake with the controller to determine its reachability and to discover the version information.

When reachability is confirmed, the switch executes a switch bootstrap, and sends a bootstrap message to the controller, similar to an AP Hello between an AP and a controller. This bootstrap control packet contains user role information. Once the controller receives the message, it replies with an acknowledge message. When acknowledged, the switch updates its local data structures with a bucket map and controller node list, which is used for mapping users to controllers and client load balancing.

After the bucket map list is downloaded to the switch, a GRE heartbeat is then started between the switch and the controller, forming a tunnel. A regular heartbeat, using GRE, is exchanged with the controller, which then serves as the switch anchor controller (SAC). This is the primary-controller ip in the ubt zone command. A secondary heartbeat is also established with a standby controller, acting as a secondary switch anchor controller (s-SAC).

When a user connects to a secure port, the authentication sub-system on the switch sends a RADIUS request to the RADIUS server (for example, ClearPass Policy Manager), which authenticates the user and returns a user role to the switch in the form of a local user role (LUR), downloadable user role (DUR) or venfor-specific attribute (VSA).



NOTE: For a downloadable user role, the entire role itself is downloaded to the switch containing the user role via a VSA.

Aruba utilizes the concept of a user role which contains user policy and access to the network based on the role. A user-role can contain ACL/QoS policy, captive portal, VLAN information (used for locally switched traffic), and device attributes. When the user role VSA, received from the RADIUS server, is applied to the user, a command to redirect traffic to a controller can be included within the user role. This is defined with

the gateway zone command which causes tunneling to be enabled. The authentication sub-system notifies the tunneling subsystem on the switch, providing a gateway or secondary role. The gateway or secondary role is the user role on the controller where policy will generally exist for tunneled users, and where firewall and security policies are applied. This can also be the same role used for wireless users and can be reused for wired users, if feasible.

The gateway role information sent to the switch tunneling subsystem is an indication to the controller that it has to enforce additional policies on the user's traffic based on the policy configuration associated with the secondary role and the tunnel. This secondary role can be downloaded directly to the controller. When the primary controller or cluster is not reachable, the SAC tunnel is formed with the backup controller and the clients are tunneled to the backup.

Points to remember

- UBT Mode: Local VLAN
 - UBT is supported only on the default VRF.
 - Source interface is specified using command ip source-interface.
 - VLAN is specified using command ubt-client-vlan.
 - No feature should be configured on ubt-client-vlan.
 - Client IP tracker is not supported for UBT clients.
 - UBT does not support tagged clients.
 - UBT clients and non-UBT clients on same VLAN and same port is not supported.
 - Source interface change: Disable UBT, change the source-interface, enable UBT.

• UBT Mode: VLAN extend

- UBT is supported only on the default VRF.
- Source interface is specified using command ip source-interface.
- UBT client vlan is defined under role.
- DHCP snooping and ND-snooping should not enabled on a UBT client assigned VLAN.
- IGMP snooping should not be enabled on a UBT client assigned VLAN.
- Client IP tracker is not supported for UBT clients.
- The VLAN on which UBT clients are placed should not be configured on the switch uplink.
- UBT clients and non-UBT clients on the same VLAN on the same switch is not supported.
- Source interface change: Disable UBT, change the source-interface, enable UBT.

• PC behind an IP phone

You should not have a PC and phone on the same VLAN on the same port when the PC is a UBT client and the phone is a non-UBT client. If you do, UBT clients broadcast/multicast packets will return to the same port and corrupt the phone MAC table.

Clients behind an L2 switch on the same VLAN

You should not have clients behind an L2 switch in a UBT environment. If UBT and non-UBT clients are behind an L2 switch on the same VLAN, this will cause duplicate packets. Broadcast/multicast packets will be copied to the tunnel and locally, causing the client to receive duplicate packets and network instability.



Comparison between UBT modes

UBT Mode: Local VLAN	UBT Mode: VLAN extend
Switch unaware of UBT user VLAN	Switch is aware of user VLAN
Colorless ports: No UBT user VLAN config at switch	Colorless ports: UBT User VLAN config is required on switch
VLAN assignment by controller	VLAN assignment by switch
Supports only untagged UBT users	Supports both tagged/untagged UBT users
Controller replicates the broadcast/multicast traffic (converting bcast/mcast to unicast) and sends it to every UBT client	Single dedicated multicast GRE tunnel will be established between the controller and switch for Broadcast/Multicast traffic
Controller forwards all broadcast/multicast traffic to the UBT clients which are part of the same VLAN	Switch will forward the broadcast/multicast traffic to the UBT clients which are part of the same VLAN
The unicast/multicast/broadcast traffic from controller to switch is sent to the clients via the same UAC tunnel	The unicast traffic from controller to switch is sent through the UAC tunnel and multicast/broadcast traffic via Multicast GRE tunnel
Multicast traffic will be sent to the client which send join	Multicast traffic will be sent to all UBT clients on the same VLAN

User-based tunneling commands

backup-controller ip

Syntax

backup-controller ip <IP-ADDR>

no backup-controller ip <IP-ADDR>

Description

Specifies the IP address of the backup controller for the zone.

The no form of this command deletes the IP address of the backup controller.

Command context

config-ubt-<ZONE-NAME>

Parameters

<IP-ADDR>

Specifies the IP address of the backup controller.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Specifying the backup controller ip address for zone1:

switch(config)# ubt zone zone1
switch(config-ubt-zone1)# backup-controller ip 10.116.51.11

Delete the configured backup controller IP address:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no backup-controller ip 10.116.51.11
```

enable

Syntax

enable

no enable

Description

Enables UBT. The no form of this command disables UBT.

Command context

config-ubt-<ZONE-NAME>

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling UBT for zone zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# enable
```

Disabling UBT for zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no enable
```

ip source-interface

Syntax

ip source-interface {all | ubt} {interface <IFNAME> | <IPV4-ADDR>} [vrf <VRF-NAME>]

no ip source-interface {all | ubt} {interface <IFNAME> | <IPV4-ADDR>} [vrf <VRF-NAME>]

Description

Sets a single source IP address for UBT. This ensures that all traffic sent by UBT has the same source IP address, regardless of how it egresses the switch.

This command provides two ways to set the source IP addresses: either by specifying a static IP address, or by using the address assigned to a switch interface. If you define both options, then the static IP address takes precedence.

The no form of this command deletes the single source IP address for UBT.

Command contexts

config

Parameters

all

When used no other parameters are required.

interface <IFNAME>

Specifies the name of the interface from which UBT obtains its source IP address. The interface must have a valid IP address assigned to it. If the interface has both a primary and secondary IP address, the primary IP address is used.

<IPV4-ADDR>

Specifies the source IP address to use for UBT. The IP address must be defined on the switch, and it must exist on the specified VRF, Default: default. Specify the address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255.

vrf <VRF-NAME>

Specifies the name of the VRF from which UBT sets its source IP address.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Setting interface 1/1/7 as the source address for UBT for VRF default:

switch(config)# ip source-interface ubt interface 1/1/7 vrf default

Deleting the configured source interface 1/1/7 as the source address for UBT for VRF default:

switch(config) # no ip source-interface ubt interface 1/1/7 vrf default

Specifying the static IP address 1.1.1.1 as the source address for UBT for VRF default:

switch(config)# ip source-interface ubt 1.1.1.1 vrf default

Deleting the configured ip address as the source address for UBT for VRF default:

switch(config)# no ip source-interface ubt 1.1.1.1 vrf default

papi-security-key

Syntax

papi-security-key {ciphertext <PASSKEY> | plaintext <PASSKEY>}

no papi-security-key

Description

Specifies the shared key used to encrypt UBT PAPI messages exchanged between the switch and the controller cluster for the zone.

The no form of this command deletes the shared key.

Command context

config-ubt-<ZONE-NAME>

Parameters

ciphertext <PASSKEY>

Specifies an encrypted passkey. Length: 10 to 64 characters.

plaintext <PASSKEY>

Specifies a plaintext passkey. Length: 10 to 64 characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Specifying the PAPI security key plaintext testingtesting for UBT zone zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# papi-security-key plaintext testingtesting
```

Removing the PAPI security key:

switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no papi-security-key

primary-controller ip

Syntax

primary-controller ip <IP-ADDR>

```
no primary-controller ip <IP-ADDR>
```

Description

Specifies the IP address of the primary controller IP address for the zone.

The no form of this command deletes the IP address of the primary controller.

Command context

config-ubt-<ZONE-NAME>

Parameters

```
<IP-ADDR>
```

Specifies the IP address of the primary controller.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Specify the primary controller IP address for zone1:

switch(config)# ubt zone zone1
switch(config-ubt-zone1)# primary-controller ip 10.116.51.10

Delete the configured primary controller IP address:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no primary-controller ip 10.116.51.10
```

sac-heartbeat-interval

Syntax

```
sac-heartbeat-interval <TIME>
```

```
no sac-heartbeat-interval <TIME>
```

Description

Specifies the SAC heartbeat refresh time interval in seconds.

The no form of this command sets the heartbeat interval to the default value.

Command context

```
config-ubt-<ZONE-NAME>
```

Parameters

<TIME>

Specifies the SAC heartbeat refresh time interval in seconds. Range: 1 to 8. Default: 1.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Specifying a heartbeat refresh interval of 1 for UBT zone1:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# sac-heartbeat-interval 1
```

Deleting the configured heartbeat refresh interval:

```
switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no sac-heartbeat-interval
```

show ip source-interface ubt

Syntax

show ip source-interface ubt

Description

Displays single source IP address configuration information for UBT.

Command context

Operator (>) or Manager (#)
Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing single source IP address configuration information:

switch# sh ip source-interface ubt

Source-interface	e Configuration Info	rmation	
Protocol	Src-Interface	Src-IP	VRF
ubt	vlan15	15.212.219.63	default

show capacities ubt

Syntax

show capacities ubt

Description

Shows the maximum number of UBT clients and zones which can be configured in the system.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing maximum number of UBT clients and zones which can be configured:

```
switch# show capacities ubt
System Capacities: Filter UBT
Capacities
Name
Value
Maximum number of UBT clients in a
system
Naximum number of UBT zones per
VRF
1 8
```

show ubt

Syntax

```
show ubt [brief]
```

```
show ubt zone <ZONE-NAME> [brief]
```

Description

Shows global configuration information for UBT in addition to detailed or brief information for a specific UBT zone.

Command context

Operator (>) or Manager (#)

Parameters

zone <ZONE-NAME>

Specifies the name of a zone. Length: 1 to 64 characters.

brief

Displays brief information.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing global UBT configuration information where local-VLAN mode has been configured:

```
switch# show ubt
```

lone Name	:	zonel
JBT Mode	:	local-vlan
Primary Controller	:	10.116.51.10
Backup Controller	:	10.116.51.11
SAC HeartBeat Interval	:	1
JAC KeepAlive Interval	:	60
Reserved VLAN Identifier	:	4094
/RF Name	:	default
Admin State	:	ENABLED
PAPI Security Key	:	AQBapdxySvGPvdTlkYn1/naKX403jKHrm28xLYf06mLOK499BwAAAHdJp/bL4FE=

Showing global UBT configuration information where VLAN-extend mode has been configured:

switch# show ubt

: zonel
: vlan-extend
: 10.116.51.10
: 10.116.51.11
: 1
: 60
er : -NA-
: default
: ENABLED
: AQBapdxySvGPvdTlkYn1/naKX4O3jKHrm28xLYfO6mLOK499BwAAAHdJp/bL4FE=

Showing brief global UBT configuration information where local-VLAN mode has been configured:

switch# show	ubt brief			
Zone Name	UBT Mode	Primary Controller Address	VRF Name	Status
zone1	local-vlan	10.116.51.10	default	Enabled

Showing brief global UBT configuration information where VLAN-extend mode has been configured:

```
switch# show ubt brief
```

Zone Name	UBT Mode	Primary Controller Address	VRF Name	Status
zonel	vlan-extend	10.116.51.10	default	Enabled

Showing brief configuration for UBT zone1 where local-VLAN mode has been configured:

switch# show	ubt zone zonel brief			
Zone Name	UBT Mode	Primary Controller Address	VRF Name	Status
zone3	local-vlan	30.116.51.10	default	Enabled

Showing brief configuration for UBT zone1 where VLAN-extend mode has been configured:

switch# show	ubt zone zonel brief			
Zone Name	UBT Mode	Primary Controller Address	VRF Name	Status
zone1	vlan-extend	10.116.51.10	default	Enabled

show ubt information

Syntax

show ubt information

show ubt information zone <ZONE-NAME>

Description

Shows SAC and UAC information for UBT. Specifying a zone name displays UBT information for that zone.

Command context

Operator (>) or Manager (#)

Parameters

ZONE-NAME

Specifies UBT zone name. Maximum characters: 64.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing SAC and UAC information for the tunneled node server:

```
switch# show ubt information
```

```
Zone zonel:
SAC Information
Active : 10.116.51.12
Standby : 10.116.51.13
Node List Information
Cluster Name : my-cluster
```

Node List 10.1.1.1 10.1.1.2 10.1.1.3 Bucket Map Information Bucket Name : my-bucket Bucket Map Active : [0...255] Bucket ID A-UAC S-UAC Connectivity 10.1.1.110.1.1.2L210.1.1.210.1.1.3L210.1.1.310.1.1.1L2 0 1 2 Showing SAC and UAC information for zone1: switch# show ubt information zone zone1

Zone zone1: SAC Information Active : 10.116.51.12 Standby : 10.116.51.13 Node List Information Cluster Name : my-cluster Node List 10.1.1.1 10.1.1.2 10.1.1.3 Bucket Map Information : my-bucket Bucket Name Bucket Map Active : [0...255] Bucket ID A-UAC S-UAC Connectivity -----_____ 10.1.1.110.1.1.2L210.1.1.210.1.1.3L210.1.1.310.1.1.1L2 0 1 2

show ubt state

Syntax

show ubt state

show ubt state zone <ZONE-NAME>

show ubt state zone <ZONE-NAME> uac-ip <UAC-ADDR>

Description

Shows the global UBT state.

Specifying a zone shows the UBT state of that zone.

Specifying a UAC IP address shows the UBT state of that UAC.

Command context

Operator (>) or Manager (#)

Parameters

zone <ZONE-NAME>

Specifies UBT zone name. Maximum characters: 64.

uac-ip <UAC-ADDR>

Specifies the IP address of the user anchor controller for which to view user information. Specify the address in IPv4 format (x.x.x), where x is a decimal number from 0 to 255.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing the UBT state where local-VLAN mode has been configured:

```
switch# show ubt state
Zone zone1:
Local Master Server (LMS) State:
LMS Type IP Address State
                                 Role
_____
Primary : 15.212.219.55 ready_for_bootstrap operational_primary
Secondary : 15.212.219.57 ready for bootstrap operational secondary
Switch Anchor Controller (SAC) State:
         IP Address
                    MAC Address
                                    State
_____
Active: 15.212.219.5500:0b:86:b7:62:9fRegisteredStandby: 15.212.219.5700:0b:86:b7:64:0fRegistered
User Anchor Controller(UAC): 15.212.219.55
            Port State
User
                                         Bucket ID Gre Key VLAN
_____
                                         5
                                                1.3 4000
00:00:00:00:00:05 1/1/19 registered
User Anchor Controller (UAC): 15.212.219.57
            Port State
                                         Bucket ID Gre Key VLAN
User
_____
00:00:00:00:00:04 1/1/20 registered
                                            14 4000
                                          4
Showing the UBT state where VLAN-extend mode has been configured:
```

switch# **show ubt state** Zone zone1: Local Master Server (LMS) State: LMS Type IP Address State Role

Primary : 15.212.219.55 ready for bootstrap operational primary Secondary : 15.212.219.57 ready for bootstrap operational secondary Switch Anchor Controller (SAC) State: IP Address MAC Address State _____ Active : 15.212.219.55 00:0b:86:b7:62:9f Registered Standby : 15.212.219.57 00:0b:86:b7:64:0f Registered User Anchor Controller(UAC): 15.212.219.55 User Port State Bucket ID Gre Key VLAN 00:00:00:00:00:05 1/1/19 registered 13 5 10 User Anchor Controller (UAC): 10.116.51.10 User Port State Bucket ID Gre Key VLAN 00:00:00:00:00:04 1/1/20 registered 4 14 20 Showing the UBT state of zone1: switch# show ubt state zone zone1 Zone zone1: Local Master Server (LMS) State: LMS Type Role IP Address State ----------Primary : 20.212.219.55 ready_for_bootstrap operational_primary Secondary : 20.212.219.57 ready for bootstrap operational secondary Switch Anchor Controller (SAC) State: IP Address MAC Address State _____ _____ Active: 20.212.219.5500:ab:86:b7:62:9fRegisteredStandby: 20.212.219.5700:ab:86:b7:64:0fRegistered User Anchor Controller (UAC): 20.212.219.55 User Port State Bucket ID Gre Key VLAN -----_____ 00:00:00:00:00:10 1/1/20 registered 5 16 30 User Anchor Controller (UAC): 20.212.219.57 Port State User Bucket ID Gre Key VLAN -----_____ 00:00:00:00:00:20 1/1/30 registered Showing the UBT state of a UAC with IP address 15.212.219.57 where local-VLAN mode has been configured: switch# show ubt state zone zone1 uac-ip 15.212.219.57 User Anchor Controller (UAC): 15.212.219.57

User	Port	State	Bucket ID	Gre Key	VLAN
00:00:00:00:00:04	1/1/20	registered	4	14	4000

Showing the UBT state of a UAC with IP address 15.212.219.55 where VLAN-extend mode has been configured:

switch# show ubt state zone zone1 uac-ip 15.212.219.55

```
User Anchor Controller (UAC): 15.212.219.55
```

User	Port	State	Bucket ID	Gre Key	VLAN
00:00:00:00:00:07	1/1/10	registered	40	14	20
00:00:00:00:00:08	1/1/12	registered	28	14	30

show ubt statistics

Syntax

show ubt statistics

show ubt statistics zone <ZONE-NAME>

show ubt statistics zone <ZONE-NAME> uac-ip <UAC-ADDR>

Description

Displays statistics for UBT.

Specifying a zone shows the UBT statistics for that zone.

Specifying a UAC IP address shows the UBT statistics for that UAC.

Command context

```
Operator (>) or Manager (#)
```

Parameters

zone <ZONE-NAME>

Specifies UBT zone name. Maximum characters: 64.

uac-ip <UAC-ADDR>

Specifies the IP address of the user anchor controller for which to view user information. Specify the address in IPv4 format (x.x.x), where x is a decimal number from 0 to 255.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing UBT statistics where local-VLAN mode has been configured:

```
switch# show ubt statistics
UBT Statistics
Zone zone1:
Control Plane Statistics
Active : 10.1.1.1
Bootstrap Tx : 10
Nodelist Rx : 25
Nodelist Ack Rx : 6
```

```
Bucketmap Ack Rx : 10
Failover Ack Rx : 3
Unbootstrap Ack Rx : 5
    Bucketmap Rx : 21
    Failover Tx : 4
    Unbootstrap Tx : 7
    Heartbeat Tx : 5
                                       Heartbeat Rx : 3
  Standby : 10.1.1.2
   Bootstrap Tx : 10
Nodelist Rx : 25
                                      Bootstrap Rx : 10
Nodelist Ack Rx : 6
                                      Bucketmap Ack Rx : 12
Failover Ack Rx : 3
Unbootstrap Ack Rx : 3
   Bucketmap Rx : 21
Failover Tx : 4
    Unbootstrap Tx : 5
    Heartbeat Tx : 7
                                       Heartbeat Rx : 4
  UAC : 10.1.1.3
                                    Bootstrap Ack Rx : 5
Unbootstrap Ack Rx : 5
   Bootstrap Tx : 10
    Unbootstrap Tx : 5
   Keepalive Tx : 2
                                       Keepalive Ack Rx : 2
 UAC : 10.1.1.4
   Bootstrap Tx : 5
                                      Bootstrap Ack Rx : 5
    Unbootstrap Tx : 0
                                       Unbootstrap Ack Rx : 0
                                       Keepalive Ack Rx : 0
    Keepalive Tx : 0
Data Plane Statistics
  UAC Packets Tx Packets Rx
  ------
 10.1.1.1456782345610.1.1.23456723457
User Statistics
  UAC User Count
  _____
  10.1.1.1 1
```

Showing UBT statistics where VLAN-extend mode has been configured:

10.1.1.2 2

```
switch# show ubt statistics
UBT Statistics
Zone zone1:
Control Plane Statistics
 Active : 10.1.1.1
                                         Bootstrap Rx : 10
Nodelist Ack Rx : 6
Bucketmap Ack Rx : 10
Failover Ack Rx : 3
Unbootstrap Ack Rx : 5
   Bootstrap Tx : 10
   Bootstrap 1x . 25
Nodelist Rx : 25
Bucketmap Rx : 21
    Failover Tx : 4
    Unbootstrap Tx : 7
Heartbeat Tx : 5
                                             Unbootstrap Ack Rx : 5
                                              Heartbeat Rx : 3
  Standby : 10.1.1.2
                                        Bootstrap Rx : 10
Nodelist Ack Rx : 6
Bucketmap Ack Rx : 12
Failover Ack Rx : 3
Unbootstrap Ack R
   Bootstrap Tx : 10
    Nodelist Rx : 25
    Bucketmap Rx : 21
    Failover Tx : 4
    Unbootstrap Tx : 5
                                             Unbootstrap Ack Rx : 3
    Heartbeat Tx : 7
                                              Heartbeat Rx : 4
  UAC : 10.1.1.3
 Bootstrap Tx : 10 Bootstrap Ack Rx : 5
```

Unbootstrap Tx : 5 Unbootstrap Ack Rx : 5 Keepalive Tx : 2 Keepalive Ack Rx : 2 UAC : 10.1.1.4 Bootstrap Tx : 5 Bootstrap Ack Rx : 5 Unbootstrap Tx : 0Dootstrap Ack Rx : 5Keepalive Tx : 0Unbootstrap Ack Rx : 0 Keepalive Tx : 0 Keepalive Ack Rx : 0 Data Plane Statistics : 444 SAC tunnel Rx Standby-SAC tunnel Rx : 0 UAC Packets Tx Packets Rx _____ 10.1.1.3456782345610.1.1.43456723457 User Statistics UAC User Count -----10.1.1.3 1 10.1.1.4 2

Showing UBT statistics for zone1 where local-vlan mode has been configured:

```
switch# show ubt statistics zone zone1
UBT Statistics
Zone zone1:
Control Plane Statistics
  Active : 10.1.1.1
  Bootstrap Tx:10Bootstrap Rx:10Nodelist Rx:25Nodelist Ack Rx:6Bucketmap Rx:21Bucketmap Ack Rx:10Failover Tx:4Failover Ack Rx:3Unbootstrap Tx:7Unbootstrap Ack Rx:5Heartbeat Tx:5Heartbeat Rx:3
                                      Bootstrap Rx : 10
Nodelist Ack Rx : 6
Bucketmap Ack Rx : 12
Failover Ack Rx : 3
Unbootstrap Ack D
  Standby : 10.1.1.2
   Bootstrap Tx : 10
    Nodelist Rx : 25
Bucketmap Rx : 21
Failover Tx : 4
    Unbootstrap Tx : 5
    Heartbeat Tx : 7
                                                 Heartbeat Rx : 4
  UAC : 10.1.1.3
                                       Bootstrap Ack Rx : 5
Unbootstrap Ack Rx : 5
   Bootstrap Tx : 10
    Unbootstrap Tx : 5
    Keepalive Tx : 2
                                                Keepalive Ack Rx : 2
  UAC : 10.1.1.4
    Bootstrap Tx : 5
Unbootstrap Tx : 0
                                      Bootstrap Ack Rx : 5
Unbootstrap Ack Rx : 0
    Keepalive Tx : 0
                                                Keepalive Ack Rx : 0
Data Plane Statistics
  UAC Packets Tx Packets Rx
  _____
```

```
10.1.1.3456782345610.1.1.43456723457
```

User Statistics

Showing UBT statistics for *zonel* where VLAN-extend mode has been configured:

```
switch# show ubt statistics zone zone1
UBT Statistics
Zone zone1:
Control Plane Statistics
                                      Bootstrap Rx : 10
Nodelist Ack Rx : 6
Bucketmap Ack Rx : 10
Failover Ack Rx : 3
Unbootstrap Ack T
  Active : 10.1.1.1
   Bootstrap Tx : 10
Nodelist Rx : 25
Bucketmap Rx : 21
Failover Tx : 4
Unbootstrap Tx : 7
Heartbeat Tx : 5
                                            Heartbeat Rx : 3
                                      Bootstrap Rx : 10
Nodelist Ack Rx : 6
Bucketmap Ack Rx : 12
Failover Ack Rx : 3
Unbootstrap Ack Pv - 2
  Standby : 10.1.1.2
   Bootstrap Tx : 10
    Nodelist Rx : 25
Bucketmap Rx : 21
    Failover Tx : 4
    Unbootstrap Tx : 5
                                            Heartbeat Rx : 4
    Heartbeat Tx : 7
  UAC : 10.1.1.3
                                    Bootstrap Ack Rx : 5
   Bootstrap Tx : 10
    Unbootstrap Tx : 5
                                            Unbootstrap Ack Rx : 5
    Keepalive Tx : 2
                                            Keepalive Ack Rx : 2
  UAC : 10.1.1.4
                                        Bootstrap Ack Rx : 5
Unbootstrap Ack Rx : 0
   Bootstrap Tx : 5
    Unbootstrap Tx : 0
    Keepalive Tx : 0
                                            Keepalive Ack Rx : 0
Data Plane Statistics
                                     : 444
  SAC tunnel Rx
  Standby-SAC tunnel Rx
                                      : 0
  UAC Packets Tx Packets Rx
  _____
  10.1.1.3456782345610.1.1.43456723457
User Statistics
  UAC User Count
  _____
  10.1.1.3 1
 10.1.1.4 2
```

Showing the UBT state of a UAC with IP address 123.222.212.90:

show ubt users

Syntax

show ubt users [all | count | down | mac <MAC-ADDR> | {port <IF-NAME> | <IF-RANGE>} | up] zone <ZONE-NAME>

Description

Displays user information for UBT.

Command context

Operator (>) or Manager (#)

Parameters

all

Display information for all users.

count

Display the total number of users configured to tunnel traffic.

down

Display the users that are not able to tunnel traffic.

mac <MAC-ADDR>

Display user information based on MAC address.

port <IF-NAME> | <IF-RANGE>

Display user information for a specific interface or range of interfaces. For example, port 1/1/1 or port 1/1/1-1/1/10.

up

Display user information that are active.

zone <ZONE-NAME>

Specifies UBT zone name. Maximum characters: 64.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

On the 6400 Switch Series, interface identification differs.

Showing information for all users:

switch# show ubt users all

====== Display	ing All UBT Users f	for Zone: zone1		
 Downloa Port	ded user roles are Mac Address	preceded by * Tunnel Status	Secondary UserRole	Failure Reason
1/25	00:00:00:11:12:03	activated	authenticated	/

Showing information for users of zone1:

switch# show ubt users all zone zone1

Displaying All UBT Users for Zone: zone1 Downloaded user roles are preceded by * Port Mac Address Tunnel Status Secondary UserRole Failure Reason 1/25 00:00:00:11:12:03 activated authenticated ---/---

Displaying the number of users that are tunneling traffic:

switch# show ubt users count

Total Number of Users using ubt Zone : zone1 is 2 Total Number of Users in all the zones : 2

Showing users that are down:

switch# show ubt users down

Displaying UBT Users of Zone: zone1 having Tunnel Status DOWN Downloaded user roles are preceded by * Port Mac Address Tunnel Status Secondary UserRole Failure Reason 1/25 00:00:00:11:12:03 activation failed authenticated PBF Failure

Showing information for users of zone1 that are down:

switch# show ubt users down zone zone1

Displaying UBT Users of Zone: zonel having Tunnel Status DOWN Downloaded user roles are preceded by * Port Mac Address Tunnel Status Secondary UserRole Failure Reason 1/25 00:00:00:11:12:03 activation_failed authenticated PBF Failure

Showing information for users on port 2/25:

switch# show ubt users port 2/25

Displaying UBT Users of Zone: zone1 Downloaded user roles are preceded by * Port Mac Address Tunnel Status Secondary UserRole Failure Reason 2/25 00:00:00:11:12:03 activated authenticated ---/---

Showing information for users that are up:

switch# show ubt users up

Displaying UBT Users of Zone: zone1 having Tunnel Status UP Downloaded user roles are preceded by * Port Mac Address Tunnel Status Secondary UserRole Failure Reason 1/25 00:00:00:11:12:03 activated authenticated ---/---

Showing information for users of zone1 that are up:

switch# show ubt users up zone zone1

Displaying UBT Users of Zone: zonel having Tunnel Status UP Downloaded user roles are preceded by * Port Mac Address Tunnel Status Secondary UserRole Failure Reason 1/25 00:00:00:11:12:03 activated authenticated ---/---

Showing information for the user with MAC address 00:00:00:11:12:03:

switch# show ubt users mac 00:00:00:11:12:03

Displaying UBT User of Zone: zone1 having MAC-Address: 00:00:00:11:12:03 Downloaded user roles are preceded by * Port Mac Address Tunnel Status Secondary UserRole Failure Reason 1/25 00:00:00:11:12:03 activated authenticated ---/---

uac-keepalive-interval

Syntax

uac-keepalive-interval <TIME>

no uac-keepalive-interval <TIME>

Description

Specifies the UAC keep alive refresh time interval in seconds.

The no form of this command sets the keep alive interval to the default value.

Command context

config-ubt-<ZONE-NAME>

Parameters

<TIME>

Specifies the UAC keep-alive refresh time interval in seconds. Range: 1 to 60. Default: 60.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Specifying a keepalive interval of 60 seconds for UBT zone1:

switch(config)# ubt zone zone1
switch(config-ubt-zone1)# uac-keepalive-interval 60

Deleting the configured UAC keepalive interval:

switch(config)# ubt zone zone1
switch(config-ubt-zone1)# no uac-keepalive-interval 60

ubt

Syntax

ubt zone <ZONE-NAME> vrf <VRF-NAME>

no ubt zone <ZONE-NAME> vrf <VRF-NAME>

Description

Creates a user-based tunneling (UBT) zone with a specified zone name and VRF name. A UBT name is used to configure all tunneled node server properties advertised by the tunneled node feature.

The no form of this command removes the specified UBT zone.

Command context

config

Parameters

<ZONE-NAME>

Specifies a name for the UBT zone. Length: 1 to 64 characters.

<VRF-NAME>

Specifies the VRF on which to establish the UBT tunnel.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating UBT zone called <code>zone1</code> associated with a VRF called <code>default</code>:

switch(config)# ubt zone zone1 vrf default

Removing UBT zone zone1 on VRF default:

switch(config) # no ubt zone zone1 vrf default

Deleting all UBT configurations:

switch(config)# no ubt

ubt-client-vlan

Syntax

ubt-client-vlan <VLAN-ID>

no ubt-client-vlan <VLAN-ID>

Description

Specifies the UBT Client VLAN or local VLAN. This VLAN is used in local-VLAN mode only. If the UBT client VLAN is configured in VLAN-extend mode it is ignored. No other feature should be enabled on the UBT client VLAN.

The no form of this command removes the VLAN to use for tunneled clients.

Command context

config

Parameters

<VLAN-ID>

Specifies the VLAN ID to use for tunneled clients. Range: 1-4094.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating VLAN 4000:

switch(config)# vlan 4000
switch(config-vlan-4000)# no shutdown

Specifying UBT client VLAN 4000:

switch(config)# ubt-client-vlan 4000

Removing configured UBT client VLAN 4000:

switch(config)# no ubt-client-vlan 4000

ubt mode vlan-extend

Syntax

ubt-mode vlan-extend

no ubt-mode

Description

Selects VLAN extended mode. When VLAN-extend mode is enabled clients are assigned to their UBT rolebased VLAN in the hardware datapath.

The no form of the command selects local-VLAN mode. In local-VLAN mode clients are assigned to a local switch VLAN and associated with their UBT role-based VLAN when client traffic reaches the controller.

The default UBT mode is local-VLAN.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the UBT mode to VLAN-extend:

switch(config)# ubt-mode vlan-extend

Setting the UBT mode back to the default of local-VLAN:

switch(config) # no ubt-mode

Simple Network Management Protocol (SNMP) is an Internet-standard protocol used for managing and monitoring the devices connected to a network by collecting, organizing and modifying information about managed devices on IP networks.

Configuring SNMP

(The SNMP agent provides read-only access.)

Procedure

- 1. Enable SNMP on a VRF using the command snmp-server vrf.
- 2. Set the system contact, location, and description for the switch with the following commands:
 - snmp-server system-contact
 - snmp-server system-location
 - snmp-server system-description
- **3.** If required, change the default SNMP port on which the agent listens for requests with the command snmp-server agent-port.
- **4.** By default, the agent uses the community string **public** to protect access through SNMPv1/v2c. Set a new community string with the command snmp-server community.
- 5. Configure the trap receivers to which the SNMP agent will send trap notifications with the command snmp-server host.
- 6. Create an SNMPv3 context and associate it with any available SNMPv3 user to perform context specific v3 MIB polling using the command snmpv3 user .
- 7. Create an SNMPv3 context and associate it with an available SNMPv1/v2c community string to perform context specific v1/v2c MIB polling using the command snmpv3 context.
- **8.** Review your SNMP configuration settings with the following commands:
 - show snmp agent-port
 - show snmp community
 - show snmp system
 - show snmpv3 context
 - show snmp trap
 - show snmp vrf
 - show snmpv3 users
 - show tech snmp

Example Example 1

This example creates the following configuration:

- Enables SNMP on the out-of-band management interface (VRF mgmt).
- Sets the contact, location, and description for the switch to: JaniceM, Building2, LabSwitch.
- Sets the community string to Lab8899X.

```
switch(config)# snmp-server vrf mgmt
switch(config)# snmp-server system-contact JaniceM
switch(config)# snmp-server system-location Building2
switch(config)# snmp-server system-description LabSwitch
switch(config)# snmp-server community Lab8899X
```

Example 2

This example creates the following configuration:

- Creates an SNMPv3 user named **Admin** using **sha** authentication with the plaintext password **mypassword** and using **des** security with the plaintext password **myprivpass**.
- Associates the SNMPv3 user Admin with a context named newContext.

```
switch(config)# snmpv3 user Admin auth sha auth-pass plaintext mypassword priv des
    priv-pass plaintext myprivpass
switch(config)# snmpv3 user Admin context newContext
```

SNMP commands

rmon alarm

Syntax

```
rmon alarm index <INDEX> snmp-oid <SNMP-OID> rising-threshold <RISING-THRESHOLD>
falling-threshold <FALLING-THRESHOLD> [sample-interval <SAMPLE-INTERVAL>] [sample-type <ABSOLUTE|DELTA>]
```

no rmon alarm [index <INDEX>]

Description

Stores configuration entries in an alarm table that defines the sample interval, sample-type, and threshold parameters for an SNMP MIB object. Only the SNMP MIB objects that resolve to an ASN.1 primitive type of INTEGER (INTEGER, Integer32, Counter32, Counter64, Gauge32, or TimeTicks) will be monitored.

The no form of this command removes all RMON alarms and allows you to specify an index to remove a particular RMON alarm.

Command context

config

Parameters

index <INDEX>

Specifies the RMON alarm index. Range: 1 to 20.

snmp-oid <SNMP-OID>

Specifies the SNMP MIB object to be monitored by RMON.

rising-threshold <RISING-THRESHOLD>

Specifies the upper threshold value for the RMON alarm.

falling-threshold <FALLING-THRESHOLD>

Specifies the falling threshold value for the RMON alarm. The falling threshold must be less than the rising threshold.

sample-interval <SAMPLE-INTERVAL>

Sample interval in seconds. Default: 30.

sample-type <ABSOLUTE|DELTA>

Specifies the method of sampling of the SNMP MIB object. Default: Absolute.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring RMON for the MIB object **ifOutErrors**.**15** with an index **1**, rising threshold of **2147483647** and falling threshold of **-2134** using **absolute** sampling for a sample interval of **100** seconds:

switch(config)# rmon alarm index 1 snmp-oid ifOutErrors.15 rising-threshold 2147483647 falling-threshold -2134 sample-type absolute sample-interval 100

Removing RMON alarm with the index 5:

switch(config)# no rmon alarm index 5

show rmon alarm

Syntax

```
show rmon alarm [index <INDEX>]
```

Description

Displays the RMON alarm configurations.

Command context

config

Parameters

index <INDEX>

Specifies the RMON alarm index. Range: 1 to 20.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing all RMON alarm configurations:

switch# show rmon a	la	arm
Index	:	1
Enabled	:	true
Status	:	valid
MIB object	:	ifOutErrors.15
Sample type	:	delta
Sampling interval	:	6535 seconds
Rising threshold	:	100
Falling threshold	:	10
Last sampled value	:	0
Last sample time	:	2020-09-21 05:58:11
Index	:	3
Enabled	:	true
Status	:	invalid
MIB object	:	IF-MIB::ifDescr.19
Sample type	:	absolute
Sampling interval	:	10000 seconds
Rising threshold	:	4000
Falling threshold	:	10
Last sampled value	:	0

Showing RMON alarm with alarm index 1:

switch# show rmon alarm index 1
Index : 1
Enabled : true
Status : valid
MIB object : ifOutErrors.15
Sample type : delta
Sampling interval : 6535 seconds
Rising threshold : 100
Falling threshold : 10
Last sampled value : 0
Last sample time : 2020-06-21 05:58:11

Showing disabled RMON alarm information:

switch# show rmon		alarm
Index	:	1
Enabled	:	false
Status	:	valid
MIB object	:	ifOutErrors.15
Sample type	:	delta
Sampling interval	:	6535 seconds
Rising threshold	:	100
Falling threshold	:	10
Last sampled value	:	0
Last sample time	:	2020-09-21 05:58:11
Index	:	3
Enabled	:	false
Status	:	invalid
MIB object	:	IF-MIB::ifDescr.19
Sample type	:	absolute
Sampling interval	:	10000 seconds
Rising threshold	:	4000
Falling threshold	:	10
Last sampled value	:	0

show snmp agent-port

Syntax

show snmp agent-port

Description

Displays SNMP agent UDP port number.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying SNMP agent UDP port number:

```
switch# show snmp agent-port
SNMP agent port : 161
```

show snmp community

Syntax

show snmp community

Description

Displays a list of all configured SNMPv1/v2c communities.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Usage

When a user creates a custom community before enabling an SNMP agent, AOS-CX automatically removes the default <code>public</code> community from the system.

Example

Displaying a list of all configured SNMPv1/v2c communities:

Before any community is created by user

```
switch# show snmp community
SNMP communities
```

After community is created by user

```
switch#show snmp community
______
SNMP communities
______
private
private2
```

show snmp system

Syntax

show snmp system

Description

Displays SNMP description, location, and contact information.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying SNMP description, location, and contact information:

```
switch# show snmp system
SNMP system information
------
System description : Aggregation router
System location : Main lab
System contact : John Smith, Lab Admin
```

show snmp trap

Syntax

show snmp trap

Description

Displays all configured SNMP traps/informs receivers.

Command context

```
Operator (>) or Manager (#)
```

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying all configured SNMP trap and informs receivers:

switch# **show snmp trap** HOST

PORT TYPE VER COMMUNITY/USER NAME VRF

10.10.10	162	trap	v1	public	default
10.10.10.10	162	inform	v2c	public	default
10.10.10.10	162	inform	v3	name	default

show snmp vrf

Syntax

show snmp vrf

Description

Displays the VRF on which the SNMP agent service is running.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying SNMP services enabled on VRF:

```
switch#show snmp vrf
SNMP enabled VRF
------
mgmt
default
```

show snmpv3 context

Syntax

show snmpv3 context

Description

Displays all configured SNMP contexts.

Command context

```
Operator (>) or Manager (#)
```

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying all configured SNMP contexts:

```
switch# show snmpv3 context
name vrf community
```

show snmpv3 engine-id

Syntax

show snmpv3 engine-id

Description

Displays the configured SNMPv3 snmp engine-id.

If the SNMPv3 engine-id is not configured, by default a unique engine-id is created by the switch using a combination of the enterprise OID value and the switch's mac address.

Command context

```
Operator (>) or Manager (#)
```

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying the configured SNMPv3 engine-id:

```
switch# show snmpv3 engine-id
SNMP engine-id : 80:00:B8:5C:08:00:09:1d:de:a5
```

show snmpv3 security-level

Syntax

```
show snmpv3 security-level
```

Description

Displays the configured SNMPv3 security level.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying the configured SNMPv3 security level:

```
switch# show snmpv3 security-level
SNMPv3 security-level : auth
```

show snmpv3 users

Syntax

show snmpv3 users

Description

Displays all configured SNMPv3 users.

For more details on the user enabled status, see **<u>snmpv3</u> security-level**.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying all configured SNMPv3 users:

switch# show snmpv3 users

User	AuthMode	PrivMode	Context	Enabled
name	md5	none	none	False
name2	sha	aes	none	True

snmp-server agent-port

Syntax

snmp-server agent-port <PORT>

no snmp-server agent-port [<PORT>]

Description

Sets the UDP port number that the SNMP master agent uses to communicate. UDP port 161 is the default port.

The no form of this command sets the SNMP master agent port to the default value.

Command context

config

Parameters

<PORT>

Specifies the UDP port number that the SNMP master agent will use. Range: 1 to 65535. Default: 161.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the SNMP master agent port to 2000:

switch(config) # snmp-server agent-port 2000

Resetting the SNMP master agent port to the default value:

switch(config-schedule) # no snmp-server agent-port 2000

snmp-server community

Syntax

snmp-server community <STRING>

no snmp-server community <STRING>

Description

Adds an SNMPv1/SNMPv2c community string. A community string is a password that controls read access to the SNMP agent. A network management program must supply this name when attempting to get SNMP information from the switch. A maximum of 10 community strings are supported. Once you create your own community string, the default community string (public) is deleted.

The no form of this command removes the specified SNMPv1/SNMPv2c community string. When no community string exists, a default community string with the value public is automatically defined.

Command context

config

Parameters

<STRING>

Specifies the SNMPv1/SNMPv2c community string. Range: 1 to 32 printable ASCII characters, excluding space and question mark.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the SNMPv1/SNMPv2c community string to private:

switch(config)# snmp-server community private

Removing SNMPv1/SNMPv2c community string private:

switch(config)# no snmp-server community private

snmp-server host

Syntax

snmp-server host <IPv4-ADDR | IPv6-ADDR> trap version <VERSION> [community <STRING>]
[port <UDP-PORT>] [<VRF-NAME>]

no snmp-server host <IPv4-ADDR | IPv6-ADDR> trap version <VERSION> [community <STRING>]
[port <UDP-PORT>] [<VRF-NAME>]

snmp-server host <IPv4-ADDR | IPv6-ADDR> inform version v2c [community <STRING>]
[port <UDP-PORT>] [<VRF-NAME>]

no snmp-server host <IPv4-ADDR | IPv6-ADDR> inform version v2c [community <STRING>] [port <UDP-PORT>] [<VRF-NAME>]

snmp-server host <IPv4-ADDR | IPv6-ADDR> [trap version v3 | inform version v3] user <NAME>
[port <UDP-PORT>] [<VRF-NAME>]

no snmp-server host <*IPv4-ADDR* | *IPv6-ADDR*> [trap version v3 | inform version v3] user <*NAME*> [port <*UDP-PORT*>] [<*VRF-NAME*>]

Description

Configures a trap/informs receiver to which the SNMP agent can send SNMP v1/v2c/v3 traps or v2c informs. A maximum of 30 SNMP traps/informs receivers can be configured.

The no form of this command removes the specified trap/inform receiver.

Command context

config

Parameters

<IPv4-ADDR>

Specifies the IP address of a trap receiver in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255. You can remove leading zeros. For example, the address 192.169.005.100 becomes 192.168.5.100.

<IPv6-ADDR>

Specifies the IP address of a trap receiver in IPv6 format (x:x::x:x).

trap version <VERSION>

Specifies the trap notification type for SNMPv1, v2c or v3. Available options are: v1, v2c or v3.

inform version v2c

Specifies the inform notification type for SNMPv2c.

trap version v3

Specifies the trap notification type for SNMPv3.

user <NAME>

Specifies the SNMPv3 user name to be used in the SNMP trap notifications.

community <STRING>

Specifies the name of the community string to use when sending trap notifications. Range: 1 - 32 printable ASCII characters, excluding space and question mark. Default: public.

<UDP-PORT>

Specifies the UDP port on which notifications are sent. Range: 1 - 65535. Default: 162.

<VRF-NAME>

Specifies the VRF on which the SNMP agent listens for incoming requests.

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch(config)# snmp-server host 10.10.10.10 trap version v1
switch(config) # no snmp-server host 10.10.10.10 trap version v1
switch(config) # snmp-server host a:b::c:d trap version v1
switch(config)# no snmp-server host a:b::c:d trap version v1
switch (config) # snmp-server host 10.10.10.10 trap version v2c community public
switch (config) # no snmp-server host 10.10.10 trap version v2c community public
switch (config) # snmp-server host a:b::c:d trap version v2c community public
switch (config) # no snmp-server host a:b::c:d trap version v2c community public
switch(config)# snmp-server host 10.10.10.10 trap version v2c community public port 5000
switch (config) # no snmp-server host 10.10.10 trap version v2c community public port 5000
switch (config) # snmp-server host 10.10.10 trap version v2c community public port 5000 vrf default
switch (config) # no snmp-server host 10.10.10 trap version v2c community public port 5000 vrf default
switch (config) # snmp-server host a:b::c:d trap version v2c community public port 5000
switch (config) # no snmp-server host a:b::c:d trap version v2c community public port 5000
switch(config)# snmp-server host 10.10.10.10 inform version v2c community public
switch (config) # no snmp-server host 10.10.10.10 inform version v2c community public
switch(config)# snmp-server host a:b::c:d inform version v2c community public
switch(config)# no snmp-server host a:b::c:d inform version v2c community public
switch (config) # snmp-server host 10.10.10.10 inform version v2c community public port 5000
switch (config) # no snmp-server host 10.10.10.10 inform version v2c community public port 5000
switch (config) # snmp-server host 10.10.10.10 inform version v2c community public port 5000 vrf default
switch (config) # no snmp-server host 10.10.10.10 inform version v2c community public port 5000 vrf default
switch(config)# snmp-server host a:b::c:d inform version v2c community public port 5000
switch (config) # no snmp-server host a:b::c:d inform version v2c community public port 5000
switch(config)# snmp-server host 10.10.10.10 trap version v3 user Admin
switch(config)# no snmp-server host 10.10.10.10 trap version v3 user Admin
switch(config)# snmp-server host a:b::c:d trap version v3 user Admin
switch(config) # no snmp-server host a:b::c:d trap version v3 user Admin
switch (config) # snmp-server host 10.10.10.10 trap version v3 user Admin port 2000
switch (config) # no snmp-server host 10.10.10.10 trap version v3 user Admin port 2000
switch (config) # snmp-server host a:b::c:d trap version v3 user Admin port 2000
switch(config) # no snmp-server host a:b::c:d trap version v3 user Admin port 2000
```

snmp-server system-contact

Syntax

```
snmp-server system-contact <INFO>
```

no snmp-server system-contact [<INFO>]

Description

Sets SNMP contact information.

The no form of this command removes the SNMP contact information.

Command context

config

Parameters

<INFO>

Specifies SNMP contact information. Range: 1 to 128 printable ASCII characters, except for question mark (?).

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defines SNMP contact information to be John Smith, Lab Admin:

switch(config)# snmp-server system-contact John Smith, Lab Admin

Removes SNMP contact information:

switch(config)# no snmp-server system-contact

snmp-server system-description

Syntax

snmp-server system-description <DESCRIPTION>

no snmp-server system-description

Description

Sets the SNMP system description.

The no form of this command removes the SNMP system description.

Command context

config

Parameters

<DESCRIPTION>

Specifies the SNMP system description. Typical content to include would be the full name and version of the following:

- Hardware type of the system
- Software operating system
- Networking software

Range: 1 to 64 printable ASCII characters, except for the question mark (?).

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defines the SNMP system description to be **mainSwitch**:

switch(config) # snmp-server system-description mainSwitch

switch(config) # no snmp-server system-description mainSwitch

snmp-server system-location

Syntax

snmp-server system-location <INFO>

no snmp-server system-location

Description

Sets the SNMP location information.

The no form of this command removes the SNMP location information.

Command context

config

Parameters

<INFO>

Specifies the SNMP location information. Range: 1 to 128 printable ASCII characters, except for the question mark (?).

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defines the SNMP location information to be Main Lab:

switch(config) # snmp-server system-location Main Lab

Removes the SNMP location information:

switch(config) # no snmp-server system-location

snmp-server vrf

Syntax

snmp-server vrf <VRF-NAME>

no snmp-server vrf <VRF-NAME>

Description

Configures a VRF on which the SNMP agent listens for incoming requests. By default, the SNMP agent does not listen on any VRF. The SNMP agent can listen on multiple VRFs.

The no form of this command stops the SNMP agent from listening for incoming requests on the specified VRF.

Command context

config

Parameters

<VRF-NAME>

Specifies the name of a VRF.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring the SNMP agent to listen on VRF default.

switch(config)# snmp-server vrf default

Configuring the SNMP agent to listen on VRF mgmt.

switch(config) # snmp-server vrf mgmt

Configuring the SNMP agent to listen on used-defined VRF myvrf.

switch(config)# snmp-server vrf myvrf

Stopping the SNMP agent from listening on VRF default.

switch(config) # no snmp-server vrf default

snmpv3 context

Syntax

snmpv3 context <NAME> vrf <VRF-NAME> [community <STRING>]

no snmpv3 context <NAME> [vrf <VRF-NAME>]

Description

Creates an SNMPv3 context on the specified VRF.

The no form of this command removes the specified SNMP context.

Command context

config

Parameters

<NAME>

Specifies the name of the context. Range: 1 to 32 printable ASCII characters, excluding space and question mark (?).

vrf <VRF-NAME>

Specifies the VRF associated with the context. Default: default.

community <STRING>

Specifies the SNMP community string associated with the context. Range: 1 to 32 printable ASCII characters, excluding space and question mark. Default: public.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating an SNMPv3 context named **newContext**:

switch(config) # snmpv3 context newContext

Creating an SNMPv3 context named newContext on VRF myVrf and with community string private.

switch(config)# snmpv3 context newContext vrf myVrf community private

Removing the SNMPv3 context named **newContext** on VRF myVrf:

switch(config) # no snmpv3 context newContext vrf myVrf

snmpv3 engine-id

Syntax

snmpv3 engine-id <ENGINE-ID>

no snmpv3 engine-id <ENGINE-ID>

Description

Configures the SNMPv3 SNMP engine-id allowing an administrator to configure a unique SNMP engine-id for the switch. This engine-id is used by the NMS management tool to identify and distinguish multiple switches on the same network.

The no form of this command restores the default engine-id, created by the switch using a combination of the enterprise OID value and the switch's mac address.

Command context

config

Parameters

<ENGINE-ID>

SNMPv3 SNMP engine-id in colon separated hexadecimal notation.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Configuring the SNMPv3 engine-id:

```
switch(config)#
switch(config)# snmpv3 engine-id
WORD SNMPv3 snmp engine-id in colon seperated hexadecimal notation
switch(config)# snmpv3 engine-id 01:23:45:67:89:ab:cd:ef:01:23:45:67
```

Restoring the default SNMPv3 engine-id:

```
switch(config) # no snmpv3 engine-id
```

snmpv3 security-level

Syntax

snmpv3 security-level {auth | auth-privacy}

no snmpv3 security-level {auth | auth-privacy}

Description

Configures the SNMPv3 security level. The security level determines which SMNPv3 users defined by the command snmpv3 user are able to connect.

The no form of this command changes the security level as follows:

- no snmpv3 security-level auth: Sets the security level to auth-privacy.
- no snmpv3 security-level auth-privacy: Sets the security level to no authentication or privacy, allowing any SNMP user to connect.

Command context

config

Parameters

auth

SNMPv3 users that support authentication, or authentication and privacy are allowed.

auth-privacy

Only SNMPv3 users with both authentication and privacy are allowed. This is the highest level of SNMPv3 security. Default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the SNMPv3 security level to authentication and privacy:

switch(config)# snmpv3 security-level auth-privacy

Setting the SNMPv3 security level to authentication only:

switch(config)# snmpv3 security-level auth

Setting the SNMPv3 security level to no authentication and no privacy:

switch(config)# no snmpv3 security-level auth-privacy

Restoring the default SNMPv3 security level to authentication and privacy:

switch(config)# no snmpv3 security-level auth

snmpv3 user

Syntax

```
snmpv3 user <NAME> [auth <AUTH-PROTOCOL> auth-pass {plaintext | ciphertext}
<AUTH-PWORD> [priv <PRIV-PROTOCOL> priv-pass {plaintext | ciphertext} <PRIV-PWORD>] ]
```

no snmpv3 user <NAME> [auth <AUTH-PROTOCOL> auth-pass
<AUTH-PWORD> [priv <PRIV-PROTOCOL> priv-pass <PRIV-PWORD>]]

Description

Creates an SNMPv3 user and adds it to an SNMPv3 context. The no form of this command removes the specified SNMPv3 user.

For more details on the user enabled status, see **<u>snmpv3</u> security-level**.

Command context

config

Parameters

<NAME>

Specifies the SNMPv3 username. Range 1 to 32 printable ASCII characters, excluding space and question mark (?).

auth <AUTH-PROTOCOL>

Specifies the authentication protocol used to validate user logins. Available options are: md5 or sha.

auth-pass {plaintext | ciphertext} <AUTH-PWORD>

Specifies the SNMPv3 user password. Range for plaintext is 8 to32 printable ASCII characters, excluding space and question mark (?).

Range for ciphertext is 1 to 120 printable ASCII characters. This option is only used when copying user configuration settings between switches. It enables you to duplicate a user's configuration on another switch without having to know their password.

priv <PRIV-PROTOCOL>

Specifies the SNMPv3 security protocol (encryption method). Available options are: aes or des.

priv-pass {plaintext | ciphertext} <PRIV-PWORD>

Specifies the SNMPv3 user privacy passphrase. Range for plaintext is 8 to 32 printable ASCII characters, excluding space and question mark (?).

Range for ciphertext is 1 to 120 printable ASCII characters. This option is only used when copying user configuration settings between switches. It enables you to duplicate a user's configuration on another switch without having to know their password.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Defining an SNMPv3 user named **Admin** using **sha** authentication with the plaintext password **mypassword** and using **des** security with the plaintext password **myprivpass**:

switch(config) # snmpv3 user Admin auth sha auth-pass plaintext mypassword priv des priv-pass plaintext myprivpass

Removing an SNMPv3 user named Admin:

switch(config) # no snmpv3 user Admin

Defining an SNMPv3 user named **Admin** using **sha** authentication with the plaintext password **mypassword** and using **des** security with the plaintext password **myprivpass**:

switch(config) # snmpv3 user Admin auth sha auth-pass plaintext mypassword priv des priv-pass plaintext myprivpass

Copying an SNMP user from switch 1 to switch 2.

On switch 1, configure a user called Admin, then issue the show running-config command to display switch configuration settings. The snmpv3 user command uses the ciphertext option to protect the users's passwords.

```
switch1(config) # snmpv3 user Admin auth sha auth-pass plaintext mypassword
priv des priv-pass plaintext myprivpass
switch1(config) # exit
switch1# show running-config
Current configuration:
!
!Version ArubaOS-CX XL.10.04.0001AD
!
!
!
snmpv3 user Admin auth sha auth-pass ciphertext
AQBapZHf2d20GYr/xcGUzYzm0zjNf/4VKHtSqbNImqtfYbJYCgAAALkGFJVcSp3nZ3o=
priv des priv-pass ciphertext AQBapb0H2poBQKXPoVsC9L9qzZyfJQnzR7hmTr7LGsOsI7K3CgAAAKP98Rq2jfTrFwQ=
ssh server vrf mgmt
!
!
interface mgmt
no shutdown
ip dhcp
vlan 1
```

On switch 2, execute the snmpv3 user command that was displayed by show running-config on switch 1. This creates the user on switch 2 with the same configuration settings.

```
switch1(config)# snmpv3 user Admin auth sha auth-pass ciphertext
AQBapZHf2d20GYr/xcGUzYzm0zjNf/4VKHtSqbNImqtfYbJYCgAAALkGFJVcSp3nZ3o=
priv des priv-pass ciphertext AQBapb0H2poBQKXPoVsC9L9qzZyfJQnzR7hmTr7LGsOsI7K3CgAAAKP98Rq2jfTrFwQ=
```

CoPP provides a way for administrators to protect the management processor on the switch from high packet loads (generated by malicious or nonmalicious sources) that might interfere with its ability to keep data plane traffic flowing. For example, a denial of service attack can result in excessive traffic that would slow down the management processor and negatively affect switch throughput.

A CoPP policy is composed of one or more classes. Each class defines a target protocol and how its traffic is managed. Every policy also has a default class to regulate packets that do not match any other class. The following actions can be applied for all packets matching a class:

- Drop the packets. (Excluding the default class.)
- Set the processing priority in the range 0 to 10.
- Set the maximum data rate in kilobits per second (Kb/s) at which each line module can send packets to the management processor.
- Set the maximum burst size in kilobytes at which each line module can send packets to the management processor.

Up to 32 CoPP policies can be defined, but only one can be active on the switch at a time.

A CoPP policy must always be active on the switch. By default, the switch has a CoPP policy named **default** which is automatically applied at first boot.

When a line module is hot-swapped or a new line module comes up after boot, the CoPP policy that is actively applied to the switch will be applied.

When the switch is rebooted, the CoPP policy that was actively applied to the switch before the reboot occurred will be applied if it was saved to the startup configuration with the copy running-config startup-config command.

For GRE tunneled traffic, CoPP policies match on the payload.

CoPP policies do not regulate traffic received from the Out-of-Band-Management (OOBM) Ethernet port.

Configuring CoPP

Procedure

- 1. Configure the default CoPP policy, edit an existing policy, or create a policy with the command <u>copp-</u><u>policy</u>.
- 2. Add, edit, or remove classes in the policy with the command <u>class</u>.
- **3.** If the policy is not the active policy on the switch, apply it with the command <u>apply copp-policy</u>. (Changes made to an active policy take effect immediately and do not need to be applied.)
- **4.** Review the CoPP policy configuration settings with the command **<u>show copp-policy</u>**.

Example

This example creates the following configuration:
- Defines a new policy named My_CoppPolicy.
- Adds two classes to the policy.
- Activates the policy.
- Displays policy configuration settings.

```
switch(config) # copp-policy My CoppPolicy
switch(config-copp)# class bgp-ipv4 priority 6 rate 5000 burst 60
switch(config-copp)# class ospf-multicast priority 2 rate 2000
switch(config-copp)# exit
switch(config)# apply copp-policy My CoppPolicy
switch(config) # exit
switch# show copp-policy My CoppPolicy
class
                    drop priority rate kbps burst kB min-max pps
                         _____
                                  ----- ---- ----
                                  500060412-9765200025165-3906
                         6
bgp-ipv4
                         2
ospf-multicast
                         1
                                  6000
                                            70
                                                   494-11719
default
```

CoPP commands

Classes of traffic

The different classes of traffic that can be individually configured are:

- acl-logging: Access Control List logging packets.
- arp-broadcast: Address Resolution Protocol packets with a broadcast destination MAC address.
- arp-unicast: Address Resolution Protocol packets with a switch system destination MAC address.
- arp-protect: Address Resolution Protocol packets intercepted and inspected for ARP protection.
- bfd-control: Bidirectional Forwarding Detection (BFD) control packets with a destination IP address owned by the switch.
- bgp-ipv4: Border Gateway Protocol packets with a destination IPv4 address owned by the switch and the Layer 4 protocol is TCP.
- dhcp: Dynamic Host Configuration Protocol packets with a local destination address and the Layer 4 protocol is UDP. Also includes snooped DHCP packets if DHCP snooping is enabled.
- hypertext: Hypertext Transfer Protocol (HTTP) or Hypertext Transfer Protocol Secure (HTTPS) packets.
- icmp-broadcast-ipv4: Internet Control Message Protocol packets with the broadcast destination IPv4 address 255.255.255.255 or a destination IPv4 subnet broadcast address.
- icmp-multicast-ipv6: Internet Control Message Protocol packets with a well-known multicast destination IPv6 address.
- icmp-unicast-ipv4: Internet Control Message Protocol packets with a destination IPv4 address owned by the switch
- icmp-unicast-ipv6: Internet Control Message Protocol packets with a destination IPv6 address owned by the switch.
- igmp: Internet Group Management Protocol packets.

- ip-exceptions: Internet Protocol exception packets with TTL == 1 that are forwarded through the switch (or hop limit == 1 in the case of ipv6), as well as ICMP redirects.
- ipsec: Internet Protocol Security IPv4 or IPv6, unicast or configured multicast. All IPsec traffic received by the CPU will be regulated by the 'ipsec' class regardless of the encapsulated protocol.
- ipv4-options: Unicast IPv4 packets including option headers.
- lacp: Link Aggregation Control Protocol packets with the destination MAC address 01:80:c2:00:00:02.
- 11dp: Link Layer Discovery Protocol packets with the destination MAC address 01:80:c2:00:00:0e.
- loop-protect: Loop Protection packets with the destination MAC address 09:00:09:09:13:a6.
- mirror-to-cpu: Packets from mirroring session configured to deliver to the console.
- mld: Multicast Listener Discovery packets of type V1 or V2 with an IPv6 address of FF00::/8, FF02::16 or FF02::2.
- mvrp: Multiple VLAN Registration Protocol packets with the destination MAC address 01:80:c2:00:00:20 or 01:80:c2:00:00:21
- ntp: Network Time Protocol packets with a destination address owned by the switch and the Layer 4 protocol is UDP.
- ospf-multicast: Open Shortest Path First packets with the multicast destination IPv4 address 224.0.0.5 or 224.0.0.6, or IPv6 address FF02::5 or FF02::6. Also includes OSPF multicast packets received from a 6in6 tunnel.
- ospf-unicast: Open Shortest Path First packets with a local destination IPv4 address or IPv6 address. Also includes OSPF unicast packets received from a 6in6 tunnel.
- pim: Protocol Independent Multicast packets with the destination IPv4 address 224.0.0.13 or IPv6 address FF02::D, or Multicast Source Discovery Protocol (MSDP) packets, or with a destination IP address owned by the switch. Also includes PIM packets received from a 6in6 tunnel.
- sflow: Packet headers sampled by the switch that will be sent to the sFlow collector.
- ssh: Secure Shell (SSH) or Secure File Transfer Protocol (SFTP) packets. Dropping ssh packets will result in the connection to the CLI being lost.
- stp: Spanning Tree Protocol (STP) packets with the destination MAC address 01:80:c2:00:00:00 or Per-VLAN Spanning Tree (PVST) packets with the destination MAC address 01:00:0c:cc:cc:cd.
- udld: Unidirectional Link Detection packets with the destination MAC address 01:00:0c:cc:cc:cc or 00:e0:52:00:00:00.
- unknown-multicast: Packets with an unknown multicast destination IP address. Also includes unknown multicast packets received from a 6in6 tunnel.
- unresolved-ip-unicast: Packets to be software forwarded by management processor.
- vrrp: Virtual Router Redundancy Protocol packets with the destination IPv4 address 224.0.0.18 or IPv6 address FF02:0:0:0:0:0:0:0:0:0:12 or VSX-Keepalive packets.

To regulate any other traffic destined for the CPU, every CoPP policy has a class named 'default' that can also be configured to regulate other traffic to the CPU or prevent other traffic from being delivered.



NOTE: All IPsec traffic received by the CPU will be regulated by the 'ipsec' class regardless of the encapsulated protocol.

When ARP protection is enabled on the system, all ARP traffic will be regulated by the arpprotect class, regardless of the ARP destination and configuration of arp-broadcast or arpunicast CoPP classes.

apply copp-policy

Syntax

```
apply copp-policy { <NAME> | default }
```

no apply copp-policy <NAME>

Description

Applies a CoPP policy to the switch, replacing the policy that is in effect. There may be a brief interruption in traffic flow to the management processor while the switch implements the change.

Enter the no apply copp-policy <NAME> command with the name of a CoPP policy to unapply a CoPP policy and apply the default CoPP policy. This will only take effect if the specified policy is actively applied. Since there must always be a CoPP policy applied, this command effectively attempts to replace the applied CoPP policy with the default CoPP policy. The default CoPP policy cannot be unapplied using this command.

Command context

config

Parameters

<NAME>

Specifies the name of the policy to apply. Length: 1 to 64 characters.

default

Applies the default policy.

Authority

Administrators or local user group members with execution rights for this command.

Usage

If the new policy cannot be applied (for example, due to a lack of hardware resources), the previous policy remains in effect. Use the **show copp-policy** command to determine which policy is in effect.

Examples

Applying a policy named My_CoppPolicy:

switch(config)# apply copp-policy My_CoppPolicy

Applying the default policy:

switch(config) # apply copp-policy default

class

Syntax

class <CLASS> {drop | priority <PRIORITY> rate <RATE> [burst <BURST>]}

no class <CLASS> {drop | priority <PRIORITY> rate <RATE> [burst <BURST>]}

Description

Adds a class to a CoPP policy. If the class exists, the existing class is modified. Changes made to an active (applied) policy take effect immediately.

When adding or modifying a class in an active policy, CoPP immediately activates the change on the switch. In cases where insufficient hardware resources exist to support a class or its action, CoPP fails to activate the changed class on the switch. When this failure occurs, the active configuration on the switch will be out of sync with its definition. To diagnose and remedy this situation:

- Use the **<u>show copp-policy</u>** command to determine which classes are out of sync between the active policy and its definition.
- Use the <u>reset copp-policy</u> command to synchronize the active policy with its definition. This synchronization changes the classes in the definition to match the classes in the active policy.

The no form of this command removes a class from a CoPP policy. Traffic for the removed class that is destined for the processor will be included in the default class. To stop a class of traffic from reaching the processor, set the class action to drop.

Removing the 'mirror-to-cpu' class from the applied CoPP policy will clear the CoPP statistics for the mirror-to-cpu class.

Command context

config-copp

Parameters

<CLASS>

Specifies the **<u>class</u>** to add or edit.

drop

Drop packets matching the selected class.

priority <PRIORITY>

Specifies the priority for packets matching the selected class. Range: 0 to 10.

rate <RATE>

Specifies the maximum rate, in kilobits per second (Kb/s), for packets matching the selected class. Range: 1 to 999999.

burst <BURST>

Specifies the maximum burst size, in kilobytes, for packets matching the selected class. Range: 1 to 130.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Adding a class to handle OSPF multicast traffic with priority of 2 and rate of 2000:

Adding a class to drop LLDP packets:

switch(config-copp)# class lldp drop

Removing the class that handles LLDP packets. LLDP traffic destined to the processor will be included in the default class.

```
switch(config-copp)# no class lldp
```

clear copp-policy statistics

Syntax

clear copp-policy statistics

Description

Resets statistics for all CoPP classes to zero.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying and then resetting statistics for all classes in the active policy:

```
switch# show copp-policy statistics
Statistics for CoPP policy 'default':
Totals:
   bytes passed
                   : 170000
                                    bytes dropped : 104000
   packets passed : 32000
                                    packets dropped : 18000
Class: arp-broadcast
   bytes passed : 40000
packets passed : 8000
                                   bytes dropped : 40000
                                   packets dropped : 8000
Class: arp-unicast
   bytes passed : 8000
packets passed : 1000
                                    bytes dropped : 64000
                                   packets dropped : 10000
Class: bgp-ipv4
   bytes passed : 12000
                                   bytes dropped
                                                    : 64000
   packets passed : 5000
                                   packets dropped : 10000
. . .
Class: default
   bytes passed
                   : 20000
                                  bytes dropped : 15000
   packets passed : 1000
                                   packets dropped : 1100
. . .
switch# clear copp-policy statistics
switch# show copp-policy statistics
Statistics for CoPP policy 'default':
Totals:
   bytes passed
                   : 0
                                    bytes dropped : 0
   packets passed : 0
                                    packets dropped : 0
Class: arp-broadcast
   bytes passed : 0
                                   bytes dropped
                                                     : 0
                                    packets dropped : 0
   packets passed : 0
Class: arp-unicast
```

```
bytes passed : 0
                                   bytes dropped : 0
   packets passed
                                   packets dropped : 0
                   : 0
Class: bgp-ipv4
                   : 0
                                                   : 0
   bytes passed
                                   bytes dropped
   packets passed
                                   packets dropped : 0
                   : 0
Class: default
  bytes passed
                   : 0
                                   bytes dropped
                                                   : 0
   packets passed
                                   packets dropped : 0
                   : 0
. . .
```

copp-policy

Syntax

copp-policy { <NAME> | default [revert] }

no copp-policy <NAME>

Description

Creates a CoPP policy and switches to the config-copp context for the policy. Or, if the specified policy exists, switches to the config-copp context for the policy. A predefined policy, named default, contains factory default classes and is applied to the switch at first startup. This policy cannot be deleted, but its configuration can be changed.

The no form of this command removes a CoPP policy. If a policy is active (applied), it cannot be removed . It must be replaced with another policy before it can be removed.

Command context

config

Parameters

<NAME>

Specifies the name of the policy to add or edit. Length: 1 to 64 characters. The name must not be a substring of any of the following reserved words: default, factory-default, commands, configuration, or statistics.

default

Specifies the default CoPP policy. Use this default policy to configure the default policy.

revert

Sets the default CoPP policy to its factory settings.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating a policy named My_CoppPolicy:

switch(config)# copp-policy My_CoppPolicy
switch(config-copp)#

Removing a policy named My_CoppPolicy:

switch(config) # no copp-policy My_CoppPolicy

Setting the default policy to its factory settings:

switch(config)# copp-policy default revert

Unapplying the policy named My_CoppPolicy:

switch(config)# no apply copp-policy My_CoppPolicy

default-class

Syntax

default-class priority <PRIORITY> rate <RATE> [burst <BURST>]

Description

Configures the default class that is automatically defined for all CoPP policies. The default class cannot be removed, but its configuration can be changed. The default class is applied to traffic that does not match any other class defined for a policy.

Command context

config-copp

Parameters

priority <PRIORITY>

Specifies the priority for packets matching the selected class. Range: 0 to 10.

rate <RATE>

Specifies the maximum rate, in kilobits per second (Kb/s), for packets matching the selected class. Range: 1 to 999999.

burst <BURST>

Specifies the maximum burst size, in kilobytes, for packets matching the selected class. Range: 1 to 130.

Authority

Administrators or local user group members with execution rights for this command.

Example

Setting the default class to a priority of **2** and rate of **2000**:

switch(config-copp)# default-class priority 2 rate 2000

reset copp-policy

Syntax

```
reset copp-policy { <NAME> | default }
```

Description

Resets an active CoPP policy to match the settings that are currently in effect for the active policy on the switch. Changes made to the active policy that could not be activated are removed from the active policy. When the switch fails to add or modify a class in an active CoPP policy, it is possible the active policy settings on the switch may be out of sync with those defined in the policy.

Command context

config

Parameters

<NAME>

Specifies the name of the policy to reset. Length: 1 to 64 characters.

default

Resets the default policy to match its active settings.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Resetting a policy named My_CoppPolicy:

Resetting the default policy:

switch(config)# reset copp-policy default

show copp-policy

Syntax

show copp-policy [<NAME> | default] [commands] [configuration] [vsx-peer]

Description

Shows CoPP policy settings for a specific CoPP policy. When entered without specifying either a name or the default parameter, shows all the CoPP policy settings that are active on the switch and have successfully been programmed into the hardware.

A warning is displayed if:

- The active and user-specified applications of a policy do not match.
- The active and user-specified configurations of a policy do not match.

Command context

Operator (>) or Manager (#)

Parameters

<NAME>

Specifies the name of the policy for which to display settings. Length: 1 to 64 characters.

default

Displays CoPP settings for the default policy.

commands

Displays output as CLI commands.

configuration

Displays user-specified CoPP settings and **not** the active settings.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying the CoPP policies defined in the configuration and the active application:

```
switch# show copp-policy
applied copp_policy_name
_______
My_CoppPolicy
applied default
switch#
```

Entering the config-copp context and modify the **default** policy:

show copp-policy factory-default

Syntax

show copp-policy factory-default [commands] [vsx-peer]

Description

Display the configuration for the factory-default CoPP policy.

Command context

```
Operator (>) or Manager (#)
```

Parameters

commands

Displays output as CLI commands.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Displaying the factory-default policy:

Displaying the active configuration of **My_CoppPolicy** (My_CoppPolicy is applied):

Displaying the active configuration of My_CoppPolicy as CLI commands:

```
switch# show copp-policy My_CoppPolicy commands
copp-policy My_CoppPolicy
    class bgp-ipv4 priority 6 rate 5000 burst 60
    class ospf-multicast priority 2 rate 2000
    default-class priority 1 rate 6000 burst 70
```

Displaying the user-specified configuration of **My_CoppPolicy**:

Displaying the user-specified configuration of My_CoppPolicy as CLI commands:

```
switch# show copp-policy My_CoppPolicy commands configuration
copp-policy My_CoppPolicy
    class bgp-ipv4 priority 6 rate 5000 burst 60
    class ospf-multicast priority 2 rate 2000
    default-class priority 1 rate 6000 burst 70
```

show copp-policy statistics

Syntax

show copp-policy statistics [class <CLASS> | default-class] [vsx-peer]

Description

Displays statistics for all classes, or a single class, in the active CoPP policy.

Command context

Operator (>) or Manager (#)

Parameters

<CLASS>

Specifies the **<u>class</u>** for which to display statistics.

default-class

Displays statistics for the default class.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Displaying statistics for all classes in the active policy:



NOTE: The rate displayed is the actual rate in hardware.

```
switch# show copp-policy statistics
Statistics for CoPP policy 'default':
Totals:
    bytes passed : 170000 bytes dropped : 104000
    packets passed : 32000 packets dropped : 18000
Class: arp-broadcast
```

bytes passed packets passed	: 40000 : 8000	bytes dropped packets dropped	: 40000 : 8000
bytes passed packets passed	: 8000 : 1000	bytes dropped packets dropped	: 64000 : 10000
Class: bgp-1pv4 bytes passed packets passed	: 12000 : 5000	bytes dropped packets dropped	: 64000 : 10000
Class: default bytes passed packets passed	: 20000 : 1000	bytes dropped packets dropped	: 15000 : 1100
• • •			

Displaying statistics for the default class in the active policy:

Displaying statistics for the class bgp-ipv4 in the actively applied policy:

The Aruba Central network management solution, a software-as-a-service subscription in the cloud, provides streamlined management of multiple network devices. ArubaOS-CX switches are able to talk to Aruba Central and utilize cloud-based management functionality. Cloud-based management functionality allows for the deployment of network devices at sites with no or few dedicated IT personnel (branch offices, retail stores, and so forth). ArubaOS-CX switches utilize secure communication protocols to connect to the Aruba Central cloud portal, and can coexist with corporate security standards, such as those mandating the use of firewalls.

This feature provides:

- Zero-touch provisioning
- Network Management/Remote monitoring
- Events/alerts notification
- Switch Configuration using templates
- Firmware management

Connecting to Aruba Central

ArubaOS-CX switch downloads the location of Aruba Central server using:

- Command-line interface (CLI).
- Aruba Activate server.
- DHCP options provided during ZTP.

DHCP servers are used to connect to Central on-premise management.

If switch is unable to connect to Activate server, it retries to establish connection in exponential back off of 1s, 2s, 8s, 16s, 32s, 64s, 128s, and 256s. After the maximum back off of 256s, switch retries happen for every 5 minutes.

٢	T	1	
Ľ		_	1
Ŀ			J

NOTE: If the Network Time Protocol (NTP) is not enabled on the switch, it will synchronize the system time with the Activate server.

Custom CA certificate

To use custom CA certificate to connect to Aruba Central, AOS-CX switch downloads the certificate from Aruba Activate server.



NOTE:

- If there is no custom CA provided by Aruba Activate, the CA certificate present in the device is used.
- Duplicate CA certificates from Aruba Activate server will be ignored.
- If CA certificate is absent in consecutive responses from Aruba Activate server, the installed custom CA certificate in device will be removed.
- Switch will have only one custom CA certificate installed from Aruba Activate Server.
- The certificate installed from Aruba Activate server will not be displayed in the show commands.

Aruba Central Commands

aruba-central

Syntax

```
aruba-central
```

no aruba-central

Description

Creates or enters the Aruba Central configuration context (config-aruba-central).

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Example

Creating the Aruba Central configuration context:

```
switch(config)# aruba-central
switch(config-aruba-central)#
```

disable

Syntax

disable

no disable

Description

Disables connection to Aruba Central server.

When the connection is disabled, the switch does not attempt to connect to the Aruba Central server or fetch central location from any of the three sources (CLI/Aruba Activate/DHCP). It also disconnects any active connection to the Aruba Central server.

The no form of this command enables connection to the Aruba Central server. The no disable command is identical to the enable command.

Command context

```
config-aruba-central
```

Authority

Administrators or local user group members with execution rights for this command.

Example

```
switch(config-aruba-central)# disable
switch(config-aruba-central)#
```

enable

Syntax

enable

no enable

Description

Enables connection to Aruba Central server. When the connection is enabled, the switch attempts to download the location of the Aruba Central server in one of the following ways at startup and after the connection is lost:

- Using command-line interface (CLI).
- Connecting to Aruba Activate server.
- Using DHCP options provided during ZTP.

DHCP servers are used to connect to Central on-premise management.

The no form of this command disables connection to the Aruba Central server. The no enable command is identical to the disable command.

Command context

config-aruba-central

Authority

Administrators or local user group members with execution rights for this command.

Examples

```
switch(config-aruba-central)# enable
switch(config-aruba-central)#
```

location-override

Syntax

```
location-override <location> [vrf <VRF-NAME>
no location-override
```

Description

When location and vrf are configured, the switch overrides existing connections to Aruba Central. The switch attempts to establish connection to Aruba Central with the specified location and VRF with highest priority.

The no form of this command removes location override values from the Aruba Central configuration context.

Command context

```
config-aruba-central
```

Authority

Administrators or local user group members with execution rights for this command.

Parameters

<location>

Specifies one of these values:

- <*FQDN*>: a fully qualified domain name.
- <*IPV4>*: an IPv4 address.
- <*IPV6>*: an IPv6 address.

vrf <VRF-NAME>

Specifies the VRF name to be used for communicating with the server. If no VRF name is provided, the default VRF named default is used.

Examples

Configuring location override with location and VRF:

```
switch(config-aruba-central)# location-override aruba-central.com vrf default
switch(config-aruba-central)#
```

Configuring location override with location only:

switch(config-aruba-central)# location-override aruba-central.com
switch(config-aruba-central)#

Removing location override values from the Aruba Central configuration context:

```
switch(config-aruba-central)# no location-override
switch(config-aruba-central)#
```

show aruba-central

Syntax

```
show aruba-central
```

Description

Shows information about Aruba Central connection and the status of the Activate server connection.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

This command shows the following information about the Aruba Network Analytics Engine agents that are available on the switch:

Examples

Example of a switch that has the Aruba Central connection:

switch#	show aruba-central		
Central	admin state	:	enabled
Central VRF for Central	location connection connection status	::	N/A N/A N/A
Central Central Central System t	source source connection status source last connected on time synchronized from Activate	: : :	dhcp connection_failure N/A True
Activate CLI loca CLI VRF	e server URL ation	::	172.17.0.1 N/A N/A

show running-config current-context

Syntax

show running-config current-context

Description

Shows the running configuration for the current-context. If user is in the context of Aruba-Central(configaruba-central), then Aruba Central running configuration is displayed.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Shows the running configuration of Aruba Central:

```
switch(config-aruba-central)# show running-config current-context
aruba-central
disable
```

portfilter

Syntax

portfilter <INTERFACE-LIST>

no portfilter [<INTERFACE-LIST>]

Description

Configures the specified ports so they do not egress any packets that were received on the source port specified in interface context.

The no form of this command removes the port filter setting from one or more ingress ports/LAGs.

Command context

config-if
config-lag-if

Parameters

<INTERFACE-LIST>

Specifies a list of ports/LAGs to be blocked for egressing. Specify a single interface or LAG, or a range as a comma-separated list, or both. For example: 1/1/1, 1/1/3-1/1/6,lag2, lag1-lag4. On the 6400 Switch Series, interface identification differs.

Authority

Administrators or local user group members with execution rights for this command.

Usage

When a port filter configuration is applied on the same ingress physical port/LAG, the configuration is updated with the new sets of egress ports/LAGs that are to be blocked for egressing and that are not a part of its previous configuration. Duplicate updates on an existing port filter configuration are ignored.

When egress ports/LAGs are removed from the existing port filter configuration of an ingress port/LAG, egressing is allowed again on those egress ports/LAGs for all packets originating from the ingress port/LAG.

The no portfilter [<IF-NAME-LIST>] command removes port filter configurations from the egress ports/LAGs listed in the </F-NAME-LIST> parameter only. All other egress ports/LAGs in the port filter configuration of the ingress port/LAG remain intact.

If no physical ports or LAGs are provided for the no portfilter command, the command removes the entire port filter configuration for the ingress port/LAG.

Examples

On the 6400 Switch Series, interface identification differs.

Creating a filter that prevents packets received on port 1/1/1 from forwarding to ports 1/1/3–1/1/6 and to LAGs 1 through 4:

switch(config)# interface 1/1/1
switch(config-if)# portfilter 1/1/3-1/1/6,lag1-lag4

Creating a filter that prevents packets received on LAG 1 from forwarding to ports 1/1/6 and LAGs 2 and 4:

switch(config)# interface lag 1
switch(config-lag-if)# portfilter 1/1/6,lag2,lag4

Removing filters from an existing configuration that allows back packets received on port 1/1/1 to forward to ports 1/1/6 and LAGs 3 and 4:

```
switch(config)# interface 1/1/1
switch(config-if)# no portfilter 1/1/6,lag3,lag4
```

Removing all filters from an existing configuration that allows back packets received on LAG 1 to forward to all the ports and LAGs:

```
switch(config)# interface lag 1
switch(config-lag-if)# no portfilter
```

show portfilter

Syntax

show portfilter [<IFNAME>] [vsx-peer]

Description

Displays filter settings for all interfaces or a specific interface.

Command context

Operator (>) or Manager (#)

Parameters

<IFNAME>

Specifies the ingress interface name.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

On the 6400 Switch Series, interface identification differs.

Displaying all port filter settings on the switch:

Displaying the port filter settings for port 1/1/1:

switch# show portfilter 1/1/1

Incoming	Blocked
Interface	Outgoing Interfaces
1/1/1	1/1/3-1/1/6,lag1-lag2

Displaying the port filter settings for **LAG2**:

switch# shc	ow portfilter lag2
Incoming	Blocked
Interface	Outgoing Interfaces
lag2	1/1/1,1/1/3-1/1/6

The Domain Name System (DNS) is the Internet protocol for mapping a hostname to its IP address. DNS allows users to enter more readily memorable and intuitive hostnames, rather than IP addresses, to identify devices connected to a network. It also allows a host to keep the same hostname even if it changes its IP address.

Hostname resolution can be either static or dynamic.

- In static resolution, a local table is defined on the switch that associates hostnames with their IP addresses. Static tables can be used to speed up the resolution of frequently queried hosts.
- Dynamic resolution requires that the switch query a DNS server located elsewhere on the network. Dynamic name resolution takes more time than static name resolution, but requires far less configuration and management.

DNS client

The DNS client resolves hostnames to IP addresses for protocols that are running on the switch. When the DNS client receives a request to resolve a hostname, it can do so in one of two ways:

- Forward the request to a DNS name server for resolution.
- Reply to the request without using a DNS name server, by resolving the name using a statically defined table of hostnames and their associated IP addresses.

Configuring the DNS client

Procedure

- 1. Configure one or more DNS name servers with the command ip dns server.
- 2. To resolve DNS requests by appending a domain name to the requests, either configure a single domain name with the command ip dns domain-name, or configure a list of up to six domain names with the command ip dns domain-list.
- **3.** To use static name resolution for certain hosts, associate an IP address to a host with the command ip dns host.
- 4. Review your DNS configuration settings with the command show ip dns.

Examples

This example creates the following configuration:

- Defines the domain **switch**.com to append to all requests.
- Defines a DNS server with IPv4 address of 1.1.1.1.

- Defines a static DNS host named myhost1 with an IPv4 address of 3.3.3.3.
- DNS client traffic is sent on the default VRF (named default).

```
switch(config)# ip dns domain-name switch.com
switch(config)# ip dns server-address 1.1.1.1
switch(config) # ip dns host myhost1 3.3.3.3
switch(config) # exit
switch# show ip dns
VRF Name : vrf mgmt
Host Name
                                                   Address
 _____
VRF Name : vrf default
Domain Name : switch.com
DNS Domain list :
Name Server(s) : 1.1.1.1
Host Name
                                                   Address
      -----
myhost1
This example creates the following configuration:
```

- Defines three domains to append to DNS requests domain1.com, domain2.com, domain3.com with traffic forwarding on VRF mainvrf.
- Defines a DNS server with an IPv6 address of c::13.
- Defines a DNS host named myhost with an IPv4 address of 3.3.3.3.

```
switch(config)# ip dns domain-list domain1.com vrf mainvrf
switch(config)# ip dns domain-list domain2.com vrf mainvrf
switch(config)# ip dns domain-list domain3.com vrf mainvrf
switch(config)# ip dns server-address c::13
switch(config) # ip dns host myhost 3.3.3.3 vrf mainvrf
switch(config)# quit
switch# show ip dns mainvrf
VRF Name : mainvrf
Domain Name :
DNS Domain list : domain1.com, domain2.com, domain3.com
Name Server(s) : c::13
Host Name
                                                          Address
_____
myhost
                                                          3.3.3.3
```

DNS client commands

ip dns domain-list

Syntax

ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]

no ip dns domain-list <DOMAIN-NAME> [vrf <VRF-NAME>]

Description

Configures one or more domain names that are appended to the DNS request. The DNS client appends each name in succession until the DNS server replies. Domains can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF.

The no form of this command removes a domain from the list.

Command context

config

Parameters

list <DOMAIN-NAME>

Specifies a domain name. Up to six domains can be added to the list. Length: 1 to 256 characters.

vrf <VRF-NAME>

Specifies a VRF name. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

This example defines a list with two entries: domain1.com and domain2.com.

switch(config)# ip dns domain-list domain1.com
switch(config)# ip dns domain-list domain2.com

This example defines a list with two entries, **domain2.com** and **domain5.com**, with requests being sent on **mainvrf**.

switch(config)# ip dns domain-list domain2.com vrf mainvrf switch(config)# ip dns domain-list domain5.com vrf mainvrf

This example removes the entry **domain1.com**.

switch(config) # no ip dns domain-list domain1.com

ip dns domain-name

Syntax

```
ip dns domain-name <DOMAIN-NAME> [ vrf <VRF-NAME> ]
```

no ip dns domain-name <DOMAIN-NAME> [vrf <VRF-NAME>]

Description

Configures a domain name that is appended to the DNS request. The domain can be either IPv4 or IPv6. By default, requests are forwarded on the default VRF. If a domain list is defined with the command <u>ip</u> dns <u>domain-list</u>, the domain name defined with this command is ignored.

The no form of this command removes the domain name.

Command context

config

Parameters

<DOMAIN-NAME>

Specifies the domain name to append to DNS requests. Length: 1 to 256 characters.

vrf <VRF-NAME>

Specifies a VRF name. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the default domain name to domain.com:

switch(config)# ip dns domain-name domain.com

Removing the default domain name domain.com:

switch(config) # no ip dns domain-name domain.com

ip dns host

Syntax

ip dns host <HOST-NAME> <IP-ADDR> [vrf <VRF-NAME>]

no ip dns host <HOST-NAME> <IP-ADDR> [vrf <VRF-NAME>]

Description

Associates a static IP address with a hostname. The DNS client returns this IP address instead of querying a DNS server for an IP address for the hostname. Up to six hosts can be defined. If no VRF is defined, the default VRF is used.

The no form of this command removes a static IP address associated with a hostname.

Command context

config

Parameters

host <HOST-NAME>

Specifies the name of a host. Length: 1 to 256 characters.

<IP-ADDR>

Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

vrf <VRF-NAME>

Specifies a VRF name. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

This example defines an IPv4 address of 3.3.3.3 for host1.

switch(config) # ip dns host host1 3.3.3.3

This example defines an IPv6 address of **b**::5 for **host 1**.

switch(config) # ip dns host host1 b::5

This example defines removes the entry for **host 1** with address **b**::5.

switch(config) # no ip dns host host1 b::5

ip dns server address

Syntax

```
ip dns server-address <IP-ADDR> [ vrf <VRF-NAME> ]
```

no ip dns server-address <IP-ADDR> [vrf <VRF-NAME>]

Description

Configures the DNS name servers that the DNS client queries to resolve DNS queries. Up to six name servers can be defined. The DNS client queries the servers in the order that they are defined. If no VRF is defined, the default VRF is used.

The no form of this command removes a name server from the list.

Command context

config

Parameters

<IP-ADDR>

Specifies an IP address in IPv4 format (x.x.x.x), where x is a decimal number from 0 to 255, or IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

vrf <VRF-NAME>

Specifies a VRF name. Default: default.

Authority

Administrators or local user group members with execution rights for this command.

Examples

This example defines a name server at 1.1.1.1.

switch(config)# ip dns server-address 1.1.1.1

This example defines a name server at **a**::**1**.

switch(config) # ip dns server-address a::1

This example removes a name server at **a**::**1**.

switch(config)# no ip dns server-address a::1

show ip dns

Syntax

show ip dns [vrf <VRF-NAME>] [vsx-peer]

Description

Shows all DNS client configuration settings or the settings for a specific VRF.

Command context

Manager (#)

Parameters

vrf <VRF-NAME>

Specifies the VRF for which to show information. If no VRF is defined, the default VRF is used.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

These examples define DNS settings and then show how they are displayed with the show ip dns command.

```
switch(config)# ip dns domain-name domain.com
switch(config)# ip dns domain-list domain5.com
switch(config)# ip dns domain-list domain8.com
switch(config)# ip dns server-address 4.4.4.4
switch(config)# ip dns server-address 6.6.6.6
switch(config)# ip dns host host3 5.5.5.5
switch(config)# ip dns host host2 2.2.2.2
switch(config)# ip dns host host3 c::12
switch(config)# ip dns domain-name reddomain.com vrf red
switch(config)# ip dns domain-list reddomain5.com vrf red
switch(config)# ip dns server-address 4.4.4.5 vrf red
switch(config)# ip dns server-address 6.6.6.7 vrf red
switch(config)# ip dns host host3 5.5.5.6 vrf red
```

switch(config) # ip dns host host2 2.2.2.3 vrf red switch(config)# ip dns host host3 c::13 vrf red switch# show ip dns VRF Name : default Domain Name : domain.com DNS Domain list : domain5.com, domain8.com Name Server(s) : 4.4.4.4, 6.6.6.6 Host Name Address _____ host2 2.2.2.2 5.5.5.5 host3 host3 c::12 VRF Name : red Domain Name : reddomain.com DNS Domain list : reddomain5.com, reddomain8.com Name Server(s) : 4.4.4.5, 6.6.6.7 Host Name Address _____ host2 5.5.5.6 2.2.2.3 host3 c::13 host3 switch(config)# ip dns domain-name domain.com vrf red switch(config)# ip dns domain-list domain5.com vrf red switch(config)# ip dns domain-list domain8.com vrf red switch(config)# ip dns server-address 4.4.4.4 vrf red switch(config)# ip dns server-address 6.6.6.6 vrf red switch(config)# ip dns host host3 5.5.5.5 vrf red switch(config)# no ip dns host host2 2.2.2.2 vrf red switch(config) # ip dns host host3 c::12 vrf red switch# show ip dns vrf red VRF Name : red Domain Name : domain.com DNS Domain list : domain5.com, domain8.com Name Server(s) : 4.4.4.4, 6.6.6.6 Host Name Address _____ host3 5.5.5.5 host3 c::12

The switch provides support for LLDP, CDP, and local MAC match by using device profiles to enable automatic discovery and configuration of other devices on the network.

Based on the type of devices connected to the interface, device profiles enable predefined configurations that can be applied to the interface. Connected devices are identified using corresponding protocol packets. When the protocol information on the interface ages, the profile or role is revoked from the interface. Only devices connected directly to the switch are detected and processed to apply a device profile. When a device of a configured type is connected to an interface, the switch automatically applies the corresponding **device profile**.

Local MAC match enables dynamic assignment of client attributes, such QoS and VLANs by using a locally configured authentication repository. Local MAC match involves creating MAC groups that are used to classify connected devices based on MAC address, MAC address mask, and MAC OUI. Local MAC match feature is useful when you do not want to afford RADIUS infrastructure or when you want to use local authentication as a backup method in case the RADIUS server is unreachable.

The following parameters can be configured for each role:

- associate: Used to associate captive-portal-profile or policy with the role.
- auth-mode: Used to configure authentication mode for the role.

- 1			r
	_	_	Ľ
		_	_
	_		
	-		

NOTE: There is no need to configure auth-mode for a plain device profile.

- mtu: Used to configure MTU for the role.
- poe-priority: Used to configure the PoE priority for the role.
- trust-mode: Used to configure trust mode for the role.
- vlan: Used to configure VLAN mode for the role.
- stp-admin-edge-port: Used to configure STP administrative edge port for the role.

For information on role configurations, see the Security Guide.



NOTE: The following commands are not supported in local MAC match feature:

- aaa authentication port-access mac-auth cached-reauth
- aaa authentication port-access mac-auth cached-reauth-period
- aaa authentication port-access mac-auth quiet-period
- aaa authentication port-access mac-auth reauth-period

The switch provides simplified deployment of devices, such as access points, IP phones, security cameras, and printers, through the use of a locally configured repository that provides authentication and dynamic port assignment, such as QoS, PoE, and tagged VLANs.



Device profiles

NOTE: Device profiles rely on role configurations. For information on role configurations, see the *Security Guide*.

Device profiles are used to dynamically assign port attributes based on the type of devices connected, without having to create a RADIUS infrastructure. You can map device profiles to device groups. A device group contains various match criteria, which can be obtained from multiple sources, such as LLDP, CDP, and local MAC match. Device profiles contain port attributes to be assigned to the port when a connected device matches a device group.

Device profiles are supported on different scenarios. It can be applied on interfaces that are configured with security (802.1X or MAC authentication), or applied based on L2 port (LLDP, CDP), or applied on standalone ports with the block-until-profile-applied command enabled. All the methods are mutually exclusive of each other. The block-until-profile-applied mode must be configured only when there is a standalone port where no security has been configured and when you want the port to be offline until at least one client is

onboarded based on the match and ignore criteria that you configure. Local MAC match is supported when you configure block-until-profile-applied command or device profile with security.

See the *Security Guide* for the following commands:

- The port-access onboarding-method precedence command—If you are configuring both security and device profile on the port, and you want to configure the order in which the methods will be executed.
- The port-access fallback-role command—If you want to configure a role that must be applied to devices when no other role exists or can be derived for that device.

If you configure a match criteria that matches across multiple device profiles, then the priority considered is LLDP, CDP, and then local MAC match. That is, LLDP precedes over CDP, which in turn precedes over local MAC match.

The following figure displays a simple configuration of device profile and AAA authentication with RADIUS server and Aruba ClearPass Policy Manager. Local MAC match feature is useful when you do not want to afford RADIUS infrastructure or when you want to use local authentication as a backup method in case the RADIUS server is unreachable.

Figure 2: Example of device profile setup along with RADIUS infrastructure



Configuring a device profile for LLDP

Procedure

- 1. Create an LLDP group with the command **port-access 11dp-group**.
- 2. Define rules for adding devices to an LLDP group with the command match.
- **3.** Define rules for ignoring devices so that they are not added to an LLDP group with the command <u>ignore</u>.
- 4. Create a device profile with the command **port-access device-profile**.
- 5. Add the LLDP group with the command **associate lldp-group**.

- 6. Add a role to a device profile with the command <u>associate role</u>. Make sure that the role is already created. For information on how to create a role, see port access role information in the *Security Guide*.
- 7. Enable the device profile with the command **<u>enable</u>**.

Configuring a device profile for CDP

Procedure

- 1. Create a CDP group with the command **<u>port-access</u>** cdp-group.
- 2. Define rules for adding devices to a CDP group with the command <u>match</u>.
- 3. Define rules for ignoring devices so that they are not added to a CDP group with the command <u>ignore</u>.
- 4. Create a device profile with the command **port-access device-profile**.
- 5. Add a CDP group to a device profile with the command **associate cdp-group**.
- 6. Add a role to a device profile with the command <u>associate role</u>. Make sure that the role is already created. For information on how to create a role, see port access role information in the *Security Guide*.
- 7. Enable a device profile with the command **<u>enable</u>**.

Configuring a device profile for local MAC match

Procedure

- **1.** Create a MAC group with the **<u>mac-group</u>** command.
- 2. Define rules for adding devices to a MAC group with the match (for MAC groups) command.
- **3.** Define rules for ignoring devices so that they are not added to a MAC group with the <u>ignore</u> (<u>for MAC</u> <u>groups</u>) command.
- 4. Create a device profile with the **port-access device-profile** command.
- **5.** Associate a MAC group with a device profile with the **associate mac-group** command.
- 6. Add a role to a device profile with the <u>associate role</u> command. Make sure that the role is already created. For information on how to create a role, see port access role information in the *Security Guide*.
- 7. Enable a device profile with the **<u>enable</u>** command.

Device profile commands

aaa authentication port-access allow-cdp-bpdu

Syntax

aaa authentication port-access allow-cdp-bpdu

no aaa authentication port-access allow-cdp-bpdu

Description

Allows all packets related to the CDP (Cisco Discovery Protocol) BPDU (Bridge Protocol Data Unit) on a secure port.

The no form of this command blocks the CDP BPDU on a secure port. On a nonsecure port, the command has no effect.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Allowing a CDP BPDU on secure port 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-cdp-bpdu
switch(config-if) # do show running-config
Current configuration:
!Version ArubaOS-CX 10.0X.0000
led locator on
T.
vlan 1
aaa authentication port-access mac-auth
    enable
aaa authentication port-access dot1x authenticator
   enable
interface 1/1/1
   no shutdown
    vlan access 1
    aaa authentication port-access allow-cdp-bpdu
    aaa authentication port-access mac-auth
       enable
    aaa authentication port-access dot1x authenticator
    enable
switch(config-if)# do show port-access device-profile interface all
Port 1/1/1, Neighbor-Mac 00:0c:29:9e:d1:20
    Profile Name : access_switches
   LLDP Group :
CDP Group : aruba-ap_cdp
Role : test_ap_role
Status : In Progress
    Failure Reason :
```

Blocking LLDP packet on secure port 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no aaa authentication port-access allow-cdp-bpdu
switch(config-if)# do show running-config
Current configuration:
!
!
!Version ArubaOS-CX 10.0X.0000
led locator on
!
!
vlan 1
aaa authentication port-access mac-auth
    enable
```

interface 1/1/1
 no shutdown
 vlan access 1
 aaa authentication port-access mac-auth
 enable

aaa authentication port-access allow-lldp-bpdu

Syntax

```
aaa authentication port-access allow-lldp-bpdu
```

no aaa authentication port-access allow-lldp-bpdu

Description

Allows all packets related to the LLDP BPDU (Bridge Protocol Data Unit) on a secure port.

The no form of this command blocks the LLDP BPDU on a secure port. On a nonsecure port, the command has no effect.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Allowing an LLDP BPDU on secure port 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# aaa authentication port-access allow-lldp-bpdu
switch(config-if) # do show running-config
Current configuration:
!Version ArubaOS-CX 10.0X.0000
led locator on
1
1
vlan 1
aaa authentication port-access mac-auth
   enable
interface 1/1/1
   no shutdown
  vlan access 1
   aaa authentication port-access allow-lldp-bpdu
   aaa authentication port-access mac-auth
       enable
switch(config-if)# do show port-access device-profile interface all
Port 1/1/1, Neighbor-Mac 00:0c:29:9e:d1:20
   Profile Name : access_switches
   LLDP Group
                   : 2920-grp
   CDP Group
                   : local 2920 role
   Role
   Status
                   : Profile Applied
   Failure Reason :
```

Blocking LLDP BPDU on secure port 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no aaa authentication port-access allow-lldp-bpdu
switch(config-if)# do show running-config
Current configuration:
!
!Version ArubaOS-CX 10.0X.0000led locator on
!
!
vlan 1
aaa authentication port-access mac-auth
enable
interface 1/1/1
no shutdown
vlan access 1
aaa authentication port-access mac-auth
enable
```

associate cdp-group

Syntax

```
associate cdp-group <GROUP-NAME>
```

no associate cdp-group <GROUP-NAME>

Description

Associates a CDP (Cisco Discovery Protocol) group with a device profile. A maximum of two CDP groups can be associated with a device profile.

The no form of this command removes a CDP group from a device profile.

Command context

```
config-device-profile
```

Parameters

<GROUP-NAME>

Specifies the name of the CDP group to associate with this device profile. Range: 1 to 32 alphanumeric characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Associating the CDP group **my-cdp-group** with the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate cdp-group my-cdp-group
```

Removing the CDP group **my-cdp-group** from the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# no associate cdp-group my-cdp-group
```

associate lldp-group

Syntax

associate lldp-group <GROUP-NAME>

no associate lldp-group <GROUP-NAME>

Description

Associates an LLDP group with a device profile. A maximum of two LLDP groups can be associated with a device profile

The no form of this command removes an LLDP group from a device profile.

Command context

```
config-device-profile
```

Parameters

<GROUP-NAME>

Specifies the name of the LLDP group to associate with the device profile. Range: 1 to 32 alphanumeric characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Associating the LLDP group **my-lldp-group** with the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate lldp-group my-lldp-group
```

Removing the LLDP group my-lldp-group from the device profile profile01:

```
switch(config) # port-access device-profile profile01
switch(config-device-profile) # no associate lldp-group my-lldp-group
```

associate mac-group

Syntax

associate mac-group <GROUP-NAME>

```
no associate mac-group <GROUP-NAME>
```

Description

Associates a MAC group with a device profile. A maximum of two MAC groups can be associated with a device profile.

The no form of this command removes a MAC group from a device profile.

Command context

config-device-profile

Parameters

<GROUP-NAME>

Specifies the name of the MAC group to associate with this device profile. Range: 1 to 32 alphanumeric characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Associating the MAC group mac01-group with the device profile profile01:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate mac-group mac01-group
```

Removing the MAC group mac01-group from the device profile profile01:

```
switch(config) # port-access device-profile profile01
switch(config-device-profile) # no associate mac-group mac01-group
```

associate role

Syntax

associate role <ROLE-NAME>

no associate role <ROLE-NAME>

Description

Associates a role with a device profile. Only one role can be associated with a device profile. For information on how to configure a role, see the port access role information in the *Security Guide*.

The no form of this command removes a role from a device profile.

Command context

```
config-device-profile
```

Parameters

<ROLE-NAME>

Specifies the name of the role to associate with the device profile. Range: 1 to 64 alphanumeric characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Associating the role **my-role** with the device profile **profile01**:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# associate role my-role
```

Removing the role **my-role** from the device profile **profile01**:

```
switch(config) # port-access device-profile profile01
switch(config-device-profile) # no associate role my-role
```

disable

Syntax

disable

no disable

Description

Disables a device profile.

The no form of this command enables a device profile.

Command context

```
config-device-profile
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

Disabling a device profile:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# disable
```

Enabling a device profile named profile01:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# no disable
```

enable

Syntax

enable

no enable

Description

Enables a device profile.

The no form of this command disables a device profile.

Command context

```
config-device-profile
```

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling a device profile:

```
switch(config)# port-access device-profile profile01
switch(config-device-profile)# enable
```
Disabling a device profile named profile01:

switch(config)# port-access device-profile profile01
switch(config-device-profile)# no enable

ignore (for CDP groups)

Syntax

```
ignore [seq <SEQ-NUM>] {platform <PLATFORM> | sw-version <SWVERSION> |
    voice-vlan-query <VLAN-ID>}
no ignore [seq <SEQ-ID>] {platform <PLATFORM> | sw-version <SWVERSION> |
    voice-vlan-query <VLAN-ID>}
```

Description

Defines a rule to ignore devices for a CDP (Cisco Discovery Protocol) group. Up to 64 match/ignore rules can be defined for a group.

The no form of this command removes a rule for ignoring devices from a CDP group.

Command context

config-cdp-group

Parameters

seq <SEQ-ID>

Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.

platform <PLATFORM>

Specifies the hardware or model details of the neighbor. Range: 1 to 128 alphanumeric characters.

sw-version <SWVERSION>

Specifies the software version of the neighbor. Range: 1 to 128 alphanumeric characters.

voice-vlan-query <VLAN-ID>

Specifies the VLAN query value of the neighbor. Range: 1 to 65535.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Adding a rule to the CDP group grp01 that ignores a device that transmits **PLATFORM01** in the platform TLV:

```
switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# ignore platform PLATFORM01
```

Adding a rule to the CDP group grp01 that ignores a device that transmits **SWVERSION** in software version TLV:

```
switch(config) # port-access cdp-group grp01
switch(config-cdp-group) # ignore sw-version SWVERSION
```

Removing the rule that matches the sequence number 25 from the CDP group named grp01.

ignore (for LLDP groups)

Syntax

```
ignore [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
    vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}
no ignore [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
```

vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}

Description

Defines a rule to ignore devices for an LLDP group. Up to 64 match/ignore rules can be defined for a group. The no form of this command removes a rule for ignoring devices from an LLDP group.

Command context

config-lldp-group

Parameters

seq <SEQ-ID>

Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.

sys-desc <SYS-DESC>

Specifies the LLDP system description type-length-value (TLV). Range: 1 to 256 alphanumeric characters.

sysname <SYS-NAME>

Specifies the LLDP system name TLV. Range: 1 to 64 alphanumeric characters.

vendor-oui <VENDOR-OUI>

Specifies the LLDP system vendor OUI TLV. Range: 1 to 6 alphanumeric characters.

type <KEY>

Specifies the vendor OUI subtype key. Optional.

value <VALUE>

Specifies the vendor OUI subtype value. Range: 1 to 256 alphanumeric characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Adding a rule to the LLDP group grp01 that ignores a device that transmits **PLATFORM01** in the system description TLV:

switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# ignore sys-desc PLATFORM01

Removing the rule that matches the sequence number 25 from the LLDP group named grp01.

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# no match seq 25
```

ignore (for MAC groups)

Syntax

[seq <SEQ-ID>] ignore {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}

no [seq <SEQ-ID>] ignore {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}

Description

Defines a rule to ignore devices for a MAC group based on the criteria of MAC address, MAC address mask, or MAC Organizational Unique Identifier (OUI). Up to 64 ignore rules can be defined for a group.

The no form of this command removes a rule for ignoring devices from a MAC group.

Command context

config-mac-group

Parameters

seq *<SEQ-ID>*

Specifies the entry sequence ID of the rule to create or modify a MAC group. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence. Range: 1 to 4294967295.

mac <MAC-ADDR>

Specifies the MAC address of the device to ignore.

mac-mask <MAC-MASK>

Specifies the MAC address mask to ignore devices in that range. Supported MAC address masks: /32 and /40.

mac-oui <MAC-OUI>

Specifies the MAC OUI to ignore devices in that range. Supports MAC OUI address of maximum length of 24 bits.

Authority

Administrators or local user group members with execution rights for this command.

Usage

To achieve the required configuration of matches for devices, it is recommended to first ignore the devices that you do not want to add. Then match the criteria for the rest of the devices that you want to add to the MAC group.

For example, if you want to ignore a specific device but add all the other devices that belong to a MAC OUI, then you must first configure the ignore criteria with a lower sequence number. And then configure match criteria with a higher sequence number.

Examples

Adding a rule to the MAC group grp01 to ignore a device based on MAC address, but match all other devices belonging to a MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac la:2b:3c:4d:5e:6f
switch(config-mac-group)# match mac-oui la:2b:3c
switch(config-mac-group)# exit
```

```
switch(config)# do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
1
1
ssh server vrf mgmt
1
vlan 1
interface mgmt
   no shutdown
   ip dhcp
mac-group grp01
    seq 10 ignore mac 1a:2b:3c:4d:5e:6f
     seq 20 match mac-oui 1a:2b:3c
. . .
```

Adding a rule to the MAC group grp01 to ignore devices based on MAC address mask, but match all other devices belonging to a MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac-mask 1a:2b:3c:4d/32
switch(config-mac-group)# match mac-oui 1a:2b:3c
switch(config-mac-group)# exit
switch(config) # do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
1
1
1
ssh server vrf mgmt
1
1
1
1
vlan 1
interface mgmt
   no shutdown
   ip dhcp
mac-group grp01
    seq 10 ignore mac-mask la:2b:3c:4d/32
     seq 20 match mac-oui 1a:2b:3c
• • •
```

Adding a rule to the MAC group grp01 that ignores a device based on complete MAC address:

```
switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac la:2b:3c:4d:5e:6f
```

Adding a rule to the MAC group grp02 that ignores devices based on MAC mask:

switch(config)# mac-group grp01
switch(config-mac-group)# ignore mac-mask 1a:2b:3c:4d:5e/40
switch(config-mac-group)# ignore mac-mask 18:e3:ab:73/32

Adding a rule to the MAC group grp03 that ignores devices based on MAC OUI:

```
switch(config) # mac-group grp03
switch(config-mac-group) # ignore mac-oui 81:cd:93
```

Adding a rule to the MAC group **grp01** that ignores devices with a sequence number and based on MAC address:

```
switch(config) # mac-group grp01
switch(config-mac-group)# seq 10 ignore mac b2:c3:44:12:78:11
switch(config-mac-group) # exit
switch(config) # do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
I.
vlan 1
interface mgmt
   no shutdown
   ip dhcp
mac-group grp01
    seq 10 ignore mac b2:c3:44:12:78:11
• • •
```

Removing the rule from the MAC group **grp01** based on sequence number:

```
switch(config)# mac-group grp01
switch(config-mac-group)# no ignore seq 10
switch(config)# do show running-config
Current configuration:
!
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp01
>>>
```

Adding a rule to the MAC group grp01 that ignores devices with MAC entry sequence number and based on MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# seq 10 ignore mac b2:c3:44:12:78:11
switch(config-mac-group)# seq 20 ignore mac-oui 1a:2b:3c
switch(config-mac-group)# seq 30 ignore mac-mask 71:14:89:f3/32
switch(config-mac-group)# exit
```

```
switch(config)# do show running-config
Current configuration:
!
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
no shutdown
ip dhcp
mac-group grp01
seq 10 ignore mac b2:c3:44:12:78:11
seq 20 ignore mac-oui 1a:2b:3c
seq 30 ignore mac-mask 71:14:89:f3/32
```

Removing the rule from the MAC group grp01 based on sequence number and MAC OUI:

```
switch(config)# mac-group grp01
switch(config-mac-group)# no seq 20 ignore mac-oui 1a:2b:3c
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
vlan 1
interface mgmt
   no shutdown
   ip dhcp
mac-group grp01
    seq 10 ignore mac b2:c3:44:12:78:11
    seq 30 ignore mac-mask 71:14:89:f3/32
• • •
```

Removing the rule that matches the sequence number **25** from the MAC group named grp01.

```
switch(config) # mac-group grp01
switch(config-mac-group) # no ignore seq 25
```

mac-group

Syntax

```
mac-group <MAC-GROUP-NAME>
```

no mac-group <MAC-GROUP-NAME>

Description

Creates a MAC group or modifies an existing MAC group. A MAC group is used to classify connected devices based on the MAC address details, such as mask or OUI.

A maximum of 32 MAC groups can be configured on the switch. A maximum of 2 MAC groups can be associated with a device profile. Each group accepts 64 match or ignore commands.

The no form of this command removes a MAC group.

Command context

config

Parameters

<MAC-GROUP-NAME>

Specifies the name of the MAC group to create or modify. The maximum number of characters supported is 32.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating a MAC group named grp01:

```
switch(config)# mac-group grp01
switch(config-mac-group)# exit
```

Removing a MAC group named grp01:

```
switch(config)# no mac-group grp01
```

match (for CDP groups)

Syntax

```
match [seq <SEQ-ID>] {platform <PLATFORM> | sw-version <SWVERSION> |
    voice-vlan-query <VLAN-ID>}
```

```
no match [seq <SEQ-ID>] {platform <PLATFORM> | sw-version <SWVERSION> |
    voice-vlan-query <VLAN-ID>}
```

Description

Defines a rule to match devices for a CDP group. A maximum of 32 CDP groups can be configured on the switch. Up to 64 match or ignore rules can be defined for each group.

The no form of this command removes a rule for adding devices to a CDP group.

Command context

config-cdp-group

Parameters

seq <SEQ-ID>

Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.

platform <PLATFORM>

Specifies the hardware or model details of the neighbor. Range: 1 to 128 alphanumeric characters.

sw-version <SWVERSION>

Specifies the software version of the neighbor. Range: 1 to 128 alphanumeric characters.

```
voice-vlan-query <VLAN-ID>
```

Specifies the VLAN query value of the neighbor. Range: 1 to 65535.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Adding rules to match a Cisco device with a specific software version on VLAN **512** to the CDP group **grp01**:

```
switch(config) # port-access cdp-group grp01
switch(config-cdp-group)# match platform CISCO
switch(config-cdp-group)# match sw-version 11.2(12)P
switch(config-cdp-group)# match voice-vlan-query 512
switch(config-cdp-group)# match seq 50 platform cisco sw-version 11.2(12)P voice-vlan-query 512
switch(config-cdp-group)# exit
switch(config) # do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.000
!export-password: default
led locator on
vlan 1
port-access cdp-group grp01
    seq 10 match platform CISCO
     seq 20 match sw-version 11.2(12)P
     seq 30 match voice-vlan-query 512
     seq 50 match platform cisco sw-version 11.2(12)P voice-vlan-query 512
```

Removing a rule that matches the sequence number **25** from the CDP group named **grp01**:

switch(config)# port-access cdp-group grp01
switch(config-cdp-group)# no match seq 25

Adding a rule that matches the value of vendor-OUI **000b86** to the CDP group named **grp01**:

```
switch(config) # port-access cdp-group grp01
switch(config-cdp-group) # match vendor-oui 000b86
```

match (for LLDP groups)

Syntax

```
match [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
    vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}
no match [seq <SEQ-ID>] {sys-desc <SYS-DESC> | sysname <SYS-NAME> |
    vendor-oui <VENDOR-OUI> [type <KEY> [value <VALUE>]]}
```

Description

Defines a rule to match devices for an LLDP group. Up to 64 match/ignore rules can be defined for a group. The no form of this command removes a rule.

Command context

config-lldp-group

Parameters

seq <SEQ-ID>

Specifies the ID of the rule to create or modify. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence.

sys-desc <SYS-DESC>

Specifies the LLDP system description type-length-value (TLV). Range: 1 to 256 alphanumeric characters.

sysname <SYS-NAME>

Specifies the LLDP system name TLV. Range: 1 to 64 alphanumeric characters.

vendor-oui <VENDOR-OUI>

Specifies the LLDP system vendor OUI TLV. Range: 1 to 6 alphanumeric characters.

type <KEY>

Specifies the vendor OUI subtype key.

value <VALUE>

Specifies the vendor OUI subtype value. Range: 1 to 256 alphanumeric characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Adding rules that match the LLDP system description **ArubaSwitch** and system name **Aruba** to the LLDP group named **grp01**:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# match sys-desc ArubaSwitch
switch(config-lldp-group)# match sysname Aruba
switch(config)# do show running-config
Current configuration:
!
!Version ArubaOS-CX Virtual.10.0X.000
!export-password: default
led locator on
!
!
vlan 1
port-access lldp-group grp01
    seq 10 match sys-desc ArubaSwitch
    seq 20 match sysname Aruba
```

Removing a rule that matches the sequence number 25 from an LLDP group named grp01:

switch(config) # port-access lldp-group grp01
switch(config-lldp-group) # no match seq 25

Adding a rule that matches the value of vendor-OUI 000b86 with type of 1 to the LLDP group named grp01:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# match vendor-oui 000b86 type 1
```

Adding a rule that matches the value of vendor-OUI 000c34 to the LLDP group named grp01:

```
switch(config)# port-access lldp-group grp01
switch(config-lldp-group)# match vendor-oui 000c34
```

match (for MAC groups)

Syntax

[seq <SEQ-ID>] match {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}

```
no [seq <SEQ-ID>] match {mac <MAC-ADDR> | mac-mask <MAC-MASK> | mac-oui <MAC-OUI>}
```

Description

Defines a rule to match devices for a MAC group based on the criteria of MAC address, MAC address mask, or MAC Organizational Unique Identifier (OUI). Up to 64 match rules can be defined for a group.



NOTE: You must not configure the following special MAC addresses:

- Null MAC—For example, 00:00:00:00:00:00 or 00:00:00/32
- Multicast MAC
- Broadcast MAC—For example, ff:ff:ff:ff:ff:ff:ff:ff:ff
- System MAC

Although the switch accepts these addresses, it will not process these addresses for the local MAC match feature.

The no form of this command removes a rule for adding devices to a MAC group.

The number of clients that can onboard based on the match criteria is configured in the aaa authentication port-access client-limit command. For information about this command, see the *Security Guide* for your switch.

Command context

config-mac-group

Parameters

seq <SEQ-ID>

Specifies the entry sequence ID of the rule to create or modify a MAC group. If no ID is specified when adding a rule, an ID is automatically assigned in increments of 10 in the order in which rules are added. When more than one rule matches the command entered, the rule with the lowest ID takes precedence. Range: 1 to 4294967295.

mac <MAC-ADDR>

Specifies the MAC address of the device.

mac-mask <MAC-MASK>

Specifies the MAC address mask to add devices in that range. Supported MAC address masks: /32 and /40.

mac-oui <MAC-OUI>

Specifies the MAC OUI to add devices in that range. Supports MAC OUI address of maximum length of 24 bits.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Adding a device to the MAC group grp01 based on complete MAC address:

```
switch(config)# mac-group grp01
switch(config-mac-group)# match mac la:2b:3c:4d:5e:6f
switch(config-mac-group)# exit
```

Adding devices to the MAC group grp02 based on MAC mask:

```
switch(config)# mac-group grp01
switch(config-mac-group)# match mac-mask 1a:2b:3c:4d:5e/40
switch(config-mac-group)# match mac-mask 18:e3:ab:73/32
switch(config-mac-group)# exit
```

Adding devices to the MAC group grp03 based on MAC OUI:

```
switch(config)# mac-group grp03
switch(config-mac-group)# match mac-oui 81:cd:93
switch(config-mac-group)# exit
```

Adding devices to the MAC group grp01 with MAC entry sequence number and based on MAC address:

```
switch(config) # mac-group grp01
switch(config-mac-group) # seq 10 match mac b2:c3:44:12:78:11
switch(config-mac-group)# exit
switch(config) # do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
1
vlan 1
interface mgmt
   no shutdown
   ip dhcp
mac-group grp01
   seq 10 match mac b2:c3:44:12:78:11
. . .
```

Removing devices from the MAC group **grp01** based on sequence number:

```
switch(config) # mac-group grp01
switch(config-mac-group)# no match seg 10
switch(config-mac-group)# exit
switch(config) # do show running-config
Current configuration:
1
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
T.
T.
vlan 1
interface mgmt
   no shutdown
   ip dhcp
mac-group grp01
```

• • •

Adding devices to the MAC group grp01 with MAC entry sequence number and based on MAC address, MAC address mask, and MAC OUI:

```
switch(config) # mac-group grp01
switch(config-mac-group) # seq 10 match mac b2:c3:44:12:78:11
switch(config-mac-group) # seq 20 match mac-oui 1a:2b:3c
switch(config-mac-group)# seq 30 match mac-mask 71:14:89:f3/32
switch(config-mac-group)# exit
switch(config) # do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
1
vlan 1
interface mgmt
   no shutdown
   ip dhcp
mac-group grp01
    seq 10 match mac b2:c3:44:12:78:11
     seq 20 match mac-oui 1a:2b:3c
     seq 30 match mac-mask 71:14:89:f3/32
. . .
```

Removing devices from the MAC group grp01 based on MAC OUI:

```
switch(config) # mac-group grp01
switch(config-mac-group)# no seq 20 match mac-oui 1a:2b:3c
switch(config-mac-group)# exit
switch(config) # do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
vlan 1
interface mgmt
    no shutdown
   ip dhcp
mac-group grp01
     seq 10 match mac b2:c3:44:12:78:11
     seq 30 match mac-mask 71:14:89:f3/32
• • •
```

Adding devices to the MAC group grp03 with MAC entry sequence number and based on MAC address mask:

```
switch(config)# mac-group grp03
switch(config-mac-group)# seq 10 match mac-mask 10:14:a3:b7:55/40
switch(config-mac-group)# exit
switch(config)# do show running-config
Current configuration:
!
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
```

```
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp03
    seq 10 match mac-mask 10:14:a3:b7:55/40
...
```

Removing devices from the MAC group grp03 based on MAC address mask:

```
switch(config)# mac-group grp03
switch(config-mac-group)# no seq 10 match mac-mask 10:14:a3:b7:55/40
switch(config)# do show running-config
Current configuration:
!
!Version ArubaOS-CX Virtual.10.0X.0001
!export-password: default
led locator on
!
!
vlan 1
interface mgmt
    no shutdown
    ip dhcp
mac-group grp03
```

port-access cdp-group

Syntax

port-access cdp-group <CDP-GROUP-NAME>

```
no port-access cdp-group <CDP-GROUP-NAME>
```

Description

Creates a CDP (Cisco Discovery Protocol) group or modifies an existing CDP group. A CDP Group is used to classify connected devices based on the CDP packet details advertised by the device. A maximum of 32 CDP groups can be configured on the switch. Each group accepts 64 match/ignore commands.

The no form of this command removes a CDP group.

Command context

config

Parameters

<CDP-GROUP-NAME>

Specifies the name of the CDP group to create or modify. The maximum number of characters supported is 32. Required.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating a CDP group named grp01:

```
switch(config) # port-access cdp-group grp01
switch(config-cdp-group)# match platform CISCO
switch(config-cdp-group) # match sw-version 11.2(12) P
switch(config-cdp-group) # match voice-vlan-query 512
switch(config-cdp-group)# seq 50 match platform cisco sw-version 11.2(12)P voice-vlan-query 512
switch(config-cdp-group)# exit
switch(config) # do show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.0X.000
!export-password: default
led locator on
vlan 1
port-access cdp-group grp01
    seq 10 match platform CISCO
     seq 20 match sw-version 11.2(12)P
     seq 30 match voice-vlan-query 512
     seq 50 match platform cisco sw-version 11.2(12)P voice-vlan-query 512
```

Removing a CDP group named grp01:

switch(config) # no port-access cdp-group grp01

port-access device-profile

Syntax

port-access device-profile <DEVICE-PROFILE-NAME>

no port-access device-profile <DEVICE-PROFILE-NAME>

Description

Creates a new device profile and switches to the config-device-profile context. A maximum of 32 device profiles can be created.

The no form of this command removes a device profile.

Command context

config

Parameters

<DEVICE-PROFILE-NAME>

Specifies the name of a device profile. Range: 1 to 32 alphanumeric characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating a device profile named **profile01**:

switch(config)# port-access device-profile profile01
switch(config-device-profile)#

Removing a device profile named **profile01**:

port-access device-profile mode block-until-profile-applied



NOTE: You must configure this mode in device profile only on standalone ports where there is no security configured and when you not want the port to be offline until one client is onboarded.

Syntax

```
port-access device-profile
    mode block-until-profile-applied
```

no port-access device-profile mode block-until-profile-applied

Description

Configures the switch to block the port until a profile match occurs for a device. This configuration is required when no security feature is enabled on the port.

You must enable this mode or security on the port for local MAC match feature to operate. You must not enable both features on the same port at the same time.



NOTE: You must not combine any other AAA configurations with the block-until-profile-applied mode.

The no form of this command removes a rule for adding devices to a MAC group.

Command context

config-if

```
config-if-deviceprofile
```

Authority

Administrators or local user group members with execution rights for this command.

Example

On the 6400 Switch Series, interface identification differs.

Configuring block-until-profile applied mode on port 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# port-access device-profile
switch(config-if-deviceprofile)# mode block-until-profile-applied
switch(config-if-deviceprofile)# end
```

port-access lldp-group

Syntax

port-access lldp-group <LLDP-GROUP-NAME>

```
no port-access lldp-group <LLDP-GROUP-NAME>
```

Description

Creates an LLDP group or modifies an existing LLDP group. An LLDP group is used to classify connected devices based on the LLDP type-length-values (TLVs) advertised by the device. A maximum of 32 LLDP groups can be configured on the switch. Each group accepts 64 match/ignore commands.

The no form of this command removes an LLDP group.

Command context

config

Parameters

<LLDP-GROUP-NAME>

Specifies the name of the LLDP group to create or modify. The maximum number of characters supported is 32. Required.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Creating an LLDP group named grp01:

```
switch(config) # port-access lldp-group grp01
switch(config-lldp-group) #
```

Removing an LLDP group named grp01:

```
switch(config) # no port-access lldp-group grp01
```

show port-access device-profile

Syntax

```
show port-access device-profile [[interface {all | <INTERFACE-ID>}
      [client-status <MAC-ADDR>]] | name <DEVICE-PROFILE-NAME>]
```

Description

Shows the client status for a specific MAC address or profile name.

Command context

Manager (#)

Parameters

interface {all | <INTERFACE-ID>}

Select all for all interfaces or specify the name of an interface in the format: member/slot/port.

client-status <MAC-ADDR>

Specifies a MAC address (xx:xx:xx:xx:xx), where x is a hexadecimal number from 0 to F.

name <DEVICE-PROFILE-NAME>

Specifies the name of the device profile.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing the applied state of the device profiles:

```
switch# show port-access device-profile
```

Profile Name LLDP Groups CDP Groups MAC Groups Role State	:::::::::::::::::::::::::::::::::::::::	accesspoints 2920-grp 2920-mac-grp1,2920-iot-grp2 local_role_1 Enabled
Profile Name LLDP Groups CDP Groups MAC Groups Role State	:::::::::::::::::::::::::::::::::::::::	access_switches 2920-grp local_2920_role Enabled
Profile Name LLDP Groups CDP Groups MAC Groups Role State	:::::::::::::::::::::::::::::::::::::::	<pre>iot_devices iot_camera-grp1,iot_sensors-grp1 local_2920_role Enabled</pre>
Profile Name LLDP Groups CDP Groups MAC Groups Role State	:::::::::::::::::::::::::::::::::::::::	lobbyaps lobby_ap_cdp_grp test_ap_role Disabled

Showing the applied state of the device profile on interface 1/1/3:

switch# show port-access device-profile interface 1/1/3 client-status 00:0c:29:9e:d1:20

```
Port 1/1/3, Neighbor-Mac 00:0c:29:9e:d1:20
Profile Name : lobbyaps
LLDP Group :
CDP Group : aruba-ap_cdp
MAC Group :
Role : test_ap_role
Status : Failed
Failure Reason : Failed to apply MAC based VLAN
```

Showing the applied state of a specific device profile:

```
switch# show port-access device-profile name lldp-group
Profile Name : lldp-group
LLDP Groups :
CDP Groups :
MAC Groups : pc-behind-phone, lldp
Role : auth_role
State : Enabled
```

LLDP

The IEEE 802.1AB Link Layer Discovery Protocol (LLDP) provides a standards-based method for network devices to discover each other and exchange information about their capabilities. An LLDP device advertises itself to adjacent (neighbor) devices by transmitting LLDP data packets on all interfaces on which outbound LLDP is enabled, and reading LLDP advertisements from neighbor devices on ports on which inbound LLDP is enabled. Inbound packets from neighbor devices are stored in a special LLDP MIB (management information base). This information can then be queried by other devices through SNMP.

LLDP information is used by network management tools to create accurate physical network topologies by determining which devices are neighbors and through which interfaces they connect. LLDP operates at layer 2 and requires an LLDP agent to be active on each interface that sends and receives LLDP advertisements. LLDP advertisements can contain a variable number of TLV (type, length, value) information elements. Each TLV describes a single attribute of a device such as: system capabilities, management IP address, device ID, port ID.

Packet boundaries

When multiple LLDP devices are directly connected, an outbound LLDP packet travels only to the next LLDP device. An LLDP-capable device does not forward LLDP packets to any other devices, regardless of whether they are LLDP-enabled.

An intervening hub or repeater forwards the LLDP packets it receives in the same manner as any other multicast packets it receives. Therefore, two LLDP switches joined by a hub or repeater handle LLDP traffic in the same way that they would if directly connected.

Any intervening 802.1D device or Layer-3 device that is either LLDP-unaware or has disabled LLDP operation drops the packet.

LLDP-MED

LLDP-MED (ANSI/TIA-1057/D6) extends the LLDP (IEEE 802.1AB) industry standard to support advanced features on the network edge for Voice Over IP (VoIP) endpoint devices with specialized capabilities and LLDP-MED standards-based functionality. LLDP-MED in the switches uses the standard LLDP commands described earlier in this section, with some extensions, and also introduces new commands unique to LLDP-MED operation. The show commands described elsewhere in this section are applicable to both LLDP and LLDP-MED operation. LLDP-MED enables:

- Configure Voice VLAN and advertise it to connected MED endpoint devices.
- Power over Ethernet (PoE) status and troubleshooting support via SNMP.

LLDP agent

When you enable LLDP on the switch, it is automatically enabled on all data plane interfaces. You can customize this behavior by manually enabling/disabling support on each interface.

Supported standards

The LLDP agent supports the following standards: IEEE 802.1AB-2005, Station, and Media Access Control Connectivity Discovery.

Supported interfaces

LLDP is supported on interfaces mapped to a physical port, and the Out-Of-Band Management (OOBM) port. It is not supported on logical interfaces, such as loopback, tunnels, and SVIs.

Operating modes

When LLDP is enabled, the switch periodically transmits an LLDP advertisement (packet) out each active port enabled for outbound LLDP transmissions and receives LLDP advertisements on each active port enabled to receive LLDP traffic.

The LLDP agent can operate in one of the following modes:

- Transmit and receive (TxRx): This is the default setting on all ports. It enables a given port to both transmit and receive LLDP packets and to store the data from received (inbound) LLDP packets in the switch's MIB.
- Transmit only (Tx): Enables a port to transmit LLDP packets that can be read by LLDP neighbors. However, the port drops inbound LLDP packets from LLDP neighbors without reading them. This prevents the switch from learning about LLDP neighbors on that port.
- Receive only (Rx): Enables a port to receive and read LLDP packets from LLDP neighbors and to store the packet data in the switch's MIB. However, the port does not transmit outbound LLDP packets. This prevents LLDP neighbors from learning about the switch through that port.
- Disabled: Disables LLDP packet transmissions and reception on a port. In this state, the switch does not use the port for either learning about LLDP neighbors or informing LLDP neighbors of its presence.

An LLDP agent operating in TxRx mode or Tx mode sends LLDP frames to its directly connected devices both periodically and when the local configuration changes.

Sending LLDP frames

Each time the LLDP operating mode of an LLDP agent changes, its LLDP protocol state machine reinitializes. A configurable reinitialization delay prevents frequent initializations caused by frequent changes to the operating mode. If you configure the reinitialization delay, an LLDP agent must wait the specified amount of time to initialize LLDP after the LLDP operating mode changes.

Receiving LLDP frames

An LLDP agent operating in TxRx mode or Rx mode confirms the validity of TLVs carried in every received LLDP frame. If the TLVs are valid, the LLDP agent saves the information and starts an aging timer. The initial value of the aging timer is equal to the TTL value in the Time To Live TLV carried in the LLDP frame. When the LLDP agent receives a new LLDP frame, the aging timer restarts. When the aging timer decreases to zero, all saved information ages out.

TLV support

By default, the agent sends and receives the following mandatory TLVs on each interface:

- Port ID
- Chassis ID
- TTL

By default, the following ANSI/TIA-1057 TLVs for LLDP Media Endpoint Discovery (MED) are enabled on an agent. Sending them depends on the configuration and reception of any MED TLVs:

- MAC/PHY status. Includes the bit rate and auto negotiation status of the link.
- Power Via MDI: Includes Power Over Ethernet related information for supported interfaces.
- Port description
- System name
- System description

- Management address
- System capabilities
- Port VLAN ID

By default, the agent sends and receives the following ANSI/TIA-1057 TLVs for LLDP Media Endpoint Discovery (MED):

- Capabilities: Indicates MED TLV capability.
- Power Via MDI: Includes Power Over Ethernet related information.
- Network Policy: Includes the VLAN configuration for voice application.
- Location: Location identification information.
- Extended Power Via MDI: Power Over Ethernet related information

TLV advertisements

The LLDP agent transmits the following:

- Chassis-ID: Base MAC address of the switch.
- Port-ID: Port number of the physical port.
- Time-to-Live (TTL): Length of time an LLDP neighbor retains advertised data before discarding it.
- System capabilities: Identifies the primary switch capabilities (bridge, router). Identifies the primary switch functions that are enabled, such as routing.
- System description: Includes switch model name and running software version, and ROM version.
- System name: Name assigned to the switch.
- Management address: Default address selection method unless an optional address is configured.
- Port description: Physical port identifier.
- Port VLAN ID: On an L2 port, contains access or native VLAN ID. On an L3 port, contains a value of 0. Trunk allowed VLANs information are not advertised as part of the Port VLAN ID TLV. (Not supported on the OOBM interface)

LLDP MED support

LLDP-MED interoperates with directly connected IP telephony (endpoint) clients and provides the following features:

- Advertisement of the voice VLAN configured on the interface which is used by connected IP telephony (endpoint) clients.
- Advertisement of the configured location on the switch that can be used by the connected endpoint.
- Support for the fast-start capability

1			ľ		
I	-	_	5	-	ì.
L	Ξ	_	_	=	i.
ι	_	_		_	,

NOTE: LLDP-MED is intended for use with VoIP endpoints and is not designed to support links between network infrastructure devices (such as switch-to-switch or switch-to-router links).

Configuring the LLDP agent

Procedure

- 1. By default, the LLDP agent is enabled on all active interfaces. If LLDP was disabled, enable it with the command <u>lldp</u>.
- By default, the LLDP agent transmits and receive on all interfaces. To customize LLDP behavior on a specific interface, use the commands <u>11dp transmit</u> and <u>11dp receive</u>.
- 3. By default, the LLDP agent sets the management address in all TLVs in the following order:
 - **a.** LLDP management IP address.
 - b. Loopback interface IP.
 - **c.** ROP (L3 ports) or SVI (L2 ports).
 - **d.** OOBM (Management interface IP).
 - e. Base MAC.

On the OOBM port, the following order is used:

- a. LLDP management IP address,
- **b.** IP address of the management interface (OOBM port).
- c. IP address of the loopback interface.
- **d.** Base MAC address of the switch.

To specify a different address, use the commands <u>lldp management-ipv4-address</u> and <u>lldp</u> <u>management-ipv6-address</u>

- **4.** By default, all supported TLVs are sent and received. To customize the list, use the command <u>lldp</u> <u>select-tlv</u>.
- 5. By default, support for the LLDP-MED TLV is enabled. To customize settings, use the commands <u>lldp</u> <u>med</u> and <u>lldp</u> <u>med-location</u>.
- 6. If required, adjust LLDP timer, holdtime, reinitialization delay, and transmit delay from their default values with the commands <u>lldp timer</u>, <u>lldp holdtime</u>, <u>lldp reinit</u>, and <u>lldp txdelay</u>.

Example

On the 6400 Switch Series, interface identification differs.

This example creates the following configuration:

- Enables LLDP support.
- Disables LLDP transmission on interface 1/1/1.

```
switch(config)# lldp
switch(config)# interface 1/1/1
switch(config-copp)# no lldp transmit
```

LLDP commands

clear lldp neighbors

Syntax

clear lldp neighbors

Description

Clears all LLDP neighbor details.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Clearing all LLDP neighbor details:

switch# clear lldp neighbors

clear lldp statistics

Syntax

```
clear lldp statistics
```

Description

Clears all LLDP neighbor statistics.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Clearing all LLDP neighbor statistics:

switch# clear lldp statistics

lldp

Syntax

lldp

no lldp

Description

Enables LLDP support globally on all active interfaces. By default, LLDP is enabled.

The no form of this command disables LLDP support globally on all active interfaces. It does not remove any LLDP configuration settings.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling LLDP:

switch(config) # lldp

Disabling LLDP:

switch(config)# no lldp

11dp dot3

Syntax

lldp dot3 {poe | macphy}

no lldp dot3 {poe | macphy}

Description

Sets the 802.3 TLVs to be advertised. By default, advertisement of both POE and MAC/PHY TLVs is enabled. Not supported on the OOBM interface.

The no form of this command disables advertisement of 802.3 TLVs.

Command context

config-if

Parameters

poe

Specifies advertisement of power over Ethernet data link classification.

macphy

Specifies advertisement of media access control and physical layer information.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling advertisement of the POE TLV:

switch(config-if) # 11dp dot3 poe

Disabling advertisement of the POE TLV:

switch(config-if) # no lldp dot3 poe

lldp holdtime

Syntax

lldp holdtime <TIME>

no lldp holdtime

Description

Sets the holdtime that is used to calculate the LLDP Time-to-Live value. Time-to-Live defines the length of time that neighbors consider LLDP information sent by this agent as valid. When Time-to-Live expires, the information is deleted by the neighbor. Time-to-live is calculated by multiplying holdtime by the value of <u>lldp timer</u>.

The no form of this command sets the holdtime to its default value of 4.

Command context

config

Parameters

<TIME>

Specifies the holdtime in seconds. Range: 2 to 10. Default: 4.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the holdtime to 8 seconds:

switch(config) # lldp holdtime 8

Setting the holdtime to the default value of 4 seconds:

switch(config) # no lldp holdtime

lldp management-ipv4-address

Syntax

lldp management-ipv4-address <IPV4-ADDR>

no lldp management-ipv4-address

Description

Defines the IPv4 management address of the switch which is sent in the management address TLV. One IPv4 and one IPv6 management address can be configured.

If you do not define an LLDP management address, then LLDP uses one of the following (in order):

- IP address of the port
- IP address of the management interface
- Base MAC address of the switch

The no form of this command removes the IPv4 management address of the switch.

Command context

config

Parameters

<IPV4-ADDR>

Specifies the management address of the switch as an IPv4 format $(x \cdot x \cdot x \cdot x)$, where x is a decimal value from 0 to 255.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the management address to **10.10.10.2**:

switch(config) # lldp management-ipv4-address 10.10.10.2

Removing the management address:

```
switch(config) # no lldp management-ipv4-address
```

lldp management-ipv6-address

Syntax

```
lldp management-ipv6-address <IPV6-ADDR>
```

no lldp management-ipv6-address

Description

Defines the IPv6 management address of the switch. The management address is encapsulated in the management address TLV.

If no management address is specified, LLDP uses the IP address of the management interface, and if this the management interface is not defined, the chassis ID.

The no form of this command removes the IPv6 management address of the switch.

Command context

config

Parameters

<IPV6-ADDR>

Specifies an IP address in IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx), where x is a hexadecimal number from 0 to F.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the management address to 2001:db8:85a3::8a2e:370:7334:

```
switch(config) # lldp management-ipv6-address 2001:0db8:85a3::8a2e:0370:7334
```

Removing the management address:

switch(config) # no lldp management-ipv6-address

lldp med

Syntax

```
lldp med [poe [priority-override] | capability | network-policy]
no med [poe [priority-override] | capability | network-policy]
```

Description

Configures support for the LLDP-MED TLV. LLDP-MED (media endpoint devices) is an extension to LLDP developed by TIA to support interoperability between VoIP endpoint devices and other networking end-devices. The switch only sends the LLDP MED TLV after receiving a MED TLV from and connected endpoint device.

Not supported on the OOBM interface.

The no form of this command disables support for the LLDP MED TLV.

Command context

config-if

Parameters

poe [priority-override]

Specifies advertisement of power over Ethernet data link classification. The priority-override option overrides user-configured port priority for Power over Ethernet. When both lldp dot3 poe and lldp med poe are enabled, the lldp dot3 poe3 setting takes precedence. Default: enabled.

capability

Specifies advertisement of supported LLDP MED TLVs. The capability TLV is always sent with other MED TLVs, therefore it cannot be disabled when other MED TLVs are enabled. Default: enabled.

network-policy

Network policy discovery lets endpoints and network devices advertise their VLAN IDs, and IEEE 802.1p (PCP and DSCP) values for voice applications. This TLV is only sent when a voice VLAN policy is present. Default: enabled.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling advertisement of the network policy TLV:

switch(config-if)# lldp med network-policy

Disabling advertisement of the network policy TLV:

switch(config-if) # no lldp med network-policy

lldp med-location

Syntax

lldp med-location {civic-addr | elin-addr }

```
no med-location {civic-addr | elin-addr }
```

Description

Configures support for the LLDP-MED TLV. Supports only civic address and emergency location information number (ELIN). Coordinate-based location is not supported.

The no form of this command disables support for the LLDP MED TLV.

Command context

config-if

Parameters

civic-addr

Configures the LLDP MED civic location TLV.

elin-addr

Configures support for the LLDP MED emergency location TLV.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling support for the LLDP MED emergency location TLV:

switch(config-if)# lldp med-location elin-addr gher

Disabling support for the LLDP MED emergency location TLV:

switch(config-if)# no lldp med-location elin-addr gher

Enabling support for the LLDP MED civic address TLV:

switch(config-if)# lldp med-location civic-addr US 1 4 ret 6 tyu 7 tiyuo

Disabling support for the LLDP MED civic address TLV:

switch(config-if)# no lldp med-location civic-addr US 1 4 ret 6 tyu 7 tiyuo

lldp receive

Syntax

lldp receive

no lldp receive

Description

Enables reception of LLDP information on an interface. By default, LLDP reception is enabled on all active interfaces, including the OOBM interface.

The no form of this command disables reception of LLDP information on an interface.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Enabling LLDP reception on interface 1/1/1:

switch(config)# interface 1/1/1
switch(config-if)# lldp receive

Disabling LLDP reception on interface 1/1/1:

```
switch(config)# interface 1/1/1
switch(config-if)# no lldp receive
```

Enabling LLDP reception on the OOBM interface:

switch(config)# interface mgmt
switch(config-if)# lldp receive

Disabling LLDP reception on the OOBM interface:

switch(config) # interface mgmt
switch(config-if) # no lldp receive

lldp reinit

Syntax

lldp reinit <TIME>

no lldp reinit

Description

Sets the amount of time (in seconds) to wait before performing LLDP initialization on an interface. The no form of this command sets the reinitialization time to its default value of 2 seconds.

Command context

config

Parameters

<TIME>

Specifies the reinitialization time in seconds. Range: 1 to 10. Default: 2 seconds.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the reinitialization time to 5 seconds:

switch(config)# lldp reinit 5

Setting the reinitialization time to the default value of 2 seconds:

switch(config)# no lldp reinit

lldp select-tlv

Syntax

```
lldp select-tlv <TLV-NAME>
```

no lldp select-tlv <TLV-NAME>

Description

Selects a TLV that the LLDP agent will send and receive. By default, all supported TLVs are sent and received. The no form of this command stops the LLDP agent from sending and receiving a specific TLV.

Command context

config

Parameters

select-tlv <TLV-NAME>

Specifies the TLV name to send. The following TLV names are supported:

- management-address: Selected as follows:
 - 1. IPv4 or IPV6 management address.
 - 2. IP address of the lowest configured loopback interface.
 - 3. If layer 3, then the route-only port IP address. If layer 2, the IP address of the SVI.
 - 4. OOBM interface IP address.
 - 5. Base MAC address of the switch.
- port-description: A description of the port.
- port-vlan-id: VLAN ID assigned to the port.
- system-capabilities: Identifies the primary switch functions that are enabled, such as routing.
- system-description: Description of the system, comprised of the following information: hardware serial number, hardware revision number, and firmware version.
- system-name: Host name assigned to the switch.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Stopping the LLDP agent from sending the **port-description** TLV:

switch(config) # no lldp select-tlv port-description

Enabling the LLDP agent to send the **port-description** TLV:

switch(config) # lldp select-tlv port-description

lldp timer

Syntax

lldp timer <TIME>

no lldp timer

Description

Sets the interval (in seconds) at which local LLDP information is updated and TLVs are sent to neighboring network devices by the LLDP agent. The minimum setting for this timer must be four times the value of lldp txdelay.

For example, this is a valid configuration:

- lldp timer = 16
- lldp txdelay=4

And, this is an invalid configuration:

- lldp timer = 5
- lldp txdelay = 2



NOTE: When copying a saved configuration to the running configuration, the value for <code>lldp</code> timer is applied before the value of <code>lldp</code> txdelay. This can result in a configuration error if the saved configuration has a value of <code>lldp</code> timer that is not four times the value of <code>lldp</code> txdelay in the running configuration.

For example, if the saved configuration has the settings:

- lldp timer = 16
- lldp txdelay=4

And the running configuration has the settings:

- lldp timer = 30
- lldp txdelay = 7

Then you will see an error indicating that certain configuration settings could not be applied, and you will have to manually adjust the value of lldp txdelay in the running configuration.

The no form of this command sets the update interval to its default value of 30 seconds.

Command context

config

Parameters

<TIME>

Specifies the update interval (in seconds). Range: 5 to 32768. Default: 30.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the update interval to 7 seconds:

switch(config) # lldp timer 7

Setting the update interval to the default value of 30 seconds:

switch(config)# no lldp timer

lldp transmit

Syntax

lldp transsmit

no lldp transmit

Description

Enables transmission of LLDP information on specific interface. By default, LLDP transmission is enabled on all active interfaces, including the OOBM interface.

The no form of this command disables transmission of LLDP information on an interface.

Command context

config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs. Enabling LLDP transmission on interface **1/1/1**:

switch(config)# interface 1/1/1
switch(config-if)# lldp transsmit

Disabling LLDP transmission on interface 1/1/1:

switch(config)# interface 1/1/1
switch(config-if)# no lldp transsmit

Enabling LLDP transmission on the OOBM interface:

switch(config)# interface mgmt
switch(config-if)# lldp transsmit

Disabling LLDP transmission on the OOBM interface:

```
switch(config)# interface mgmt
switch(config-if)# no lldp transsmit
```

lldp txdelay

Syntax

lldp txdelay <TIME>

no lldp txdelay

Description

Sets the amount of time (in seconds) to wait before sending LLDP information from any interface. The maximum value for txdelay is 25% of the value of lldp tx timer.

The no form of this command sets the delay time to its default value of 2 seconds.

Command context

config

Parameters

<TIME>

Specifies the delay time in seconds. Range: 0 to 10. Default: 2.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting the delay time to 8 seconds:

switch(config) # lldp txdelay 8

Setting the delay time to the default value of 2 seconds:

switch(config) # no lldp txdelay

show 11dp configuration

Syntax

show lldp configuration [<INTERFACE-ID>] [vsx-peer]

Description

Shows LLDP configuration settings for all interfaces or a specific interface.

Command context

Manager (#)

Parameters

<INTERFACE-ID>

Specifies an interface. Format: member/slot/port.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

On the 6400 Switch Series, interface identification differs.

Showing configuration settings for all interfaces:

```
switch# show lldp configuration
LLDP Global Configuration
_____
LLDP Enabled
                         : Yes
LLDP Enabled : Ye
LLDP Transmit Interval : 8
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Time Interval
                         : 2
TLVs Advertised
_____
Management Address
Port Description
Port VLAN-ID
System Capabilities
System Description
System Name
LLDP Port Configuration
_____
PORT
            TX-ENABLED
                              RX-ENABLED
1/1/1Yes1/1/2Yes1/1/3Yes
_____
                               Yes
                              Yes
                               Yes
           Yes
1/1/4
                               Yes
           Yes
1/1/5
                               Yes
. . .
        Yes
                               Yes
mgmt
```

This example shows configuration settings for interface 1/1/1.

```
switch# show lldp configuration 1/1/1
```

```
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 2
LLDP Reinit Time Interval : 2
```

```
LLDP Port Configuration
```

PORT TX-ENABLED RX-ENABLED

show 11dp configuration mgmt

Syntax

show lldp configuration mgmt

Description

Shows LLDP configuration settings for the OOBM interface.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing configuration settings for all interfaces:

show 11dp t1v

Syntax

show lldp tlv [vsx-peer]

Description

Shows the LLDP TLVs that are configured for send and receive.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

switch# show lldp tlv

```
TLVs Advertised
```

Management Address Port Description Port VLAN-ID System Capabilities System Description System Name

show 11dp statistics

Syntax

show lldp statistics [<INTERFACE-ID>] [vsx-peer]

Description

Shows global LLDP statistics or statistics for a specific interface.

Command context

Manager (#)

Parameters

<INTERFACE-ID>

Specifies an interface. Format: member/slot/port.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

On the 6400 Switch Series, interface identification differs.

Showing global statistics for all interfaces:

```
switch# show lldp statistics
```

```
LLDP Global Statistics
```

Total	Packets	Transmitted		:	19
Total	Packets	Received		:	19
Total	Packets	Received And	Discarded	:	0
Total	TLVs Unr	recognized		:	0

LLDP Port Statistics

PORT-ID	TX-PACKETS	RX-PACKETS	RX-DISCARDED	TLVS-UNKNOWN
1/1/1 1/1/2 1/1/3 1/1/4 1/1/5	7 7 0 0 0	7 7 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0
 mgmt	5	5	0	0

Showing statistics for interface 1/1/1:

```
switch# show lldp statistics 1/1/1
```

```
LLDP Statistics
```

```
Port Name: 1/1/1Packets Transmitted: 159Packets Received: 163Packets Received And Discarded: 0Packets Received And Unrecognized: 0
```

show 11dp statistics mgmt

Syntax

show lldp statistics mgmt

Description

Shows LLDP statistics for the OOBM interface.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.
Example

Showing LLDP statistics for the OOBM interface:

switch# show lldp statistics mgmt

```
LLDP Statistics
```

Port Name: mgmtPackets Transmitted: 20Packets Received: 23Packets Received And Discarded: 0Packets Received And Unrecognized: 0

show 11dp neighbor-info

Syntax

show lldp neighbor-info [<INTERFACE-NAME>] [vsx-peer]

Description

Displays information about neighboring devices for all interfaces or for a specific interface. The information displayed varies depending on the type of neighbor connected and the type of TLVs sent by the neighbor.

Command context

Manager (#)

Parameters

<INTERFACE-NAME>

Specifies the interface for which to show information for neighboring devices. Use the format member/slot/port (for example, 1/3/1).

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

On the 6400 Switch Series, interface identification differs.

Showing LLDP information for all interfaces:

switch# show lldp neighbor-info

```
LLDP Neighbor Information

Total Neighbor Entries : 3

Total Neighbor Entries Deleted : 0

Total Neighbor Entries Dropped : 0

Total Neighbor Entries Aged-Out : 0
```

LOCAL-PORT	CHASSIS-ID	PORT-ID	PORT-DESC	TTL	SYS-NAME
1/1/1 1/1/2 1/1/46 mgmt	70:72:cf:a4:7d:50 48:0f:cf:af:73:80 48:0f:cf:af:73:80 48:0f:cf:af:73:80 48:0f:cf:af:73:80	1/1/1 1/1/2 1/1/46 mgmt	1/1/1 1/1/2 1/1/46 mgmt	32 120 120 120	switch switch switch switch

Showing information for interface 1/3/1 when it has only one switch connected as a neighbor:

```
switch# show lldp neighbor-info 1/1/1
```

Port	: 1/1/1
Neighbor Entries	: 1
Neighbor Entries Deleted	: 0
Neighbor Entries Dropped	: 0
Neighbor Entries Aged-Out	: 0
Neighbor Chassis-Name	: HP-3800-24G-PoEP-2XG
Neighbor Chassis-Description	: HP J9587A 3800-24G-PoE+-2XG Switch, revision
Neighbor Chassis-ID	: 10:60:4b:39:3e:80
Neighbor Management-Address	: 192.168.1.1
Chassis Capabilities Available	: Bridge, Router
Chassis Capabilities Enabled	: Bridge
Neighbor Port-ID	: 1/1/1
Neighbor Port-Desc	: 1/1/1
Neighbor Port VLAN ID	:
TTL	: 120

Showing information for interface 1/3/10 when the neighbor sends a DOT3 power TLV:

switch# show lldp neighbor-info	1	L/3/10
Port	:	1/3/10
Neighbor Entries	:	1
Neighbor Entries Deleted	:	0
Neighbor Entries Dropped	:	0
Neighbor Entries Aged-Out	:	0
Neighbor Chassis-Name	:	84:d4:7e:ce:5d:68
Neighbor Chassis-Description	:	ArubaOS (MODEL: 325), Version Aruba IAP
Neighbor Chassis-ID	:	84:d4:7e:ce:5d:68
Neighbor Management-Address	:	169.254.41.250
Chassis Capabilities Available	:	Bridge, WLAN
Chassis Capabilities Enabled	:	WLAN
Neighbor Port-ID	:	84:d4:7e:ce:5d:68
Neighbor Port-Desc	:	eth0
TTL	:	120
Neighbor Port VLAN ID	:	
Neighbor PoE information	:	DOT3
Neighbor Power Type	:	TYPE2 PD
Neighbor Power Priority	:	Unkown
Neighbor Power Source	:	Primary
PD Requested Power Value	:	25.0 W
PSE Allocated Power Value: 25.0	V	V
Neighbor Power Supported	:	Yes
Neighbor Power Enabled	:	Yes
Neighbor Power Class	:	5
Neighbor Power Paircontrol	:	No
PSE Power Pairs	:	Signal

Showing information for interface 1/1/1 when it has multiple neighbors (displays a maximum of four):

```
switch# show lldp neighbor-info 1/1/1
```

```
Port: 1/1/1Neighbor Entries: 4Neighbor Entries Deleted: 0
```

Neighbor Entries Dropped : 0 Neighbor Entries Aged-Out : 0 Neighbor Chassis-Name : switch Neighbor Chassis-Description Neighbor Chassis-ID Neighbor Management-Address : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 000000 : 0000 : 00 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID : 1/1/1 Neighbor Port-Desc : 1/1/1 Neighbor Port VLAN ID TTL Neighbor Chassis-Name TTL : 120 Neighbor Chassis-Name Neighbor Chassis-Description Neighbor Chassis-ID Neighbor Management-Address Neighbor Management-Address Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID : 1/1/1 Neighbor Port-Desc : 1/1/1 Neighbor Port VLAN ID TTL: 120Neighbor Chassis-Name: switchNeighbor Chassis-Description: Aruba JL375A 8400X XL.01.01.0001Neighbor Chassis-ID: 1c:98:ec:fe:25:02Neighbor Management-Address: 10.1.1.4 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-Desc . 1/1/1 Neighbor Chassis-ID : 1c:98:ec:fe:25:03 Neighbor Management-Address : 10.1.1.5 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID: 1/1/1Neighbor Port-Desc: 1/1/1 Neighbor Port VLAN ID : 100 TTL : 120

show lldp neighbor-info detail

Syntax

show lldp neighbor-info detail [vsx-peer]

Description

Shows detailed LLDP neighbor information for all LLDP neighbor connected interfaces.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

On the 6400 Switch Series, interface identification differs. Showing detailed LLDP information for all interfaces:

switch# show lldp neighbor-info detail LLDP Neighbor Information _____ Total Neighbor Entries : 6 Total Neighbor Entries Deleted : 2 Total Neighbor Entries Dropped : 0 Total Neighbor Entries Aged-Out : 2 _____ : 1/1/1 Port. Neighbor Entries : 1 Neighbor Entries: 1Neighbor Entries Deleted: 0Neighbor Entries Dropped: 0Neighbor Entries Aged-Out: 0Neighbor Chassis-Name: 6300 Neighbor Chassis-Description : Aruba ... Neighbor Chassis-ID: 38:11:17:1a:d5:00Neighbor Management-Address: 38:11:17:1a:d5:00 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID: 1/1/4Neighbor Port-Desc: 1/1/4Neighbor Port VLAN ID: 1 TTL : 120 Neighbor Mac-Phy details Neighbor Auto-neg Supported : true Neighbor Auto-Neg Enabled : true Neighbor Auto-Neg Advertised : 1000 BASE TFD, 100 BASE T4, 10 BASET FD : 1000 BASETFD Neighbor MAU type _____ Port : 1/1/2 Neighbor Entries : 1 Neighbor Entries: 1Neighbor Entries Deleted: 0Neighbor Entries Dropped: 0Neighbor Entries Aged-Out: 0Neighbor Chassis-Name: 6300 Neighbor Chassis-Description : Aruba ... Neighbor Chassis-ID : 38:11:17:1a:d5:00 Neighbor Management-Address : 38:11:17:1a:d5:00 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID: 1/1/5Neighbor Port-Desc: 1/1/5Neighbor Port VLAN ID: 1TTL: 1000 TTL : 120 Neighbor Mac-Phy details Neighbor Auto-neg Supported : true Neighbor Auto-Neg Enabled : true Neighbor Auto-Neg Advertised : 1000 BASE TFD, 100 BASE T4, 10 BASET FD Neighbor MAU type : 1000 BASETFD

Port : 1/1/3 Neighbor Entries : 1 Neighbor Entries Deleted Neighbor Entries Dropped : 0 Neighbor Entries Dropped : 0 Neighbor Entries Aged-Out : 0 Neighbor Chassis-Name : 6300 Neighbor Chassis-Description : Aruba ... Neighbor Chassis-ID : 38:11:17:1a:d5:00 Neighbor Management-Address : 38:11:17:1a:d5:00 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Available : Bridge, Router Neighbor Port-ID : 1/1/6 Neighbor Port-Desc : 1/1/6 Neighbor Port VLAN ID : 1 TTL : 120 TTL : 120 Neighbor Mac-Phy details Neighbor Auto-neg Supported : true Neighbor Auto-Neg Enabled : true Neighbor Auto-Neg Enabled : true Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASET_FD Neighbor MAU type : 1000 BASETFD _____ Port : 1/1/46 Neighbor Entries Neighbor Entries: 1/1/40Neighbor Entries Deleted: 0Neighbor Entries Dropped: 0Neighbor Entries Aged-Out: 0Neighbor Chassis-Name: 6300Neighbor Chassis-Description: Aruba ...Neighbor Chassis-ID: 30.11.17.171 Neighbor Chassis-ID : 38:11:17:1a:d5:00 Neighbor Management-Address : 38:11:17:1a:d5:00 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID: 1/1/19Neighbor Port-Desc: 1/1/19Neighbor Port VLAN ID: 1TTL: 100 TTL : 120 Neighbor Mac-Phy details Neighbor Auto-neg Supported : true Neighbor Auto-Neg Enabled : true Neighbor Auto-Neg Enabled : true Neighbor Auto-Neg Advertised : 1000 BASE_TFD, 100 BASE_T4, 10 BASET FD Neighbor MAU type : 1000 BASETFD _____ : 1/1/47 : 1 Port Neighbor Entries Neighbor Entries: 1Neighbor Entries Deleted: 0Neighbor Entries Dropped: 0Neighbor Entries Aged-Out: 0Neighbor Chassis-Name: 6300 Neighbor Chassis-Description : Aruba ... Neighbor Chassis-ID : 38:11:17:1a:d5:00 Neighbor Management-Address : 38:11:17:1a:d5:00 Chassis Cap

show 11dp neighbor-info mgmt

Syntax

show lldp neighbor-info mgmt

Description

Displays information about neighboring devices connected to the OOBM interface.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing LLDP information for the OOBM interface:

```
switch# show lldp neighbor-info mgmt
```

```
Port: mgmtNeighbor Entries: 1Neighbor Entries Deleted: 0Neighbor Entries Dropped: 0Neighbor Entries Aged-Out: 0Neighbor Chassis-Name: HP-3800-24G-PoEP-2XGNeighbor Chassis-Description: HP J9587A 3800-24G-PoE+-2XG Switch, revision...Neighbor Chassis-ID: 10:60:4b:39:3e:80Neighbor Management-Address: 192.168.1.1Chassis Capabilities Available: Bridge, RouterChassis Capabilities Enabled: BridgeNeighbor Port-ID: mgmtNeighbor Port-Desc: mgmtNeighbor Port VLAN ID:TTL: 120
```

Showing LLDP information for the OOBM interface when there are four neighbors:

```
switch# show lldp neighbor-info mgmt
Port : mgmt
Neighbor Entries Deleted : 0
Neighbor Entries Dropped : 0
Neighbor Entries Aged-Out : 0
Neighbor Chassis-Name : switch
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
Neighbor Management-Address : 10.1.1.2
Chassis Capabilities Available : Bridge, Router
Chassis Capabilities Enabled : Bridge, Router
Neighbor Port-ID : 1/1/1
Neighbor Port VLAN ID :
TTL : 120
Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001
```

Neighbor Chassis-ID : 1c:98:ec:fe:25:01 Neighbor Management-Address : 10.1.1.3 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID: 1/1/1Neighbor Port-Desc: 1/1/1 Neighbor Port VLAN ID : : 120 TTL Neighbor Chassis-Name : switch Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001 Neighbor Chassis-ID : 1c:98:ec:fe:25:02 Neighbor Management-Address : 10.1.1.4 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled : Bridge, Router Neighbor Port-ID : 1/1/1 Neighbor Port-Desc : 1/1/1 Neighbor Port VLAN ID : 120 TTL Neighbor Chassis-Name : switch Neighbor Chassis-Description : Aruba JL375A 8400X XL.01.01.0001 Neighbor Chassis-ID : 1c:98:ec:fe:25:03 Neighbor Management-Address : 10.1.1.5 Chassis Capabilities Available : Bridge, Router Chassis Capabilities Enabled 🛛 : Bridge, Router Neighbor Port-ID: 1/1/1Neighbor Port-Desc: 1/1/1 Neighbor Port VLAN ID : TTL : 120

show 11dp local-device

Syntax

show lldp local-device [vsx-peer]

Description

Shows global LLDP information advertised by the switch, as well as port-based data. If VLANs are configured on any active interfaces, the VLAN ID is only shown for trunk native or untagged VLAN IDs on access interfaces.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing global LLDP information only (all ports including OOBM port are administratively down):

Showing all ports except 1/1/11 and OOBM as administratively down:

switch# show lldp local-device

In this example, all the ports except **1/1/11** are administratively down, and VLAN ID 100 is configured on this access interface.

Cisco Discovery Protocol (CDP)

Cisco Discovery Protocol (CDP) is a proprietary layer 2 protocol supported by most Cisco devices. It is used to exchange information, such as software version, device capabilities, and voice VLAN information, between directly connected devices, such as a VoIP phone and a switch.

CDP support

By default, CDP is enabled on each active switch port. This is a read-only capability, which means the switch can receive and store information about adjacent CDP devices, but does not generate CDP packets (except when communicating with Cisco IP phones.)

The switch supports CDPv2 only and does not support SNMP MIB traps.

When a CDP-enabled port receives a CDP packet from another CDP device, it enters data for that device into the CDP Neighbors table, along with the port number on which the data was received. It does not forward the packet. The switch also periodically purges the table of any entries that have expired. (The holdtime for any data entry in the switch CDP Neighbors table is configured in the device transmitting the CDP packet and cannot be controlled in the switch receiving the packet.) A switch reviews the list of CDP neighbor entries every three seconds and purges any expired entries.

Support for legacy Cisco IP phones

Autoconfiguration of legacy Cisco IP phones for tagged voice VLAN support requires CDPv2.

On initial boot-up, and sometimes periodically, a Cisco phone queries the switch and advertises information about itself using CDPv2. When the switch receives the VoIP VLAN Query TLV (type 0x0f) from the phone, the switch immediately responds with the voice VLAN ID in a reply packet using the VoIP VLAN Reply TLV (type 0x0e). This enables the Cisco phone to boot properly and send traffic on the advertised voice VLAN ID.

The switch CDP packet includes these TLVs:

- CDP Version: 2
- CDP TTL: 180 seconds
- Checksum
- Capabilities (type 0x04): 0x0008 (is a switch)
- Native VLAN: The PVID of the port
- VoIP VLAN Reply (type 0xe): voice VLAN ID (same as advertised by LLDP-MED)
- Trust Bitmap (type 0x12): 0x00
- Untrusted port CoS (type 0x13): 0x00

CDP commands

cdp

Syntax

cdp

Description

Configures CDP support globally on all active interfaces or on a specific interface. By default, CDP is enabled on all active interfaces.

When CDP is enabled, the switch adds entries to its CDP Neighbors table for any CDP packets it receives from neighboring CDP devices.

When CDP is disabled, the CDP Neighbors table is cleared and the switch drops all inbound CDP packets without entering the data in the CDP Neighbors table.

The no form of this command disables CDP support globally on all active interfaces or on a specific interface.

Command context

config config-if

Authority

Administrators or local user group members with execution rights for this command.

Examples

Enabling CDP globally:

switch(config) # cdp

Disabling CDP globally:

switch(config) # no cdp

Enabling CDP on interface 1/1/1:

switch(config)# interface 1/1/1
switch(config-if)# cdp

Disabling CDP on interface 1/1/1:

switch(config)# interface 1/1/1
switch(config-if)# no cdp

clear cdp counters

Syntax

clear cdp counters

Description

Clears CDP counters.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Clearing CDP counters:

switch(config) clear cdp counters

clear cdp neighbor-info

Syntax

clear cdp neighbor-info

Description

Clears CDP neighbor information.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

Clearing CDP neighbor information:

```
switch(config) clear neighbor-info
```

show cdp

Syntax

show cdp

Description

Shows CDP information for all interfaces.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing CDP information:

1/1/7	Enabled
1/1/8	Enabled
1/1/9	Enabled
1/1/10	Enabled

show cdp neighbor-info

Syntax

show cdp neighbor-info <INTERFACE-ID>

Description

Shows CDP information for all neighbors or for CDP information on a specific interface.

Command context

config

Parameters

<INTERFACE-ID>

Specifies an interface. Format: member/slot/port.

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing all CDP neighbor information:

switch(co	onfig)# show cdp neig	hbor-info	
Port	Device ID	Platform	Capability
 1/1/1	mvswitch	cisco WS-C2950-12	SI

Showing CDP information for interface 1/1/1:

```
switch(config)# show cdp neighbor-info 1/1/1
Local Port : 1/1/1
MAC : 3c:a8:2a:7b:6b:2b
Device ID : SEPd4adbd2a30d6
Address : 2.71.0.230
Platform : Cisco IP Phone 3905
Duplex : full
Capability : host
Voice VLAN Support : Yes
Neighbor Port-ID : Port 1
```

show cdp traffic

Syntax

show cdp neighbor-info

Description

Shows CDP statistics for each interface.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Examples

On the 6400 Switch Series, interface identification differs.

Showing CDP traffic statistics:

witch(config)# show cdp traffic CDP Statistics				
Port	Transmitted Frames	Received Frames	Discarded Frames	
1/1/1	0	4	0	
1/1/2	0	0	0	
1/1/3	0	2	0	
1/1/4	0	0	0	
1/1/5	0	0	0	

Zero Touch Provisioning (ZTP) enables the auto-configuration of factory default switches without a network administrator onsite.

When a switch is booted from its factory default configuration, ZTP autoprovisions the switch by automatically downloading and installing a firmware file, a configuration file, or both. With ZTP, even a nontechnical user (for example: a store manager in a retail chain or a teacher in a school) can deploy devices at a site.

ZTP support

The switch supports standards-based Zero Touch Provisioning (ZTP) operations as follows:

- The switch must be running the factory default configuration.
- The switch can connect to the DHCP server from the OOBM management port.

The switch can connect to the DHCP server from either the OOBM management port, or a data port on the default VLAN.

- ZTP operations are supported over IPv4 connections only. IPv6 connections are not supported for ZTP operations.
- You must configure the DHCP server to provide a standards-based ZTP server solution. Options and features that are specific to Network Management Solution (NMS) tools, such as AirWave, are not supported.
 - Aruba Central on-premise can manage AOS-CX switches on supported models through DHCP ZTP using two approaches:

On the DHCP server, configure DHCP option-60 as "ArubaInstantAP" **<u>90</u>** and provide the value in option-43 in the format *<group-details>, <aruba-central-on-prem-ip-or-fqdn>, <shared-secret>.*

On the DHCP server, configure DHCP option-60 as HPE vendor VCI and provide the value in option-43 in the tag-length-value (TLV) format with sub-option code of 146 as the Aruba Central on-premise FQDN or IPv4 address.

Supported DHCP options are:

DHCP option	Description	
43	Vendor Specific Information	
43 suboption 144	Name of the configuration file	
43 suboption 145	Name of the firmware image file	
43 suboption 146	Aruba Central FQDN or IPv4 address	
		Table Continued

DHCP option	Description
43 suboption 148	HTTP Proxy FQDN or IPv4 address
60	Vendor Class Identifier (VCI)
66	IPv4 address of the TFTP server (Specifying a host name instead of an IP address is not supported.)
67	Name of the configuration file (Option 43 suboption 144 takes precedence over this option.)

- The configuration file is a text file or JSON file that becomes the startup and running configuration on the switch after the ZTP operation is complete. The configuration can be in CLI or in JSON format.
- When the switch is started using the factory default configuration, the ZTP operation is started automatically and is active until any running configuration of the switch is modified. There is no CLI command required to start the operation.

The switch supports the following standards:

- **<u>RFC 2131</u>**, Dynamic Host Configuration Protocol.
- **<u>RFC 2132</u>**, *DHCP Options and BOOTP Vendor Extensions*. Support is limited to the options listed in the table "Supported DHCP options for ZTP on AOS-CX."

Hewlett Packard Enterprise recommends that you implement ZTP in a secure and private environment. Any public access can compromise the security of the switch, as follows:

- ZTP is enabled only in the factory default configuration of the switch, DHCP snooping is not enabled. The Rogue DHCP server must be manually managed.
- The DHCP offer is in plain data without encryption.

Setting up ZTP on a trusted network

The following procedure is an overview of setting up a Zero Touch Provisioning (ZTP) environment to provision newly installed switches automatically. The procedure is intended for network administrators who are familiar with automatically provisioning switches in a network, and does not provide detailed information about configuring or managing switches.

Procedure

- 1. For each switch model to be provisioned using ZTP, do the following:
 - **a.** Obtain the switch firmware image file.
 - **b.** Prepare the switch configuration file. The configuration file becomes the running configuration and the startup configuration on the switch.
- **2.** Set up a TFTP server and record its IP address. The address is required when you set up the DHCP server. The switch must be able to reach the TFTP server and DHCP server, either on the same subnet, or on a remote subnet via DHCP relay.

Switches support provisioning through a network connected to a data port or through a network connected to the management port.

- **3.** Publish the configuration files and image files to the TFTP server. You need to know the locations of the files and the IP address of the TFTP server when you set up the vendor class options on the DHCP server.
- **4.** On the DHCP server, set up vendor classes for each switch model you plan to provision. To do this you need the following information:
 - The IP address of the TFTP server. Using a host name is not supported.
 - The path to the switch configuration and firmware image files on the TFTP server.
 - The vendor class identifier (VCI) for each switch model.

You can obtain the VCI by entering the show dhcp client vendor-class-identifier command from a switch CLI command prompt in the manager context. The VCI is the text string in the response that starts with Aruba.

For example:

switch# **show dhcp client vendor-class-identifier** Vendor Class Identifier: Aruba xxxxx xxxx

Where x indicates the switch model number.

5. At the installation site, provide the switch installer with a Cat6 network cable connected to the network that includes the DHCP and TFTP servers, and information about the switch port to use. The switch installer plugs the cable into the data port you specify.

The ZTP operation begins when power is applied to the switch after the network cable is installed.

6. Assuming the downloaded configuration includes a way to access the CLI of the switch, you can enter the following command to show the options offered by the DHCP server and the status of the ZTP operation:

show ztp information

ZTP process during switch boot

1. The switch boots up with the factory default configuration.

If the ZTP operation detects that the switch configuration is different from the factory default configuration, the ZTP operation ends. The switch must be configured at the installation site.

2. The switch sends out a DHCP discovery from the management port.

On switches that support ZTP operations on data ports, the switch also sends out a DHCP discovery from all data ports in the default VLAN.

The switch waits to receive DHCP options indefinitely or until the running configuration is modified. If a DHCP IP address is received but no DHCP options are received, the switch waits an additional minute before ending the ZTP operation.

On switches that support ZTP operations on data ports, DHCP options received on the management port have priority over DHCP options received on data ports:

- If DHCP options are received on the management port before being received on a data port, the switch processes those options immediately.
- If DHCP options are received on a data port, the switch waits an additional 30 seconds for options to be received on the management port. If no DHCP options are received on the management port during those 30 seconds, the switch processes the DHCP options it received on the data port.

After the ZTP operation ends, there is no automatic retry. You can either attempt to boot the switch with the factory default configuration again, configure the switch at the installation site, or use the ZTP force-provision CLI to trigger the ZTP process, ignoring the present running configuration of the switch.

- Once force-provision is enabled, new DHCP requests are sent from the switch. Disabling forceprovision does not stop the DHCP already in progress, but only changes the switch configuration status of force-provision.
- If ZTP fails while force-provision is enabled, there is no automatic retry. To retry, stop forceprovision should be disabled and re-enabled to clear the current ZTP state and send a new DHCP
 request. When stop force-provision is already enabled on the switch, re-enabling it results in no
 operation.
- If the DHCP server is configured to provide both ZTP image and configuration options and there is a non-default startup configuration present on the switch, clearing the non-default startup configuration before triggering ztp force-provision is recommended. If an image is downloaded via ZTP, the switch reboots once the image download is complete and ZTP force-provision configuration is lost, causing ZTP to enter into a failed state. ZTP force-provision will need to be enabled again to continue the process.
- 3. The DHCP server responds with an offer containing the following:
 - The IPv4 address of the TFTP server
 - One or both of the following:
 - The name of the firmware image file
 - The name of the configuration file
 - Aruba Central Location (optional)
 - HTTP Proxy Location (optional)
- **4.** If a firmware image file is offered, the ZTP operation downloads the image file from the TFTP server to the switch. If the current switch image and downloaded firmware image version do not match, then the switch boots with the downloaded image:
 - If the image upgrade fails, the switch retains its original firmware image and the ZTP operation ends with a failed status.
 - If the image upgrade succeeds, the ZTP operation is started again after the switch reboots. Because the downloaded image file matches the image file installed on the switch, the ZTP operation continues, and checks if a configuration file is offered.
- **5.** If a configuration file is offered, the ZTP operation downloads the configuration file copies the file to the startup configuration of the switch:

- If the startup configuration update fails, the switch retains its factory-default running configuration and the ZTP operation ends with a failed status.
- If the startup configuration update is successful, the startup configuration is copied to the running configuration:
 - If the copy operation fails, the ZTP operation ends with a failed status.
 - If the copy operation succeeds, the ZTP operation ends successfully.

ZTP VSF Switchover Support

ZTP status is not synced in the VSF stack. When the VSF stack is formed, configuration changes are applied on the master switch, which is then synced to standby switch. When the switchover is performed on the VSF stack, the standby becomes the new master switch.

As part of the switchover process, the ZTP daemon starts on the new master. The status of the ZTP is failed because there are configuration changes present.

ZTP commands

show ztp information

Syntax

show ztp information

Description

Shows information about Zero Touch Provisioning (ZTP) operations performed on the switch.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

When a switch configured to use ZTP is booted from a factory default configuration, the switch contacts a DHCP server, which offers options for obtaining files used to provision the switch:

- The IP address of the TFTP server
- The name of the image file
- The name of the configuration file

The show ztp information command shows the options offered by the DHCP server and the status of the ZTP operation.

The status of the ZTP operation is one of the following:

Success

The ZTP operation succeeded.

One of the following is true:

- Both the running configuration and the startup configuration were updated.
- The IP address of the TFTP server was received, but the offer did not include a configuration file or a firmware image file.
- Any combination of vendor encapsulated DHCP options are received as configured, along with the firmware image and switch configuration file.
- Only vendor encapsulated DHCP options are configured and are received accordingly.

Failed - Custom startup configuration detected

The switch was booted from a configuration that is not the factory default configuration. For example, the administrator password has been set.

Failed - Timed out while waiting to receive ZTP options

Either the switch received the DHCP IPv4 address but no ZTP options were received within 1 minute or ZTP force-provision is triggered and no ZTP options are received within 3 minutes.

Failed - Detected change in running configuration

The running configuration was modified by a user while the ZTP operation was in progress.

Failed - TFTP server unreachable

The TFTP server is not reachable at the specified IP address.

Failed - TFTP server information unavailable

The image file name or config file name is provided without the TFTP server location to fetch the files from and ZTP enters failed state.

Failed - Invalid configuration file received

Either the file transfer of the configuration file failed, or the configuration file is invalid (an error occurred while attempting to apply the configuration).

Failed - Invalid image file received

Either the file transfer of the firmware image file failed, or the firmware image file is invalid (an error occurred while verifying the image).

Examples

In the following example, the ZTP operation succeeded, and both an image file and a configuration file were provided.

```
VSF-10-Mbr# show ztp information

TFTP Server : 10.1.84.160

Image File : FL_10_06_0001CK.swi

Configuration File : 102720-new-setup-config-updated.txt

Status : Success

Aruba Central Location : NA

Force-Provision : Disabled

HTTP Proxy Location : NA

VSF-10-Mbr#
```

In the following example, the ZTP option succeeded. A configuration file was not provided, but an image file was provided.

```
VSF-10-Mbr# show ztp information

TFTP Server : 10.1.84.160

Image File : TL_10_02_0001.swi

Configuration File : NA

Status : Success

Aruba Central Location : NA

Force-Provision : Disabled

HTTP Proxy Location : NA

VSF-10-Mbr#
```

In the following example, the ZTP operation failed because the TFTP server was unreachable.

```
VSF-10-Mbr# show ztp information

TFTP Server : 10.1.84.160

Image File : TL_10_02_0001.swi

Configuration File : 102720-new-setup-config-updated.txt

Status : Failed - TFTP server unreachable

Aruba Central Location : NA

Force-Provision : Disabled

HTTP Proxy Location : NA

VSF-10-Mbr#
```

In the following example, the ZTP operation was stopped because the switch did not receive any options from the DHCP server for ZTP within 1 minute of receiving the IP address from the server.

```
VSF-10-Mbr## show ztp information

TFTP Server : NA

Image File : NA

Configuration File : NA

Status : Failed - Timed out while waiting to receive ZTP options

Aruba Central Location : NA

Force-Provision : Disabled

HTTP Proxy Location : NA

VSF-10-Mbr#
```

In the following example, the ZTP operation was stopped because the switch was booted from a configuration that was not the factory default configuration.

```
switch# show ztp information
TFTP Server : 10.0.0.2
Image File : TL_10_02_0001.swi
Configuration File : ztp.cfg
Status : Failed - Custom startup configuration detected
Aruba Central Location : NA
Force-Provision : Disabled
HTTP Proxy Location : NA
```

ztp force provision

Syntax

```
ztp force-provision
```

no ztp force-provision

Description

Starts on-demand ZTP.

Command context

Operator (>) or Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Usage

DHCP options received are processed independent of he current state of configuration on the switch. Previous ZTP TFTP Server, Image File, Configuration File, Aruba Central Location, and HTTP Proxy location options are cleared and the switch sends a DHCP request.

Examples

In the following example, force-provision is enabled.

```
switch# configure terminal
switch(config)# ztp force-provision
```

In the following example, force-provision status is checked while enabled.

```
switch# show ztp information
TFTP Server : 10.0.0.2
Image File : TL_10_02_0001.swi
Configuration File : ztp.cfg
Status : Success
Aruba Central Location : NA
Force-Provision : Enabled
HTTP Proxy Location : NA
```

In the following example, force-provision is disabled.

```
switch# configure terminal
switch(config)# no ztp force-provision
```

In the following example, force-provision status is checked while disabled.

```
switch# show ztp information
TFTP Server : 10.0.0.2
Image File : TL_10_02_0001.swi
Configuration File : ztp.cfg
Status : Success
Aruba Central Location : NA
Force-Provision : Disabled
HTTP Proxy Location : NA
```

bluetooth disable

Syntax

bluetooth disable

no bluetooth disable

Description

Disables the Bluetooth feature on the switch. The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE). Bluetooth is enabled by default.

The no form of this command enables the Bluetooth feature on the switch.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Example

Disabling Bluetooth on the switch. <*XXXX*> is the switch platform and <*NNNNNNNNN*> is the device identifier.

switch(config)# bluetooth disable
switch# show bluetooth
Enabled : No
Device name : <XXXX>-<NNNNNNNNN>

switch(config) # show running-config

bluetooth disabled

bluetooth enable

Syntax

bluetooth enable

```
no bluetooth enable
```

Description

This command enables the Bluetooth feature on the switch. The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE).

Default: Bluetooth is enabled by default.

The no form of this command disables the Bluetooth feature on the switch.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Usage

The default configuration of the Bluetooth feature is enabled. The output of the show running-config command includes Bluetooth information only if the Bluetooth feature is disabled.

The Bluetooth feature includes both Bluetooth Classic and Bluetooth Low Energy (BLE).

The Bluetooth feature requires the USB feature to be enabled. If the USB feature has been disabled, you must enable the USB feature before you can enable the Bluetooth feature.

Examples

switch(config) # bluetooth enable

clear events

Syntax

clear events

Description

Clears up event logs. Using the show events command will only display the logs generated after the clear events command.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Examples

Clearing all generated event logs:

clear ip errors

Syntax

clear ip errors

Description

Clears all IP error statistics.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Example

Clearing and showing ip errors:

```
switch# clear ip errors
switch# show ip errors
Drop reason Packets
Malformed packets 0
IP address errors 0
...
```

domain-name

Syntax

```
domain-name <NAME>
```

```
no domain-name [<NAME>]
```

Description

Specifies the domain name of the switch.

The no form of this command sets the domain name to the default, which is no domain name.

Command context

config

Parameters

<NAME>

Specifies the domain name to be assigned to the switch. The first character of the name must be a letter or a number. Length: 1 to 32 characters.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting and showing the domain name:

```
switch# show domain-name
```

```
switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#
```

Setting the domain name to the default value:

```
switch(config) # no domain-name
switch(config) # show domain-name
```

switch(config)#

hostname

Syntax

hostname <HOSTNAME>

no hostname [<HOSTNAME>]

Description

Sets the host name of the switch.

The no form of this command sets the host name to the default value, which is switch.

Command context

config

Parameters

<HOSTNAME>

Specifies the host name. The first character of the host name must be a letter or a number. Length: 1 to 32 characters. Default: switch

Authority

Administrators or local user group members with execution rights for this command.

Examples

Setting and showing the host name:

```
switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch
```

Setting the host name to the default value:

led locator

Syntax

led locator {on | off | flashing}

Description

Sets the state of the locator LED to on, off (default), or flashing.

Command context

Manager (#)

Parameters

on

Turns on the LED.

off

Turns off the LED, which is the default value.

flashing

Sets the LED to blink on and off repeatedly.

Authority

Administrators or local user group members with execution rights for this command.

Example

Setting the state of the locator LED:

switch# led locator flashing

module admin-state

Syntax

```
module <SLOT-ID> admin-state {diagnostic | down | up}
```

Not supported on the 6300 Switch Series.

Description

Sets the administrative state of the specified line module.

Command context

config

Parameters

<SLOT-ID>

Specifies the member and slot of the module. For example, to specify the module in member 1, slot 3, enter the following:

1/3

admin-state {diagnostic | down | up}

Selects the administrative state in which to put the specified module:

diagnostic

Selects the diagnostic administrative state. Network traffic does not pass through the module.

down

Selects the down administrative state. Network traffic does not pass through the module.

up

Selects the up administrative state. The line module is fully operational. The up state is the default administrative state.

Authority

Administrators or local user group members with execution rights for this command.

Example

Setting the administrative state of the module in slot 1/3 to down:

switch(config) # module 1/3 admin-state down

module product-number

Syntax

module <SLOT-ID> product-number [<PRODUCT-NUM>]

no module <SLOT-ID>

Not supported on the 6300 Switch Series.

Description

Changes the configuration of the switch to indicate that the specified member and slot number contains, or will contain, a line module.

The no form of this command removes the line module and its interfaces from the configuration. If there is a line module installed in the slot, the line module is powered off and then powered on.

Command context

config

Parameters

<SLOT-ID>

Specifies the member and slot in the form m/s, where m is the member number, and s is the slot number.

<PRODUCT-NUM>

Specifies the product number of the line module. For example: JL363A

If there is a line module installed in the slot when you execute this command, *<PRODUCT-NUM>* is optional. The switch reads the product number information from the module that is installed in the slot.

If there is no line module installed in the slot when you execute this command, *<PRODUCT-NUM>* is required.

Authority

Administrators or local user group members with execution rights for this command.

Usage

The default configuration associated with a line module slot is:

- There is no module product number or interface configuration information associated with the slot. The slot is available for the installation with any supported line module.
- The Admin State is Up (which is the default value for Admin State).

To add a line module to the configuration, you must use the module command either before or after you install the physical module.

If you execute the module command after you install a line module in an empty slot, you can omit the <*PRODUCT-NUM>* variable. The switch reads the product information from the installed module.

If the module is not installed in the slot when you execute the module command, you must specify a value for the *<PRODUCT-NUM>* variable:

• The switch validates the product number of the module against the slot number you specify to ensure that the right type of module is configured for the specified slot.

For example, the switch returns an error if you specify the product number of a line module for a slot reserved for management modules.

• You can configure the line module interfaces before the line module is installed.

When you install the physical line module in a preconfigured slot, the following actions occur:

- If a product number was specified in the command and it matches the product number of the installed module, the switch initializes the module.
- If a product number was specified in the command and the product number of the module does not match what was specified, the module device initialization fails.

The no form of the command removes the line module and its interfaces from the configuration and restores the line module slot to the default configuration.

If there is a line module installed in the slot when you execute the no form of the command, the command also powers off and then powers on the module. Traffic passing through the line module is stopped. Management sessions connected through the line module are also affected.

If the slot associated with the line module is in the default configuration, you can remove the module from the chassis without disrupting the operation of the switch.

Examples

Configuring slot 1/1 for future installation of a line module:

switch(config) # module 1/1 product-number j1363a

Configuring a line module that is already installed in slot 1/1:

switch(config) # module 1/1 product-number

Attempting to configure slot 1/1 for the future installation of a line module without specifying the product number (returned error shown):

```
switch(config)# module 1/1 product-number
Line module '1/4' is not physically available. Please provide the product
number to preconfigure the line module.
```

Removing a module from the configuration:

```
switch(config) # no module 1/1
```

This command will power cycle the specified line module and restore its default configuration. Any traffic passing through the line module will be interrupted. Management sessions connected through the line module will be affected. It might take a few minutes to complete this operation.

```
Do you want to continue (y/n)? y switch (config) #
```

mtrace

Syntax

```
mtrace <IPV4-SRC-ADDR> <IPV4-GROUP-ADDR> [lhr <IPV4-LHR-ADDR>] [ttl <HOPS>]
  [vrf <VRF-NAME>]
```

Description

Traces the specified IPv4 source and group addresses.

Command context

Manager (#)

Parameters

```
IPV4-SRC-ADDR
```

Specifies the source IPv4 address to trace.

IPV4-GROUP-ADDR

Specifies the group IPv4 address to trace.

lhr <IPV4-LHR-ADDR>

Specifies the last hop router address from which to start the trace.

ttl <HOPS>

Specifies the Time-To-Live duration in hops. Range: 1 to 255 hops. Default: 8 hops.

vrf <VRF-NAME>

Specifies the name of the VRF. If a name is not specified the default VRF will be used.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Tracing with source, group, and LHR addresses and TTL:

(switch) # mtrace 20.0.0.1 239.1.1.1 lhr 10.1.1.1 ttl 10

Type escape sequence to abort. Mtrace from 10.0.0.1 for Source 20.0.0.1 via Group 239.1.1.1 From destination(?) to source (?)... Querying ful reverse path... 0 10.0.0.1 -1 30.0.0.1 PIM 0 ms -2 40.0.0.1 PIM 2 ms -3 50.0.0.1 PIM 100 ms -4 60.0.0.1 PIM 156 ms -5 20.0.0.1 PIM 123 ms

Tracing with source and group addresses:

(switch)# mtrace 200.0.0.1 239.1.1.1

Type escape sequence to abort. Mtrace from self for Source 200.0.0.1 via Group 239.1.1.1 From destination(?) to source (?)... Querying ful reverse path... 0 10.0.0.1 -1 30.0.0.1 PIM 0 ms -2 40.0.0.1 PIM 2 ms -3 50.0.0.1 PIM 100 ms -4 60.0.0.1 PIM 156 ms -5 200.0.0.1 PIM 123 ms

show bluetooth

Syntax

show bluetooth

Description

Shows general status information about the Bluetooth wireless management feature on the switch.

Command context

Operator (>) or Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

This command shows status information about the following:

- · The USB Bluetooth adapter
- Clients connected using Bluetooth
- The switch Bluetooth feature.

The output of the show running-config command includes Bluetooth information only if the Bluetooth feature is disabled.

The device name given to the switch includes the switch serial number to uniquely identify the switch while pairing with a mobile device.

The management IP address is a private network address created for managing the switch through a Bluetooth connection.

Examples

Example output when Bluetooth is enabled but no Bluetooth adapter is connected. <*XXXX*> is the switch platform and <*NNNNNNNN*> is the device identifier.

switch# show bluetooth
Enabled : Yes
Device name : <XXXX>-<NNNNNNNN>
Adapter State : Absent

Example output when Bluetooth is enabled and there is a Bluetooth adapter connected:

Example output when Bluetooth is disabled:

switch# show bluetooth
Enabled : No
Device name : <XXXX>-<NNNNNNNNN>

show boot-history

Syntax

show boot-history [all]

Description

Shows boot information. When no parameters are specified, shows the most recent information about the boot operation, and the three previous boot operations for the active management module. When the all parameter is specified, shows the boot information for the active management module and all available line modules. To view boot-history on the standby, the command must be sent on the standby console.

Command context

Manager (#)

Parameters

all

Shows boot information for the active management module and all available line modules.

Authority

Administrators or local user group members with execution rights for this command.

Usage

This command displays the boot-index, boot-ID, and up time in seconds for the current boot. If there is a previous boot, it displays boot-index, boot-ID, reboot time (based on the time zone configured in the system) and reboot reasons. Previous boot information is displayed in reverse chronological order.

Index

The position of the boot in the history file. Range: 0 to3.

Boot ID

A unique ID for the boot . A system-generated 128-bit string.

Current Boot, up for <SECONDS> seconds

For the current boot, the show boot-history command shows the number of seconds the module has been running on the current software.

Timestamp boot reason

For previous boot operations, the show boot-history command shows the time at which the operation occurred and the reason for the boot. The reason for the boot is one of the following values:

<DAEMON-NAME> crash

The daemon identified by <DAEMON-NAME> caused the module to boot.

Kernel crash

The operating system software associated with the module caused the module to boot.

Reboot requested through database

The reboot occurred because of a request made through the CLI or other API.

Uncontrolled reboot

The reason for the reboot is not known.

Examples

Showing the boot history of the active management module:

```
switch# show boot-history
Management module
_____
Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs
Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database
Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database
Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
switch#
```

Showing the boot history of the active management module and all line modules:

```
switch# show boot-history all
Management module
_____
Index : 3
Boot ID : f1bf071bdd04492bbf8439c6e479d612
Current Boot, up for 22 hrs 12 mins 22 secs
Index : 2
Boot ID : edfa2d6598d24e989668306c4a56a06d
07 Aug 18 16:28:01 : Reboot requested through database
Index : 1
Boot ID : 0bda8d0361df4a7e8e3acdc1dba5caad
07 Aug 18 14:08:46 : Reboot requested through database
Index : 0
Boot ID : 23da2b0e26d048d7b3f4b6721b69c110
07 Aug 18 13:00:46 : Reboot requested through database
Line module 1/1
_____
Index : 3
10 Aug 17 12:45:46 : dune agent crashed
. . .
```

show capacities

Syntax

show capacities <FEATURE> [vsx-peer]

Description

Shows system capacities and their values for all features or a specific feature.

Command context

Manager (#)

Parameters

<FEATURE>

Specifies a feature. For example, aaa or vrrp.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Usage

Capacities are expressed in user-understandable terms. Thus they may not map to a specific hardware or software resource or component. They are not intended to define a feature exhaustively.

Examples

Showing all available capacities for BGP:

switch# show capacities bgp

System Capacities: Filter BGP Capacities Name	Value
Maximum number of AS numbers in as-path attribute	32

Showing all available capacities for mirroring:

switch# show capacities mirroring

System Capacities: Filter Mirroring	
Capacities Name	
 Maximum number of Mirror Sessions configurable in a system	4
Maximum number of enabled Mirror Sessions in a system	4

Showing all available capacities for MSTP:

switch# show capacities mstp

System Capacities: Filter MSTP Capacities Name	Value
Maximum number of mstp instances configurable in a system	64

Showing all available capacities for VLAN count:

switch# show capacities vlan-count

System Capacities: Filter VLAN Count Capacities Name	Value
Maximum number of VLANs supported in the system	4094

show capacities-status

Syntax

```
show capacities-status <FEATURE>
    [vsx-peer]
```

Description

Shows system capacities status and their values for all features or a specific feature.

Command context

Manager (#)

Parameters

<FEATURE>

Specifies the feature, for example aaa or vrrp for which to display capacities, values, and status. Required.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the system capacities status for all features:

switch# show capacities-status

System Capacities StatusValue MaximumCapacities Status NameValue MaximumNumber of active gateway mac addresses in a system016Number of aspath-lists configured064Number of community-lists configured064...064

Showing the system capacities status for BGP:

switch# show capacities-status bgp

System Capacit	Value	Maximum		
Number	of	aspath-lists configured	0	64
Number	of	community-lists configured	0	64
Number	of	neighbors configured across all VRFs	0	50
Number	of	peer groups configured across all VRFs	0	25
Number	of	prefix-lists configured	0	64
Number	of	route-maps configured	0	64
Number	of	routes in BGP RIB	0	256000
Number	of	route reflector clients configured across all VRFs	0	16

show core-dump

Syntax

show core-dump [all | <SLOT-ID>]

Description

Shows core dump information about the specified module. When no parameters are specified, shows only the core dumps generated in the current boot of the management module. When the all parameter is specified, shows all available core dumps.

Command context

Manager (#)

Parameters

all

Shows all available core dumps.

<SLOT-ID>

Shows the core dumps for the management module or line module in *SLOT-ID*. *SLOT-ID*. specifies a physical location on the switch. Use the format member/slot/port (for example, 1/3/1) for line modules. Use the format member/slot for management modules.

You must specify the slot ID for either the active management module, or the line module.

Authority

Administrators or local user group members with execution rights for this command.

Usage

When no parameters are specified, the show core-dump command shows only the core dumps generated in the current boot of the management module. You can use this command to determine when any crashes are occurring in the current boot.

If no core dumps have occurred, the following message is displayed: No core dumps are present

To show core dump information for the standby management module, you must use the standby command to switch to the standby management module and then execute the show core-dump command.

In the output, the meaning of the information is the following:

Daemon Name

Identifies name of the daemon for which there is dump information.

Instance ID

Identifies the specific instance of the daemon shown in the Daemon Name column.

Present

Indicates the status of the core dump:

Yes

The core dump has completed and available for copying.

In Progress

Core dump generation is in progress. Do not attempt to copy this core dump.

Timestamp

Indicates the time the daemon crash occurred. The time is the local time using the time zone configured on the switch.

Build ID

Identifies additional information about the software image associated with the daemon.

Examples

awitch# show coro-dump

Showing core dump information for the current boot of the active management module only:

Daemon Name	Instance ID) Present	Timestamp	Build ID					
hpe-fand hpe-sysmond	1399 957	Yes Yes	2017-08-04 19:05:3 2017-08-04 19:05:2	4 1246d2a 9 1246d2a					
Total number	of core dumps :	2							
Showing all core dumps:

switch# show core	-dump all			
Management Module	core-dumps			
Daemon Name	Instance ID	Present	Timestamp	Build ID
hpe-sysmond hpe-tempd hpe-tempd Line Module core-	513 1048 1052 dumps	Yes Yes Yes	2017-07-31 13:58:05 2017-08-13 13:31:53 2017-08-13 13:41:44	e70f101 e70f101 e70f101
Module : 1/1				
dune_agent_0 dune_agent_0 	18958 18842	Yes Yes	2017-08-12 11:50:17 2017-08-12 11:50:09	e70f101 e70f101
Total number of co	ore dumps : 5			

show domain-name

Syntax

show domain-name

Description

Shows the current domain name.

Command context

Manager (#)

Authority

Administrators or local user group members with execution rights for this command.

Usage

If there is no domain name configured, the CLI displays a blank line.

Example

Setting and showing the domain name:

```
switch# show domain-name
```

```
switch# config
switch(config)# domain-name example.com
switch(config)# show domain-name
example.com
switch(config)#
```

show environment fan

Syntax

show environment fan [vsf | vsx-peer]

Description

Shows the status information for all fans and fan trays (if present) in the system.

Command context

Manager (#)

Parameters

vsf

Shows output from the VSF member-id on switches that support VSF.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

For fan trays, Status is one of the following values:

ready

The fan tray is operating normally.

fault

The fan tray is in a fault event. The status of the fan tray does not indicate the status of fans.

empty

The fan tray is not installed in the system.

For fans:

Speed

Indicates the relative speed of the fan based on the nominal speed range of the fan. Values are:

Slow

The fan is running at less than 25% of its maximum speed.

Normal

The fan is running at 25-49% of its maximum speed.

Medium

The fan is running at 50-74% of its maximum speed.

Fast

The fan is running at 75-99% of its maximum speed.

Max

The fan is running at 100% of its maximum speed.

N/A

The fan is not installed.

Direction

The direction of airflow through the fan. Values are:

front-to-back

Air flows from the front of the system to the back of the system.

N/A

The fan is not installed.

Status

Fan status. Values are:

uninitialized

The fan has not completed initialization.

ok

The fan is operating normally.

fault

The fan is in a fault state.

empty

The fan is not installed.

Examples

Showing output for systems with fan trays for 6400 switch series:

```
switch# show environment fan
Fan tray information
Mbr/Tray Description
                                                            Status Serial Number Fans
_____
1/1R0X32A Aruba 6400 Fan TrayreadySG9ZKJL7JW1/2R0X32A Aruba 6400 Fan TrayreadySG9ZKJL7GL1/3R0X32A Aruba 6400 Fan TrayreadySG9ZKJL78L1/4R0X32A Aruba 6400 Fan TrayreadySG9ZKJL7GJ
                                                                                         4
                                                                                         4
                                                                                         4
                                                                                         4
Fan information
                  _____
   _____
Mbr/Tray/Fan Product Serial Number Speed Direction
                                                                         Status RPM
                Name
_____

      1/1/1
      N/A
      N/A

      1/1/2
      N/A
      N/A

      1/1/3
      N/A
      N/A

      1/1/3
      N/A
      N/A

      1/1/4
      N/A
      N/A

      1/2/1
      N/A
      N/A

      1/2/2
      N/A
      N/A

      1/2/3
      N/A
      N/A

      1/2/4
      N/A
      N/A

      1/3/1
      N/A
      N/A

      1/3/2
      N/A
      N/A

      1/3/3
      N/A
      N/A

                                             slow front-to-back ok
                                                                                    5371
                                             slow front-to-back ok 5320
                                             slow front-to-back ok
                                                                                    5328
                                             slow front-to-back ok
                                                                                    5256
                                            slow front-to-back ok
slow front-to-back ok
                                                                                    5371
                                                                                    5349
                                             slow front-to-back ok
                                                                                    5292
                                             slow front-to-back ok
                                                                                    5349
                                             slow front-to-back ok
                                                                                    5313
                                              slow front-to-back ok
                                                                                    5371
                                     slow front-to-back ok 5379
```

1/3/4	N/A	N/A	slow	front-to-back	ok	5379
1/4/1	N/A	N/A	slow	front-to-back	ok	5313
1/4/2	N/A	N/A	slow	front-to-back	ok	5299
1/4/3	N/A	N/A	slow	front-to-back	ok	5285
1/4/4	N/A	N/A	slow	front-to-back	ok	5371

Showing output for a system without a fan tray:

```
switch# show environment fan
```

```
Fan information
```

Fan	Serial Number	Speed	Direction	Status	RPM
1 2 3 4 5 6	SGXXXXXXXXXX SGXXXXXXXXXX SGXXXXXXXXXX SGXXXXXXXX	slow normal medium fast max N/A	front-to-back front-to-back front-to-back front-to-back front-to-back N/A	ok ok ok ok fault empty	6000 8000 11000 14000 16500

show environment led

Syntax

show environment led [vsf <MEMBER-ID>| vsx-peer]

Description

Shows state and status information for all the configurable LEDs in the system.

Command context

```
Operator (>) or Manager (#)
```

Parameters

```
vsf <MEMBER-ID>
```

Shows output from the specified VSF member-id on switches that support VSF.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing state and status for LED for 6300 or 6400 switch series:

switch# show environment led Mbr/Name State Status ------1/locator off ok

show environment power-consumption

Syntax

show environment power-consumption [vsx-peer]

Not supported on the 6300 Switch Series.

Description

Shows the power being consumed by each management module, line card, and fabric card subsystem, and shows power consumption for the entire chassis.

Command context

Operator (>) or Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

This command is only applicable to systems that support power consumption readings.

The power consumption values are updated once every minute.

The output of this command includes the following information:

Name

Shows the member number and slot number of the management module, line module, or fabric card module.

Туре

Shows the type of module installed at the location specified by Name.

Description

Shows the product name and brief description of the module.

Usage

Shows the instantaneous power consumption of the module. Power consumption is shown in Watts.

Module Total Power Usage

Shows the total power consumption of all the modules listed. Power consumption is shown in Watts.

Chassis Total Power Usage

Shows the total instantaneous power consumed by the entire chassis, including modules and components that do not support individual power reporting. Power consumption is shown in Watts.

Chassis Total Power Available

Shows the total amount of power, in Watts, that can be supplied to the chassis.

Chassis Total Power Allocated

Shows total power, in Watts, that is allocated to powering the chassis and its installed modules.

Chassis Total Power Unallocated

Shows the total amount of power, in Watts, that has not been allocated to powering the chassis or its installed modules. This power can be used for additional hardware you install in the chassis.

Example

Showing the power consumption for an Aruba 6400 switch:

```
switch>show environment power-consumptionPower<br/>UsageNameTypeDescriptionPower<br/>Usage1/1management-moduleROX31A 6400 Management Module18 W1/2management-module0 W1/3line-card-module0 W1/4line-card-moduleROX39A 6400 48p 1GbE CL4 PoE 4SFP56 Mod54 W1/5line-card-moduleROX39A 6400 48p 1GbE CL4 PoE 4SFP56 Mod56 W1/6line-card-moduleROX39A 6400 48p 1GbE CL4 PoE 4SFP56 Mod56 W1/7line-card-moduleROX39A 6400 48p 1GbE CL4 PoE 4SFP56 Mod51 W1/1fabric-card-moduleROX24A 6405 Chassis71 WModule Total Power Usage250 W294 WChassis Total Power Available1800 W
```

show environment power-supply

Syntax

```
show environment power-supply [vsf | vsx-peer]
```

Description

Shows status information about all power supplies in the switch.

Command context

Operator (>) or Manager (#)

Parameters

vsf

Shows output from the VSF member-id on switches that support VSF.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

The following information is provided for each power supply:

Mbr/PSU

Shows the member and slot number of the power supply.

Product Number

Shows the product number of the power supply.

Serial Number

Shows the serial number of the power supply, which uniquely identifies the power supply.

PSU Status

The status of the power supply. Values are:

ок

Power supply is operating normally.

OK*

Power supply is operating normally, but it is the only power supply in the chassis. One power supply is not sufficient to supply full power to the switch. When this value is shown, the output of the command also shows a message at the end of the displayed data.

Absent

No power supply is installed in the specified slot.

Input fault

The power supply has a fault condition on its input.

Output fault

The power supply has a fault condition on its output.

Warning

The power supply is not operating normally.

Wattage Maximum

Shows the maximum amount of wattage that the power supply can provide.

Example

Showing the output when only one power supply is installed in an Aruba 6400 switch chassis:

switch# Mbr/PSU	show envi Product Number	ronment power-supply Serial Number	PSU Status	Wattage Maximum
1/1 1/2 1/3 1/4	R0X36A N/A N/A N/A N/A	CN91KMM2H3 N/A N/A N/A N/A	OK Absent Absent Absent	3000 0 0 0

show environment rear-display-module

Syntax

show environment rear-display-module [vsx-peer]

Description

Shows information about the display module on the back of the switch (Aruba 8400 switches only).

Command context

Operator (>) or Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing the rear display module information on the back of the switch:

```
switch> show environment rear-display-module
```

```
Rear display module is ready
Description: 8400 Rear Display Mod
Full Description: 8400 Rear Display Module
Serial number: SG0000000
Part number: 5300_0272
```

show environment temperature

Syntax

```
show environment temperature [detail] [vsf | vsx-peer]
```

Description

Shows the temperature information from sensors in the switch that affect fan control.

Command context

Operator (>) or Manager (#)

Parameters

detail

Shows detailed information from each temperature sensor.

vsf

Shows output from the VSF member-id on switches that support VSF.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

Temperatures are shown in Celsius.

Valid values for status are the following:

normal

Sensor is within nominal temperature range.

min

Lowest temperature from this sensor.

max

Highest temperature from this sensor.

low_critical

Lowest threshold temperature for this sensor.

critical

Highest threshold temperature for this sensor.

fault

Fault event for this sensor.

emergency

Over temperature event for this sensor.

Examples

Showing current temperature information for a 6300 switch:

switch# show environment temperature

Temperature information

45 00 C	
45.00 C	normal normal
47.00 C 47.00 C	normal
50.00 C 45.00 C 47.00 C	normal normal normal
48.00 C 47.00 C	normal normal
49.00 C 56.25 C	normal normal
50.00 C 50.00 C 50.00 C 51.00 C 51.00 C 53.12 C	normal normal normal normal normal
	45.00 C 45.00 C 46.00 C 47.00 C 47.00 C 50.00 C 45.00 C 47.00 C 48.00 C 47.00 C 48.00 C 49.00 C 56.25 C 50.00 C 50.00 C 50.00 C 51.00 C 51.00 C 53.12 C

1/1-DDR	management-module	45.25	С	normal
1/1-Inlet-Air	management-module	24.88	С	normal
1/1-MB-IBC	management-module	45.62	С	normal
1/1-Switch-ASIC-diode	management-module	58.06	С	normal

Showing detailed temperature information for a 6300 switch:

```
switch# show environment temperature detail
```

. . .

show events

Syntax

```
show events [ -e <EVENT-ID> |
    -s {alert | crit | debug | emer | err | info | notice | warn} |
    -r | -a | -i <MEMBER/SLOT> | -n <count> |
    -m {active | standby} |
    -c {lldp | ospf | ... | } |
    -d {lldpd | hpe-fand | ... |}]
```

For 6300 switches:

```
show events [ -e <EVENT-ID> |
    -s {alert | crit | debug | emer | err | info | notice | warn} |
    -r | -a | -i <MEMBER-SLOT> | -n <count> |
    -m {master | standby} |
    -c {lldp | ospf | ... | } |
    -d {lldpd | hpe-fand | ... |}]
```

Description

Shows event logs generated by the switch modules since the last reboot.

Command context

Manager (#)

Parameters

-e <EVENT-ID>

Shows the event logs for the specified event ID. Event ID range: 101 through 99999.

-s {alert | crit | debug | emer | err | info | notice | warn}

Shows the event logs for the specified severity. Select the severity from the following list:

- alert: Displays event logs with severity alert and above.
- crit: Displays event logs with severity critical and above.
- debug: Displays event logs with all severities.
- emer: Displays event logs with severity emergency only.
- err: Displays event logs with severity error and above.
- info: Displays event logs with severity info and above.
- notice: Displays event logs with severity notice and above.
- warn: Displays event logs with severity warning and above.

-r

Shows the most recent event logs first.

-a

Shows all event logs, including those events from previous boots.

-i <MEMBER-SLOT>

Shows the event logs for the specified slot ID on a 6400 switch.

-i <MEMBER-ID>

Shows the event logs for the specified VSF member ID on a 6300 switch.

-n <count>

Displays the specified number of event logs.

-m {active | standby}

Shows the event logs for the specified management card role on an 8400 or 6400 switch. Selecting *active* displays the event log for the AMM management card role and *standby* displays event logs for the SMM management card role.

-m {master | standby}

Shows the event logs for the specified role on a 6200 or 6300 switch. Selecting *master* displays the event log for the VSF master role and *standby* displays event logs for the VSF standby role.

```
-c {lldp | ospf | ... | }
```

Shows the event logs for the specified event category. Enter show event -c for a full listing of supported categories with descriptions.

```
-d {lldpd | hpe-fand | ... |}
```

Shows the event logs for the specified process. Enter show event -d for a full listing of supported daemons with descriptions.

Authority

Auditors or Administrators or local user group members with execution rights for this command. Auditors can execute this command from the auditor context (auditor>) only.

Examples

Showing event logs:

Showing the most recent event logs first:

Showing all event logs:

switch# show events -a

show event logs 2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c 2016-12-01:12:37:31.734541|intfd|4001|INFO|AMM|1|Interface port_admin set to up for bridge_normal interface 2016-12-01:12:37:32.583256|switchd|24002|ERR|AMM|1|Failed to create VLAN 1 in Hardware

Showing event logs related to the DHCP relay agent:

switch# show events -c dhcp-relay
2016-05-31:06:26:27.363923|hpe-relay|110001|LOG_INFO|DHCP Relay Enabled
2016-05-31:07:08:51.351755|hpe-relay|110002|LOG_INFO|DHCP Relay Disabled

Showing event logs related to the DHCPv6 relay agent:

switch# show events -c dhcpv6-relay

2016-05-31:06:26:27.363923|hpe-relay|109001|LOG_INFO|DHCPv6 Relay Enabled 2016-05-31:07:08:51.351755|hpe-relay|109002|LOG_INFO|DHCPv6 Relay Disabled

Showing event logs related to IRDP:

```
switch# switch# show events -c irdp
2016-05-31:06:26:27.363923|hpe-rdiscd|111001|LOG_INFO|IRDP enabled on interface %s
2016-05-31:07:08:51.351755|hpe-rdiscd|111002|LOG_INFO|IRDP disabled on interface %s
```

Showing event logs related to LACP:

switch# show events -c lacp

show event logs

2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c

Showing event logs as per the specified management card role for a switch:

switch# show events -m master

```
show event logs
2020-04-22T05:36:13.348594+00:00 6300 lldpd[3055]: Event|109|LOG INFO|MSTR|1|Configured LLDP tx-delay to 2
2020-04-22T05:36:14.430166+00:00 6300 vrfmgrd[3053]: Event|5401|LOG INFO|MSTR|1|Created a vrf entity b1721d27-41c2-485d-9bae-2cfcbc9bd13d
2020-04-22T05:36:14.942597+00:00 6300 vrfmgrd[3053]: Event|5401|LOG_INFO|MSTR|1|Created a vrf entity 5eb532c9-5b4d-4d83-b34a-db24ae542d4e
```

Showing event logs as per the specified slot ID:

switch# show events -i 1 Event logs from current boot

2020-04-22T05:36:14.430166+00:00 6300 vrfmgrd[3053]: Event|5401|LOG_INF0|MSTR|1|Created a vrf entity b1721d27-41c2-485d-9bae-2cfcbc9bd13d 2020-04-22T05:36:14.942597+00:00 6300 vrfmgrd[3053]: Event|5401|LOG_INF0|MSTR|1|Created a vrf entity 5eb532c9-5b4d-4d83-b34a-db24ae542d4e 2020-04-22T05:36:15.886252+00:00 6300 vsfd[710]: Event|9903|LOG_INF0|MSTR|1|Master 1 boot complete

Showing event logs as per the specified process:

switch# **show events -d** *lacpd* show event logs

2016-12-01:12:37:31.733551|lacpd|15007|INFO|AMM|1|LACP system ID set to 70:72:cf:51:50:7c

Displaying the specified number of event logs:

show fabric

Syntax

show fabric [<SLOT-ID>] [vsx-peer]

Not supported on the 6300 Switch Series.

Description

Shows information about the installed fabrics.

Command context

Operator (>) or Manager (#)

Parameters

<SLOT-ID>

Specifies the member and slot of the fabric to show. For example, to show the module in member 1, slot 2, enter the following:

1/2

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

Showing all fabrics on Aruba 6400 switches that have two fabrics:

switch# show fabric

Fabric Modules

Name	Product Number	Description	Serial Number	Status
1/1	R0X25A	6410 Chassis	SG9ZKM9999	Ready
1/2	R0X25A	6410 Chassis	SG9ZKM9999	Ready

Showing all fabrics on Aruba 6400 switches that have one fabric:

switch# show fabric

Fabric Modules

Name	Product Number	Description	Serial Number	Status
1/1	R0X24A	6405 Chassis	SG9ZKM9076	Ready

Showing a single fabric module on Aruba 6400 switches:

```
switch# show fabric 1/1
```

Fabric module 1/1 is ready Admin state: Up Description: 6405 Chassis Full Description: 6405 Chassis Serial number: SG0000000 Product number: R0X24A

show hostname

Syntax

show hostname [vsx-peer]

Description

Shows the current host name.

Command context

Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Example

Setting and showing the host name:

switch# show hostname
switch
switch# config
switch(config)# hostname myswitch
myswitch(config)# show hostname
myswitch

show images

Syntax

```
show images [vsx-peer]
```

Description

Shows information about the software in the primary and secondary images.

Command context

```
Operator (>) or Manager (#)
```

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing the primary and secondary images on a 6300 switch:

```
switch(config) # show images
_____
ArubaOS-CX Primary Image
____
             _____
Version : FL.xx.xx.xxxx
Size : 722 MB
    : 2019-10-22 17:00:46 PDT
Date
SHA-256 : 4c84e49c0961fc56b5c7eab064750a333f1050212b7ce2fab587d13469d24cfa
______
ArubaOS-CX Secondary Image
_____
Version : FL.xx.xx.xxxx
Size : 722 MB
    : 2019-10-22 17:00:46 PDT
Date
SHA-256 : 4c84e49c0961fc56b5c7eab064750a333f1050212b7ce2fab587d13469d24cfa
Default Image : secondary
Management Module 1/1 (Active)
_____
Active Image : secondary
```

Service OS Version : FL.01.05.0001-internal BIOS Version : FL.01.0001

Showing the primary and secondary images on a 6400 switch:

```
switch(config) # show images
```

```
______
ArubaOS-CX Primary Image
_____
Version : FL.xx.xx.xxxQ-2710-gd4ac39f30c9
Size : 766 MB
Date : 2019-10-30 17:22:01 PDT
SHA-256 : e560ca9141f425d19024d122573c5ff730df2a9a726488212263b45ea00382cf
_____
ArubaOS-CX Secondary Image
_____
Version : FL.xx.xx.xxxx
Size : 722 MB
Date : 2019-10
     : 2019-10-21 19:36:26 PDT
SHA-256 : 657e28adc1b512217ce780e3523c37c94db3d3420231deac1ab9aaa8324dc6b9
Default Image : secondary
_____
Management Module 1/1 (Active)
_____
                   _____
Active Image : secondary
Service OS Version : FL.01.05.0001-internal
BIOS Version : FL.01.0001
```

show ip errors

Syntax

show ip errors [vsx-peer]

Description

Shows IP error statistics for packets received by the switch since the switch was last booted.

Command context

Operator (>) or Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

IP error info about received packets is collected from each active line card on the switch and is preserved during failover events. Error counts are cleared when the switch is rebooted.

Drop reasons are the following:

Malformed packet

The packet does not conform to TCP/IP protocol standards such as packet length or internet header length.

A large number of malformed packets can indicate that there are hardware malfunctions such as loose cables, network card malfunctions, or that a DOS (denial of service) attack is occurring.

IP address error

The packet has an error in the destination or source IP address. Examples of IP address errors include the following:

- The source IP address and destination IP address are the same.
- There is no destination IP address.
- The source IP address is a multicast IP address.
- The forwarding header of an IPv6 address is empty.
- There is no source IP address for an IPv6 packet.

Invalid TTLs

The TTL (time to live) value of the packet reached zero. The packet was discarded because it traversed the maximum number of hops permitted by the TTL value.

TTLs are used to prevent packets from being circulated on the network endlessly.

Example

Showing ip error statistics for packets received by the switch:

```
switch# show ip errors
Drop reason Packets
Malformed packets 1
IP address errors 10
```

show module

Syntax

```
show module [<SLOT-ID>] [vsx-peer]
```

Description

Shows information about installed line modules and management modules.

Command context

Operator (>) or Manager (#)

Parameters

<SLOT-ID>

Specifies the member and slot numbers in format member/slot. For example, to show the module in member 1, slot 3, enter 1/3.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

Identifies and shows status information about the line modules and management modules that are installed in the switch.

If you use the *SLOT-ID* parameter to specify a slot that does not have a line module installed, a message similar to the following example is displayed:

Module 1/4 is not physically present.

To show the configuration information—if any—associated with that line module slot, use the show running-configuration command.

Status is one of the following values:

Active

This module is the active management module.

Standby

This module is the standby management module.

Deinitializing

The module is being deinitialized.

Diagnostic

The module is in a state used for troubleshooting.

Down

The module is physically present but is powered down.

Empty

The module hardware is not installed in the chassis.

Failed

The module has experienced an error and failed.

Failover

This module is a fabric module or a line module, and it is in the process of connecting to the new active management module during a management module failover event.

Initializing

The module is being initialized.

Present

The module hardware is installed in the chassis.

Ready

The module is available for use.

Updating

A firmware update is being applied to the module.

Examples

Showing all installed modules (Aruba 6300 switch):

switch(config) # show module

Management Modules

Name	Product Number	Description	Serial Number	Status
1/1	JL659A	6300M 48SR5 CL6 PoE 4SFP56 Swch	ID9ZKHN090	Active (local)
Line =====	Modules			
Name	Product Number	Description	Serial Number	Status
1/1	JL659A	6300M 48SR5 CL6 PoE 4SFP56 Swch	ID9ZKHN090	Ready

Showing a line module (Aruba 6400 switch):

```
switch# show module 1/3
```

Line module 1/3 is ready Admin state: Up Description: 6400 24p 10GT 4SFP56 Mod Full Description: 6400 24-port 10GBASE-T and 4-port SFP56 Module Serial number: SG9ZKMS045 Product number: R0X42A Power priority: 128

Showing a slot that does not contain a line module:

switch(config)# show module 1/3
Module 1/3 is not physically present

show running-config

Syntax

show running-config [<FEATURE>] [all] [vsx-peer]

Description

Shows the current nondefault configuration running on the switch. No user information is displayed.

Command context

Manager (#)

Parameters

<FEATURE>

Specifies the name of a feature. For a list of feature names, enter the show running-config command, followed by a space, followed by a question mark (?). When the json parameter is used, the vsx-peer parameter is not applicable.

all

Shows all default values for the current running configuration.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the current running configuration:

```
switch> show running-config
Current configuration:
I.
!Version ArubaOS-CX 10.0X.XXXX
1
lldp enable
linecard-module LC1 part-number JL363A
vrf green
1
1
1
!
!
!
aaa authentication login default local
aaa authorization commands default none
1
1
1
router ospf 1 vrf green
   area 0.0.0.0
router pim vrf green
   enable
   rp-address 30.0.0.4
vlan 1
   no shutdown
vlan 20
   no shutdown
vlan 30
   no shutdown
interface 1/1/1
   no shutdown
   no routing
  vlan access 30
```

```
interface 1/1/32
   no shutdown
   no routing
   vlan access 20
interface bridge normal-1
    no shutdown
interface bridge normal-2
   no shutdown
interface vlan20
   no shutdown
   vrf attach green
    ip address 20.0.0.44/24
    ip ospf 1 area 0.0.0.0
    ip pim-sparse enable
interface vlan30
   no shutdown
    vrf attach green
   ip address 30.0.0.44/24
    ip ospf 1 area 0.0.0.0
   ip pim-sparse enable
    ip pim-sparse hello-interval 100
```

Showing the current running configuration in json format:

```
switch> show running-config json
Running-configuration in JSON:
    "Monitoring_Policy_Script": {
         "system resource monitor mm1.1.0": {
             "Monitoring_Policy_Instance": {
                 "system resource monitor mm1.1.0/system resource monitor mm1.1.0.default": {
                      "name": "system resource monitor mm1.1.0.default",
                      "origin": "system",
                      "parameters values": {
                          "long_term_high_threshold": "70",
                          "long_term_normal_threshold": "60",
                          "long_term_time_period": "480",
                          "medium_term_high threshold": "80"
                          "medium_term_normal_threshold": "60",
                          "medium_term_time_period": "120",
                          "short_term_high_threshold": "90",
"short_term_normal_threshold": "80",
                          "short_term_time_period": "5"
                      }
                 }
             },
. . .
. . .
. . .
. . .
```

Show the current running configuration without default values:

```
switch(config)# show running-config
Current configuration:
!
!Version ArubaOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
!
!
```

```
!
!
1
vlan 1
switch(config) # show running-config all
Current configuration:
!Version ArubaOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
1
!
!
!
1
1
1
vlan 1
switch(config)#
```

Show the current running configuration with default values:

```
switch(config)# snmp-server vrf mgmt
switch(config) # show running-config
Current configuration:
!Version ArubaOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
I.
1
1
snmp-server vrf mgmt
1
!
1
1
vlan 1
switch(config)#
switch(config)#
switch(config)# show running-config all
Current configuration:
!Version ArubaOS-CX Virtual.10.04.0000-6523-gbb15c03~dirty
led locator on
!
!
1
snmp-server vrf mgmt
snmp-server agent-port 161
snmp-server community public
1
!
!
1
1
vlan 1
switch(config)#
```

show running-config current-context

Syntax

show running-config current-context

Description

Shows the current non-default configuration running on the switch in the current command context.

Command context

config or a child of config. See Usage.

Authority

Administrators or local user group members with execution rights for this command.

Usage

You can enter this command from the following configuration contexts:

• Any child of the global configuration (config) context. If the child context has instances—such as interfaces—you can enter the command in the context of a specific instance.

Support for this command is provided for one level below the config context. For example, entering this command for a child of the config context not supported.

If you enter the command on a child of the config context, the current configuration of that context and the children of that context are displayed.

• The global configuration (config) context.

If you enter this command in the global configuration (config) context, it shows the running configuration of the entire switch. Use the show running-configuration command instead.

Examples

On the 6400 Switch Series, interface identification differs.

Showing the running configuration for the current interface:

```
switch(config-if)# show running-config current-context
interface 1/1/1
    vsx-sync qos vlans
    no shutdown
    description Example interface
vlan access 1
    exit
```

Showing the current running configuration for the management interface:

```
switch(config-if-mgmt)# show running-config current-context
interface mgmt
    no shutdown
    ip static 10.0.0.1/24
    default-gateway 10.0.0.8
    nameserver 10.0.0.1
```

Showing the running configuration for the external storage share named nasfiles:

```
switch(config-external-storage-nasfiles)# show running-config current-context
external-storage nasfiles
   address 192.168.0.1
   vrf default
   username nasuser
   password ciphertext AQBapalKj+XMsZumHEwIc9OR6YcOw5Z6Bh9rV+9ZtKDKzvbaBAAAAB1CTrM=
   type scp
   directory /home/nas
   enable
switch(config-external-storage-nasfiles)#
```

Showing the running configuration for a context that does not have instances:

show startup-config

Syntax

```
show startup-config [json]
```

Description

Shows the contents of the startup configuration.



NOTE: Switches in the factory-default configuration do not have a startup configuration to display.

Command context

Manager (#)

Parameters

json

Display output in JSON format.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing the startup-configuration in non-JSON format for a 6300 switch:

```
switch(config)# show startup-config
Startup configuration:
!
!Version ArubaOS-CX FL.xx.xx.xxx
!export-password: default
hostname BLDG01-F1
user admin group administrators password ciphertext
AQBapW1812ZunZ43NE/8KlbQ7zYC4gTT6uSFYi6n6wyY9PdBYgAAACONCR/3+AcNvzRBch0DoG7W9z84LpJA+6C9SKfNwCqi5/
nUPk/ZOvN91/EQXvPNkHtBtQWyY2qfkebbEH78VWRHfWZjApv4II9qmQfxpA79wEvzshdzZmuAKrm
user ateam group administrators password ciphertext
AQBapcPqMXoF+H10NKrqAedXLvlSRwf4wUEL22hXGD6ZBhicYgAAAGsbh70DKg1u+ZelwxgmDXjkGO3bseYiR3LKQg66vrfrqR/
M3oLlliPdZDnq9XMMvCL+7jBbYhYes8+uDxuSTh8kdkd/qj3lo5FUuC5fENgCjU0YI117qtU+YEnsj
!
```

```
1
1
radius-server host 10.10.10.15
radius dyn-authorization enable
ssh server vrf default
ssh server vrf mgmt
router ospf 1
  router-id 1.63.63.1
   area 0.0.0.0
vlan 1
vlan 66
  name vlan66
vlan 67
   name vlan67
vlan 999
   name vlan999
vlan 4000
spanning-tree
interface mgmt
   no shutdown
    ip static 10.6.9.15/24
 default-gateway 10.6.9.1
```

Showing the startup-configuration in JSON format:

```
switch# show startup-config json
Startup configuration:
{
    "AAA_Server_Group": {
        "local": {
            "group_name": "local"
        },
        "none": {
              "group_name": "none"
        }
    },
```

show system

Syntax

show system [vsx-peer]

Description

Shows general status information about the system.

Command context

```
Operator (>) or Manager (#)
```

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

CPU utilization represents the average utilization across all the CPU cores.

System Contact, System Location, and System Description can be set with the snmp-server command.

Examples

Showing system information on a 6300 switch:

```
switch(config)# show system
Hostname : switch
System Description : FL.10.xx.xxxx
System Contact :
System Location :
Vendor : Aruba
Product Name : JL659A 6300M 48SR5 CL6 PoE 4SFP56 Swch
Chassis Serial Nbr : ID9ZKHN090
Base MAC Address : 9020c2-245080
ArubaOS-CX Version : FL.10.xx.xxxx
Time Zone : UTC
Up Time : 5 days, 15 hours, 33 minutes
CPU Util (%) : 21
Memory Usage (%) : 19
```

Showing system information om a 6400 switch:

```
switch(config)# show system
Hostname : switch
System Description : FL.10.xx.xxxxx
System Contact :
System Location :
Vendor : Aruba
Product Name : R0X24A 6405 Chassis
Chassis Serial Nbr : SG9ZKM7206
Base MAC Address : 9020c2-dc4700
ArubaOS-CX Version : FL.10.xx.xxxxx
Time Zone : UTC
Up Time : 32 minutes
CPU Util (%) : 3
Memory Usage (%) : 10
BLDG02-F3(config)#
```

show system error-counter-monitor

Syntax

show system error-counter-monitor {basic <PORT-NUM> | extended} [vsx-peer]

Description

Shows error counter statistics.

Command context

Manager (#)

Parameters

basic <PORT-NUM>

Specifies a physical port on the switch. Use the format member/slot/port (for example, 1/3/1).

extended

Shows statistics for all interfaces.

Command context

Manager (#)

Examples

Showing error counter statistics for interface 1/1/1:

switch# show system error-counter-monitor basic 1/1/1

Interface error counter statistics for 1/1/1

Error Counter	Value
EtherStatsOversizePkts	983
EtherStatsUndersizePkts	1024
EtherStatsJabbers	10
Dot3StatsAlignmentErrors	462
Dot3StatsFCSErrors	321
Dot3StatsLateCollisions	2024
EtherStatsFragments	121
Dot3StatsExcessiveCollisions	1025
IfInBroadcastPkts	2001

Showing error counter statistics for all interfaces:

switch# show system error-counter-monitor extended

Interface error counter statistics for 1/1/1

Error Counter	Value
EtherStatsOversizePkts	983
EtherStatsUndersizePkts	1024
EtherStatsJabbers	10
Dot3StatsAlignmentErrors	462
Dot3StatsFCSErrors	321
Dot3StatsLateCollisions	2024
EtherStatsFragments	121
Dot3StatsExcessiveCollisions	1025
IfInBroadcastPkts	2001
 Interface error counter statistics	for 1/8/32
Error Counter	Value

show system resource-utilization

0

Syntax

```
show system resource-utilization [daemon <DAEMON-NAME> | module <SLOT-ID>] [vsx-peer]
```

Description

Shows information about the usage of system resources such as CPU, memory, and open file descriptors.

Command context

Manager (#)

Parameters

daemon <DAEMON-NAME>

Shows the filtered resource utilization data for the process specified by *<DAEMON-NAME>* only.



NOTE: For a list of daemons that log events, enter show events -d ? from a switch prompt in the manager (#) context.

module <SLOT-ID>

Shows the filtered resource utilization data for the line module specified by *<SLOT-ID>* only.

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Administrators or local user group members with execution rights for this command.

Examples

Showing all system resource utilization data:

<pre>switch# show system System Resources: Processes: 70 CPU usage(%): 20 Memory usage(%): 25 Open FD's: 1024</pre>	resource-utilization		
Process	CPU Usage(%)	Memory Usage(%)	Open FD's
pmd hpe-sysmond hpe-mgmdd 	2 1 0	1 2 1	14 11 5

Showing the resource utilization data for the pmd process:

switch#	show	system	resc	urce-ut	cilization	daem	on pmd			
Process			CPU	Usage	Men	nory	Usage	Open	FD's	3

 bmq	2	1	14
<u>1</u> +-			

Showing resource utilization data when system resource utilization polling is disabled:

switch# show system resource-utilization
System resource utilization data poll is currently disabled

Showing resource utilization data for a line module:

```
switch# show system resource-utilization module 1/1
System Resource utilization for line card module: 1/1
CPU usage(%): 0
Memory usage(%): 35
Open FD's: 512
```

show tech

Syntax

show tech [basic | <FEATURE>] [local-file]

Description

Shows detailed information about switch features by automatically running the show commands associated with the feature. If no parameters are specified, the show tech command shows information about all switch features. Technical support personnel use the output from this command for troubleshooting.

Command context

Manager (#)

Parameters

basic

Specifies showing a basic set of information.

<FEATURE>

Specifies the name of a feature. For a list of feature names, enter the show tech command, followed by a space, followed by a question mark (?).

local-file

Shows the output of the show tech command to a local text file.

Authority

Administrators or local user group members with execution rights for this command.

Usage

To terminate the output of the show tech command, enter Ctrl+C.

If the command was not terminated with **Ctrl+C**, at the end of the output, the show tech command shows the following:

- The time consumed to execute the command.
- The list of failed show commands, if any.

To get a copy of the local text file content created with the show tech command that is used with the local-file parameter, use the copy show-tech local-file command.

Example

Showing the basic set of system information:

```
switch# show tech basic
Show Tech executed on Wed Sep 6 16:50:37 2017
[Begin] Feature basic
______
Command : show core-dump all
no core dumps are present
[End] Feature basic
______
1 show tech command failed
Failed command:
1. show boot-history
______
Show tech took 3.000000 seconds for execution
```

Directing the output of the **show tech basic** command to the local text file:

```
switch# show tech basic local-file
Show Tech output stored in local-file. Please use 'copy show-tech local-file'
to copy-out this file.
```

show usb

Syntax show usb

Description

Shows the USB port configuration and mount settings.

Command context

Operator (>) or Manager (#)

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Examples

If USB has not been enabled:

switch> **show usb** Enabled: No Mounted: No

If USB has been enabled, but no device has been mounted:

switch> **show usb** Enabled: Yes Mounted: No

If USB has been enabled and a device mounted:

switch> **show usb** Enabled: Yes Mounted: Yes

show usb file-system

Syntax

show usb file-system [<PATH>]

Description

Shows directory listings for a mounted USB device. When entered without the <PATH> parameter the top level directory tree is shown.

Command context

Operator (>) or Manager (#)

Parameters

<PATH>

Specifies the file path to show. A leading "/" in the path is optional.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Usage

Adding a leading "/" as the first character of the <PATH> parameter is optional.

Attempting to enter '..' as any part of the *PATH*> will generate an invalid path argument error. Only fullyqualified path names are supported.

Examples

Showing the top level directory tree:

```
switch# show usb file-system
/mnt/usb:
'System Volume Information' dir1'
/mnt/usb/System Volume Information':
IndexerVolumeGuid WPSettings.dat
/mnt/usb/dir1:
dir2 test1
/mnt/usb/dir1/dir2:
test2
```

Showing available path options from the top level:

```
switch# show usb file-system /
total 64
drwxrwxrwx 2 32768 Jan 22 16:27 'System Volume Information'
drwxrwxrwx 3 32768 Mar 5 15:26 dir1
```

Showing the contents of a specific folder:

```
switch# show usb file-system /dir1
total 32
drwxrwxrwx 2 32768 Mar 5 15:26 dir2
-rwxrwxrwx 1 0 Feb 5 18:08 test1
switch# show usb file-system dir1/dir2
total 0
-rwxrwxrwx 1 0 Feb 6 05:35 test2
```

Attempting to enter an invalid character in the path:

```
switch# show usb file-system dir1/../..
Invalid path argument
```

show version

Syntax

```
show version [vsx-peer]
```

Description

Shows version information about the network operating system software, service operating system software, and BIOS.

Command context

```
Operator (>) or Manager (#)
```

Parameters

[vsx-peer]

Shows the output from the VSX peer switch. If the switches do not have the VSX configuration or the ISL is down, the output from the VSX peer switch is not displayed. This parameter is available on switches that support VSX.

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing version information for a 6300 switch:

system resource-utilization poll-interval

Syntax

system resource-utilization poll-interval <SECONDS>

Description

Configures the polling interval for system resource information collection and recording such as CPU and memory usage.

Command context

config

Parameters

<SECONDS>

Specifies the poll interval in seconds. Range: 10-3600. Default: 10.

Authority

Administrators or local user group members with execution rights for this command.

Example

Configuring the system resource utilization poll interval:

switch(config) # system resource-utilization poll-interval 20

top cpu

Syntax

top cpu

Description

Shows CPU utilization information.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing top CPU information:

```
switch# top cpu
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap: 0 total, 0 free, 0 used, 2859196 avail Mem
PID USER PRI NI VIRT RES SHR S %CPU %MEM TIME+ COMMAND
...
```

top memory

Syntax

top memory

Description

Shows memory utilization information.

Command context

Manager (#)

Authority

Operators or Administrators or local user group members with execution rights for this command. Operators can execute this command from the operator context (>) only.

Example

Showing top memory:

```
switch> top memory
top - 09:42:55 up 3 min, 3 users, load average: 3.44, 3.78, 1.70
Tasks: 76 total, 2 running, 74 sleeping, 0 stopped, 0 zombie
%Cpu(s): 31.4 us, 32.7 sy, 0.5 ni, 34.4 id, 04. wa, 0.0 hi, 0.6 si, 0.0 st
KiB Mem : 4046496 total, 2487508 free, 897040 used, 661948 buff/cache
KiB Swap: 0 total, 0 free, 0 used, 2859196 avail Mem
PID USER PRI NI VIRT RES SHR S %CPU %MEM TIME+ COMMAND
...
```

usb

Syntax

usb

no usb

Description

Enables the USB ports on the switch. This setting is persistent across switch reboots and management module failovers. Both active and standby management modules are affected by this setting.

The no form of this command disables the USB ports.

Command context

config

Authority

Administrators or local user group members with execution rights for this command.

Example

Enabling USB ports:

switch(config) # usb

Disabling USB ports when a USB drive is mounted:

switch(config)# no usb

usb mount | unmount

Syntax

usb {mount | unmount}

Description

Enables or disables the inserted USB drive.

Command context

Manager (#)

Parameters

mount

Enables the inserted USB drive.

unmount

Disables the inserted USB drive in preparation for removal.

Authority

Administrators or local user group members with execution rights for this command.

Usage

If USB has been enabled in the configuration, the USB port on the active management module is available for mounting a USB drive. The USB port on the standby management module is not available.

An inserted USB drive must be mounted each time the switch boots or fails over to a different management module.

A USB drive must be unmounted before removal.

The supported USB file systems are FAT16 and FAT32.

Examples

Mounting a USB drive in the USB port:

switch# usb mount

Unmounting a USB drive:

switch# usb unmount
Accessing Aruba Support

Aruba Support Services	https://www.arubanetworks.com/support-services/
Aruba Support Portal	https://asp.arubanetworks.com/
North America telephone	1-800-943-4526 (US & Canada Toll-Free Number)
	+1-408-754-1200 (Primary - Toll Number)
	+1-650-385-6582 (Backup - Toll Number - Use only when all other numbers are not working)
International telephone	https://www.arubanetworks.com/support-services/contact- support/

Be sure to collect the following information before contacting Support:

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

Other useful sites

Other websites that can be used to find information:

Airheads social forums and Knowledge Base	https://community.arubanetworks.com/
Software licensing	https://lms.arubanetworks.com/
End-of-Life information	https://www.arubanetworks.com/support-services/end-of-life/
Aruba software and documentation	https://asp.arubanetworks.com/downloads

Accessing updates

To download product updates:

Aruba Support Portal

https://asp.arubanetworks.com/downloads

If you are unable to find your product in the Aruba Support Portal, you may need to search My Networking, where older networking products can be found:

My Networking

https://www.hpe.com/networking/support

To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

https://support.hpe.com/portal/site/hpsc/aae/home/



IMPORTANT: Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HP Passport set up with relevant entitlements.

Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

To subscribe to eNewsletters and alerts:

<u>https://asp.arubanetworks.com/notifications/subscriptions</u> (requires an active Aruba Support Portal (ASP) account to manage subscriptions). Security notices are viewable without an ASP account.

Warranty information

To view warranty information for your product, go to <u>https://www.arubanetworks.com/support-</u> services/product-warranties/.

Regulatory information

To view the regulatory information for your product, view the *Safety and Compliance Information for Server*, *Storage, Power, Networking, and Rack Products*, available at <u>https://www.hpe.com/support/Safety-</u> <u>Compliance-EnterpriseProducts</u>

Additional regulatory information

Aruba is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements, environmental data (company programs, product recycling, energy efficiency), and safety information and compliance data, (RoHS and WEEE). For more information, see <u>https://www.arubanetworks.com/company/about-us/environmental-citizenship/</u>.

Documentation feedback

Aruba is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (**docsfeedbackswitching@hpe.com**). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.